


# INTELLIGENT VALVE CONTROLLER

**ND7000H**

**ND9000H, ND9000F, ND9000P**

**Rev. 4.0**

Installation, Maintenance and  
Operating Instructions

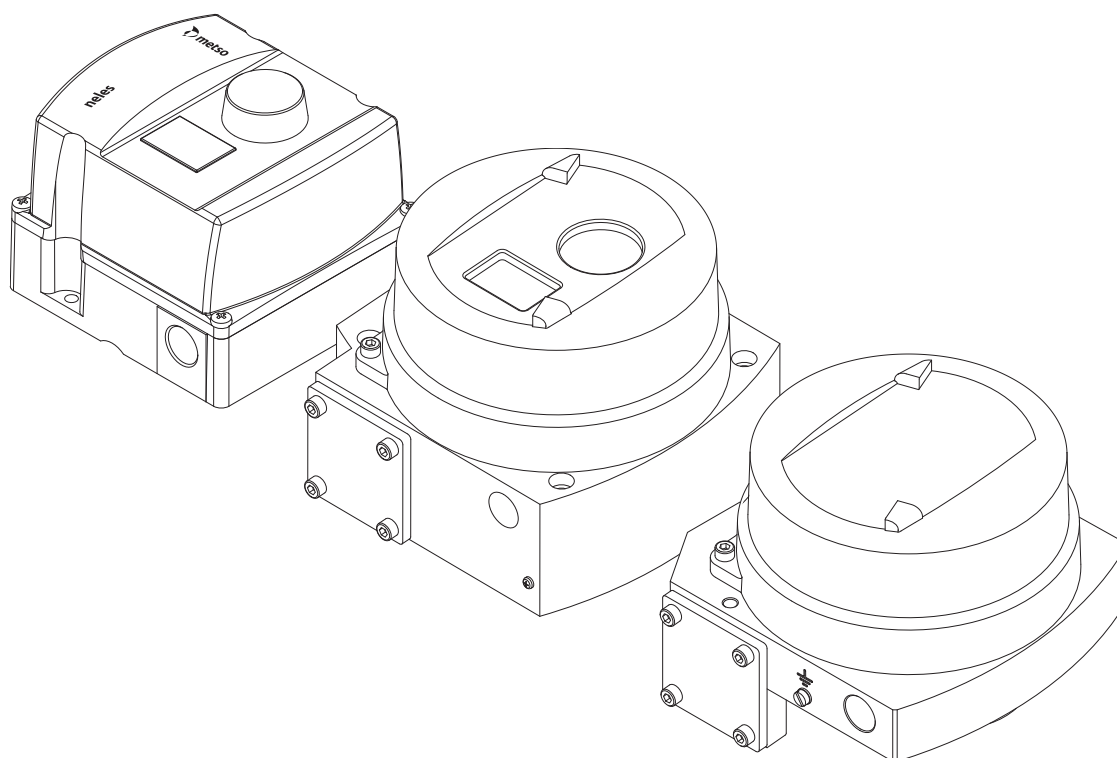

## Table of Contents

|          |                                                                                                            |           |
|----------|------------------------------------------------------------------------------------------------------------|-----------|
| <b>1</b> | <b>PRODUCT FAMILY SUMMARY .....</b>                                                                        | <b>3</b>  |
| 1.1      | ND9000 .....                                                                                               | 3         |
| 1.2      | ND7000 .....                                                                                               | 4         |
| <b>2</b> | <b>ND9000 AND ND7000 INTELLIGENT VALVE<br/>CONTROLLER WITH DIFFERENT<br/>COMMUNICATION PROTOCOLS .....</b> | <b>4</b>  |
| 2.1      | General.....                                                                                               | 4         |
| 2.2      | Technical description.....                                                                                 | 4         |
| 2.3      | Markings.....                                                                                              | 5         |
| 2.4      | Technical specifications.....                                                                              | 5         |
| 2.5      | Recycling and disposal.....                                                                                | 9         |
| 2.6      | Safety precautions .....                                                                                   | 9         |
| <b>3</b> | <b>TRANSPORTATION, RECEPTION AND<br/>STORAGE .....</b>                                                     | <b>10</b> |
| <b>4</b> | <b>MOUNTING .....</b>                                                                                      | <b>10</b> |
| 4.1      | General .....                                                                                              | 10        |
| 4.2      | Mounting on EC and EJ actuators .....                                                                      | 10        |
| 4.3      | Mounting on Metso actuators<br>with VDI/VDE mounting face.....                                             | 11        |
| 4.4      | Mounting on linear actuator of<br>nelesCV Globe1 .....                                                     | 2         |
| 4.5      | Mounting on linear actuator with<br>IEC 60534 mounting face .....                                          | 12        |
| 4.6      | Piping .....                                                                                               | 14        |
| 4.7      | Electrical connections.....                                                                                | 18        |
| <b>5</b> | <b>LOCAL USER INTERFACE (LUI).....</b>                                                                     | <b>23</b> |
| 5.1      | Measurement monitoring.....                                                                                | 23        |
| 5.2      | Guided start-up.....                                                                                       | 24        |
| 5.3      | Configuration menu.....                                                                                    | 24        |
| 5.4      | Mode menu .....                                                                                            | 24        |
| 5.5      | Configuration parameters .....                                                                             | 26        |
| 5.6      | Valve travel calibration.....                                                                              | 28        |
| 5.7      | Special displays.....                                                                                      | 30        |
| 5.8      | Write protection .....                                                                                     | 31        |
| <b>6</b> | <b>MAINTENANCE .....</b>                                                                                   | <b>32</b> |
| 6.1      | Prestage.....                                                                                              | 32        |
| 6.2      | Spool valve .....                                                                                          | 32        |
| 6.3      | Flame arrestor assembly.....                                                                               | 33        |
| 6.4      | Diaphragms.....                                                                                            | 33        |
| 6.5      | Communication board.....                                                                                   | 33        |
| <b>7</b> | <b>ERROR MESSAGES.....</b>                                                                                 | <b>34</b> |
| 7.1      | Failsafe errors.....                                                                                       | 34        |
| 7.2      | Alarms .....                                                                                               | 34        |
| 7.3      | Errors.....                                                                                                | 34        |
| 7.4      | Warnings .....                                                                                             | 35        |
| 7.5      | Notifications .....                                                                                        | 36        |

|           |                                                                                                                                |           |
|-----------|--------------------------------------------------------------------------------------------------------------------------------|-----------|
| <b>8</b>  | <b>TROUBLE SHOOTING.....</b>                                                                                                   | <b>36</b> |
| <b>9</b>  | <b>ND9000 WITH LIMIT SWITCHES .....</b>                                                                                        | <b>37</b> |
| 9.1       | Introduction.....                                                                                                              | 37        |
| 9.2       | Installation on a valve controller.....                                                                                        | 40        |
| 9.3       | Electrical connections .....                                                                                                   | 41        |
| 9.4       | Adjustment .....                                                                                                               | 41        |
| 9.5       | Removal of the limit switches for accessing<br>the valve controller .....                                                      | 41        |
| 9.6       | Circuit diagrams .....                                                                                                         | 41        |
| 9.7       | Maintenance.....                                                                                                               | 41        |
| <b>10</b> | <b>TOOLS.....</b>                                                                                                              | <b>41</b> |
| <b>11</b> | <b>ORDERING SPARE PARTS .....</b>                                                                                              | <b>41</b> |
| <b>12</b> | <b>DRAWINGS AND PARTS LISTS .....</b>                                                                                          | <b>42</b> |
| 12.1      | Exploded view ND9100, ND9400,<br>ND7100.....                                                                                   | 42        |
| 12.2      | Exploded view ND9100_/D_, ND9100_/I_,<br>ND9100_/K0_ and ND9100_/B06 .....                                                     | 43        |
| 12.3      | Exploded view ND9200, ND9300,<br>ND7200 .....                                                                                  | 44        |
| 12.4      | Exploded view ND9200_/D_, ND9200_/I_,<br>ND9200_/K0_, ND9200_/B06, ND9300_/D_,<br>ND9300_/I_, ND9300_/K0_,<br>ND9300_/B06..... | 46        |
| 12.5      | Mounting parts for EC05-14/EJ05-14<br>actuators, rising signal opens valve .....                                               | 48        |
| 12.6      | Mounting parts for B1C/B1J 6-20<br>actuators .....                                                                             | 49        |
| 12.7      | Mounting parts for B1C/B1J 25-50, B1C 502<br>and B1J322 actuators .....                                                        | 50        |
| 12.8      | Mounting parts for Quadra-Powr®<br>actuators .....                                                                             | 51        |
| 12.9      | Mounting parts for linear actuators of<br>nelesCV Globe.....                                                                   | 52        |
| 12.10     | Mounting parts for linear actuators,<br>IEC 60534 .....                                                                        | 3         |
| 12.11     | Connection diagrams.....                                                                                                       | 55        |
| <b>13</b> | <b>DIMENSIONS .....</b>                                                                                                        | <b>60</b> |
| <b>14</b> | <b>EC DECLARATION OF CONFORMITY .....</b>                                                                                      | <b>62</b> |
| <b>15</b> | <b>ID PLATES.....</b>                                                                                                          | <b>63</b> |
| <b>16</b> | <b>TYPE CODING.....</b>                                                                                                        | <b>64</b> |

### READ THESE INSTRUCTIONS FIRST!

These instructions provide information about the safe handling and operation of the intelligent valve controller. If you require additional assistance, please contact the manufacturer or manufacturer's representative. Addresses and phone numbers are printed on the back cover. See also [www.metso.com/valves](http://www.metso.com/valves) for the latest documentation.

### SAVE THESE INSTRUCTIONS!

Subject to change without notice.

All trademarks are property of their respective owners.

## 1 PRODUCT FAMILY SUMMARY

### 1.1 ND9000

#### 1.1.1 Key features

- ☐ Benchmark control performance on rotary and linear valves
- ☐ Reliable and robust design
- ☐ Ease of use
- ☐ Language selection: English, German and French
- ☐ Local / remote operation
- ☐ Expandable architecture
- ☐ Advanced device diagnostics including
  - ☐ Self-diagnostics
    - Online diagnostics
    - Performance diagnostics
    - Communication diagnostics
    - Extended off-line tests
    - Performance view
    - Online Valve Signature

#### 1.1.2 Options

- ☐ Interchangeable communication options:
  - ☐ HART 6 or 7 (H)
  - ☐ FOUNDATION fieldbus (F)
  - ☐ Profibus PA (P)
- ☐ Limit switches
- ☐ Position transmitter (in HART only)
- ☐ Stainless steel housing
- ☐ Exhaust adapter
- ☐ Remote mounting
- ☐ Cold version (up to -53 °C)

#### 1.1.3 Total cost of ownership

- ☐ Low energy and air consumption
- ☐ Future proof design allows further options at a reduced cost
- ☐ Optimised spares program. Reduced number of spares
- ☐ Retro-fit to existing installations (Neles or 3rd party)

#### 1.1.4 Minimised process variability

- ☐ Linearisation of the valve flow characteristics
- ☐ Excellent dynamic and static control performance
- ☐ High-speed of response
- ☐ Accurate internal measurements

#### 1.1.5 Easy installation and configuration

- ☐ Same unit for linear and rotary valves, double and single-acting actuators
- ☐ Simple calibration and configuration
  - ☐ using Local User Interface (H, F, P)
  - ☐ using FieldCare software in a remote location (H, F)
  - ☐ using Profibus configurator, such as Fieldcare or Simatic PDM (P)
- ☐ Low power design enables installation to all common control systems
- ☐ Ability to attach options to electronics and mechanics later
- ☐ Possibility to mount also on valves that are in process with 1-point calibration feature

#### 1.1.6 Open solution

Metso is committed to delivering products that freely interface with software and hardware from a variety of manufac-

turers; and the ND9000 is no exception. This open architecture allows the ND9000 to be integrated with other field devices to give an unprecedented level of controllability.

- ☐ FDT based and DD/eDD multi-vendor support configuration files from download page:  
[www.metso.com/valves](http://www.metso.com/valves)

#### 1.1.7 ND9000 in fieldbus networks

- ☐ Approved interoperability
  - ☐ Host interoperability ensured
  - ☐ FOUNDATION fieldbus ITK version 6.1.2 certified
  - ☐ Profibus PA profile version 3.0 PNO certified
- ☐ Easy to upgrade; can be done by replacing the HART communication board to fieldbus communication board
- ☐ Excellent maintainability with firmware download feature
- ☐ Advanced communication diagnostics
- ☐ Digital communication via the fieldbus includes not only the set point, but also the position feedback signal from the position sensor. No special supplementary modules for analog or digital position feedback are needed when using the fieldbus valve controller.
- ☐ Back up LAS functionality available in FOUNDATION fieldbus environment
- ☐ Input selector and output splitter blocks available in FOUNDATION fieldbus devices allowing advanced distributed control
- ☐ Multipurpose functionality
  - ☐ Standard function blocks enables the freedom to use ND9000 intelligent valve controller either in continuous or on-off control applications
  - ☐ Open and close information directly available via the fieldbus
  - ☐ Open and close detection is based on either position measurement (soft limit switch) or mechanical limit switch information

#### 1.1.8 Product reliability

- ☐ Designed to operate in harsh environmental conditions
  - ☐ Rugged modular design
  - ☐ Excellent temperature characteristics
  - ☐ Vibration and impact tolerant
  - ☐ IP66 enclosure
  - ☐ Protected against humidity
- ☐ Maintenance free operation
  - ☐ Resistant to dirty air
  - ☐ Wear resistant and sealed components
  - ☐ Contactless position measurement

#### 1.1.9 Predictive maintenance

- ☐ Easy access to collected data with FieldCare software
  - ☐ Unique Online Valve Signature to detect valve friction even more accurately.
  - ☐ Performance view with report, which gives guidelines for recommended actions.
  - ☐ Logical trend and histogram collection
  - ☐ Information collected on service conditions
  - ☐ Extensive set of off-line tests with accurate key figure calculations
  - ☐ Fast notifications using on-line alarms
  - ☐ Condition monitoring tool available
  - ☐ Real time monitoring of valve control parameters

## 1.2 ND7000

### 1.2.1 Key features

- ☐ Benchmark control performance on rotary and linear valves
- ☐ Reliable and robust design
- ☐ Ease of use
- ☐ Language selection: English, German and French
- ☐ Local / remote operation
- ☐ Expandable architecture
- ☐ Basic diagnostics including
  - ☐ Self-diagnostics
  - ☐ Online diagnostics
  - ☐ Extended off-line tests

### 1.2.2 Total cost of ownership

- ☐ Low energy and air consumption
- ☐ Retro-fit to existing installations (Neles or 3rd party)

### 1.2.3 Minimised process variability

- ☐ Linearisation of the valve flow characteristics
- ☐ Excellent dynamic and static control performance
- ☐ High-speed of response
- ☐ Accurate internal measurements

### 1.2.4 Easy installation and configuration

- ☐ Same unit for linear and rotary valves, double and single-acting actuators
- ☐ Simple calibration and configuration
  - ☐ using Local User Interface (H)
  - ☐ using FieldCare software in a remote location (H)
- ☐ Low power design enables installation to all common control systems
- ☐ Possibility to mount also on valves that are in process with 1-point calibration feature

### 1.2.5 Open solution

Metso is committed to delivering products that freely interface with software and hardware from a variety of manufacturers; and the ND7000 is no exception. This open architecture allows the ND7000 to be integrated with other field devices to give an unprecedented level of controllability.

- ☐ FDT based multi-vendor support configuration  
ND9000 DTM download page:  
[www.metso.com/valves](http://www.metso.com/valves)

### 1.2.6 Product reliability

- ☐ Designed to operate in harsh environmental conditions
  - ☐ Rugged modular design
  - ☐ Excellent temperature characteristics
  - ☐ Vibration and impact tolerant
  - ☐ IP66 enclosure
  - ☐ Protected against humidity
- ☐ Maintenance free operation
  - ☐ Resistant to dirty air
  - ☐ Wear resistant and sealed components
  - ☐ Contactless position measurement

## 2 ND9000 AND ND7000 INTELLIGENT VALVE CONTROLLER WITH DIFFERENT COMMUNICATION PROTOCOLS

### 2.1 General

This manual incorporates Installation, Maintenance and Operation Instructions for the Metso ND9000 and ND7000 intelligent valve controller. The ND9000 and ND7000 may be used with either cylinder or diaphragm type pneumatic actuators for rotary or linear valves.

#### NOTE:

The selection and use of the valve controller in a specific application requires close consideration of detailed aspects. Due to the nature of the product, this manual cannot cover all the likely situations that may occur when installing, using or servicing the valve controller.

If you are uncertain about the use of the controller or its suitability for your intended use, please contact Metso's Automation business for more information.

### 2.2 Technical description

#### ND9000H and ND7000H

The ND9000H and ND7000H are a 4–20 mA loop-powered microcontroller-based intelligent valve controllers. The devices operate even at 3.6 mA input signal and communicates via HART.

#### ND9000F

The ND9000F is a fieldbus powered microcontroller-based intelligent valve controller.

#### ND9000P

The ND9000P is a fieldbus powered microcontroller-based intelligent valve controller.

#### All versions

All devices contain a Local User Interface enabling local configuration.

Independently from the communication protocol, the valve position is controlled by the powerful 32-bit microcontroller. The measurements include:

- ☐ Input signal
- ☐ Valve position with contactless sensor
- ☐ Actuator pressures, 2 independent measurements
- ☐ Supply pressure
- ☐ Spool valve position
- ☐ Device temperature

Advanced self-diagnostics guarantees that all measurements operate correctly. Failure of one measurement does not cause the valve to fail if the input signal and position measurements are operating correctly. After connections of electric signal and pneumatic supply the micro controller ( $\mu$ C) reads the input signal, position sensor ( $\alpha$ ), pressure sensors (Ps, P1, P2) and spool position sensor (SPS). A difference between input signal and position sensor ( $\alpha$ ) measurement is detected by the control algorithm inside the  $\mu$ C. The  $\mu$ C calculates a new value for prestage (PR) coil current based on the information from the input signal and from the sensors. Changed current to the PR changes the pilot pressure to the spool valve. Reduced pilot pressure moves the spool and the actuator pressures change accordingly.

The spool opens the flow to the driving side of the double diaphragm actuator and opens the flow out from the other side of the actuator. The increasing pressure will move the diaphragm piston. The actuator and feedback shaft rotate clockwise. The position sensor ( $\alpha$ ) measures the rotation for the  $\mu C$ . The  $\mu C$  using control algorithm modulates the PR-current from the steady state value until a new position of the actuator according to the input signal is reached.

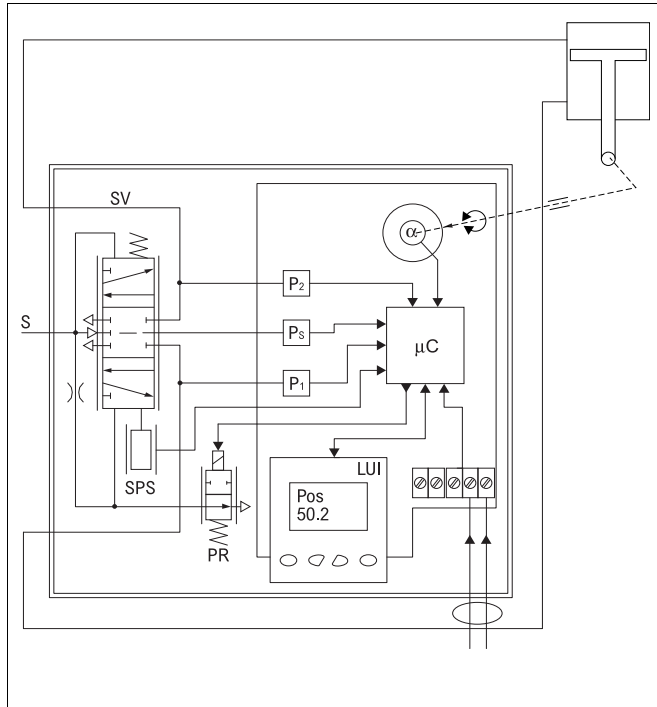


Fig. 1 The principle of operation

## 2.3 Markings

The valve controller is equipped with an identification plate (Fig. 2).

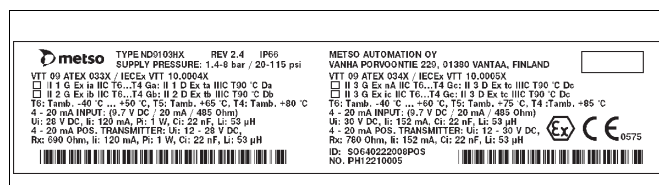


Fig. 2 Example of the identification plate

Identification plate markings include:

- ☐ Type designation of the valve controller
- ☐ Revision number
- ☐ Enclosure class
- ☐ Input signal (voltage range)
- ☐ Input resistance
- ☐ Maximum supply voltage
- ☐ Operational temperature
- ☐ Supply pressure range
- ☐ Contact details of the manufacturer
- ☐ CE mark
- ☐ Manufacturing serial number TTYWWNNNN\*)

\*) Manufacturing serial number explained:

TT= device and factory sign

YY= year of manufacturing

WW = week of manufacturing

NNNN = consecutive number

Example: PH13011234 = controller, year 2013, week 1, consecutive number 1234.

Note, that in ND9200 and ND9300 models there may have two identification plates if there is double approval (type ND92\_XE1 or ND93\_XE1).

When device is installed to Ed i or Ex d area, remove identification plate which is not valid.

If device is installed to Ex d area, it can't be installed to Ex i area even that identification plate would be changed.

See Chapter 15 for all ID plates.

## 2.4 Technical specifications

### ND9000 AND ND7000 INTELLIGENT VALVE CONTROLLER

#### General

Either loop powered (ND9000H and ND7000H) or bus powered (ND9000F and ND9000P), no external power supply required.

Suitable for rotary and sliding-stem valves.

Actuator connections in accordance with VDI/VDE 3845 and IEC 60534-6 standards.

Action: Double or single acting

Travel range: Linear; 10–120 mm with standard IEC parts.  
Larger strokes possible with suitable kits  
Rotary; 45–95°.  
Measurement range 110° with freely rotating feedback shaft.

#### Environmental Influence

Standard temperature range:

-40° to +85 °C / -40° to +185 °F

Low temperature option:

-53° to +85 °C / -64° to +185 °F

Influence of temperature on valve position:

< 0.5 % / 10 °C

Influence of vibration on valve position:

< 1 % under 2g 5–150 Hz,  
1g 150–300 Hz, 0.5g 300–2000 Hz

#### Enclosure

##### ND9100 and ND7100

Material: Anodised aluminium alloy and polymer composite

Protection class: IP66, NEMA 4X

Pneumatic ports: G 1/4

Electrical connection: max 2.5 mm<sup>2</sup>

Cable gland thread: M20 x 1.5 / 1/2 NPT (U)

Weight: 1.8 kg / 4.0 lb

with extension housing (limit switches) plus 0.8 kg / 1.8 lb  
Mechanical and digital position indicator visible through the main cover

##### ND9200 and ND7200

Material: Anodised aluminium alloy and tempered glass

Protection class: IP66, NEMA 4X

Pneumatic ports: 1/4 NPT

Electrical connection: max. 2.5 mm<sup>2</sup>

Cable gland thread: M20 x 1.5, except 1/2 NPT (E2)

Weight: 3.4 kg / 7.5 lb

with extension housing (limit switches) plus 1.0 kg / 2.2 lb

Mechanical and digital position indicator visible through the main cover (not applicable to ND9200\_E2)

**ND9300 and ND9400**

|                                                              |                                                                                                         |
|--------------------------------------------------------------|---------------------------------------------------------------------------------------------------------|
| Material:                                                    | Full stainless steel enclosure (ND9300)<br>Stainless steel housing and polymer composite cover (ND9400) |
| Protection class:                                            | IP66, NEMA 4X                                                                                           |
| Pneumatic ports:                                             | 1/4 NPT                                                                                                 |
| Electrical connection:                                       | max. 2.5 mm <sup>2</sup>                                                                                |
| Cable gland thread:                                          | M20 x 1.5 / 1/2 NPT (U and E2)                                                                          |
| Weight:                                                      | 5.6 kg / 12.4 lbs (ND9400)<br>8.6 kg / 19.0 lbs (ND9300)                                                |
| with extension housing (limit switches) plus 3.0 kg / 6.6 lb |                                                                                                         |

**Pneumatics**

|                                                                  |                                                                                                                                                                                                                       |
|------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Supply pressure:                                                 | 1.4–8 bar / 20–115 psi                                                                                                                                                                                                |
| Effect of supply pressure on valve position:                     | < 0.1 % at 10 % difference in inlet pressure                                                                                                                                                                          |
| Air quality:                                                     | According to ISO 8573-1:2001<br>Solid particles: Class 5<br>(3–5 µm filtration is recommended)<br>Humidity: Class 1<br>(dew point 10 °C / 18 °F below minimum temperature is recommended)<br>Oil class: 3 (or <1 ppm) |
| Capacity with 4 bar / 60 psi supply:                             | 5.5 Nm <sup>3</sup> /h / 3.3 scfm (spool valve 2)<br>12 Nm <sup>3</sup> /h / 7.1 scfm (spool valve 3)<br>38 Nm <sup>3</sup> /h / 22.4 scfm (spool valve 6)                                                            |
| Consumption with 4 bar / 60 psi supply in steady state position: | < 0.6 Nm <sup>3</sup> /h / 0.35 scfm (spool valves 2 & 3)<br>< 1.0 Nm <sup>3</sup> /h / 0.6 scfm (spool valve 6)                                                                                                      |

**Electronics****ND9000H and ND7000H**

|                          |                                                 |
|--------------------------|-------------------------------------------------|
| Supply power:            | Loop powered, 4–20 mA                           |
| Minimum signal:          | 3.6 mA                                          |
| Current max :            | 120 mA                                          |
| Load voltage:            | up to 9.7 V DC / 20 mA<br>(corresponding 485 Ω) |
| Voltage:                 | max 30 V DC                                     |
| Polarity protection:     | -30 V DC                                        |
| Over current protection: | active over 35 mA                               |

**ND9000F and ND9000P**

|                         |                                        |
|-------------------------|----------------------------------------|
| Power supply:           | Taken from bus                         |
| Bus voltage:            | 9–32 V DC, reverse polarity protection |
| Quiescent Current Draw: | 16 mA                                  |
| Max basic current:      | 17.2 mA                                |
| Fault current (FDE):    | 3.9 mA                                 |

**FOUNDATION fieldbus function block execution times****ND9000F**

|     |       |
|-----|-------|
| AO  | 20 ms |
| AI  | 20 ms |
| PID | 20 ms |
| DO  | 20 ms |
| DI  | 15 ms |
| IS  | 15 ms |
| OS  | 15ms  |

**Performance with moderate constant-load actuators**

Values at 20 °C / 68 °F and without any additional instruments, such as boosters or quick exhaust valves etc.

Dead band: ≤ 0.1 %

Hysteresis: < 0.5 %

**Local user interface functions**

- ☐ Local control of the valve
- ☐ Monitoring of valve position, input signal, temperature, supply and actuator pressure difference
- ☐ Guided start-up function
- ☐ LUI may be locked remotely to prevent unauthorised access
- ☐ Calibration: Automatic/Manual/Linearization
- ☐ 1-point calibration
- ☐ Control configuration: aggressive, fast, optimum, stable, maximum stability
- ☐ Mode selection: Automatic/Manual
- ☐ Rotation: valve rotation clockwise or counterclockwise to close
- ☐ Dead angle
- ☐ Low cut-off, cut-off safety range (default 2 %)
- ☐ Positioner fail action, open/close
- ☐ Signal direction: Direct/reverse acting
- ☐ Actuator type, double/single acting
- ☐ HART version: HART 6 or HART 7
- ☐ Valve type, rotary/linear IEC/NelesCV Globe/FLI
- ☐ Language selection: English, German and French

**Electromagnetic protection**

Electromagnetic compability acc. to

Emission: EN 61000-6-4 (2007) + A1(2011)

Immunity: EN 61000-6-2 (2005)

**Safety**

IEC 61508 compliant up to and including SIL 2 by TUV

**CE marking**

EMC 2014/30/EU

ATEX 94/9/EC (until 19 April 2016)

ATEX 2014/34/EU (from 20 April 2016)

## Approvals

Table 1 Approvals and electrical values, HART

| Certificate                                                                                                                                                                                                                                                                                                                 | Approval                                                                                                                                                                                                   | Electrical values                                                                                                                                                                                                                                                                                                                                                                          |
|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>ATEX</b>                                                                                                                                                                                                                                                                                                                 |                                                                                                                                                                                                            |                                                                                                                                                                                                                                                                                                                                                                                            |
| <b>ND_X</b><br>VTT 09 ATEX 033X<br>VTT 09 ATEX 034X<br><br>EN 60079-0: 2012<br>EN 60079-11: 2012<br>EN 60079-26: 2007<br>EN 60079-31: 2009<br><br>EN 60079-0: 2012<br>EN 60079-11: 2012<br>EN 60079-15: 2010<br>EN 60079-31: 2009                                                                                           | II 1G Ex ia IIC T6...T4 Ga<br>II 1D Ex ta IIIC T90 °C Da<br>II 2 G Ex ib IIC T6...T4 Gb<br>II 2 D Ex tb IIIC T90 °C Db                                                                                     | Input: $U_i \leq 28 \text{ V}$ , $I_i \leq 120 \text{ mA}$ , $P_i \leq 1 \text{ W}$ , $C_i \leq 22 \text{ nF}$ , $L_i \leq 53 \mu\text{H}$ .<br>Output: $U_i \leq 28 \text{ V}$ , $I_i \leq 120 \text{ mA}$ , $P_i \leq 1 \text{ W}$ , $C_i \leq 22 \text{ nF}$ , $L_i \leq 53 \mu\text{H}$ ,<br>external load resistance 0–690 $\Omega$                                                   |
|                                                                                                                                                                                                                                                                                                                             | II 3 G Ex nA IIC T6...T4 Gc<br>II 3 D Ex tc IIIC T90 °C Dc                                                                                                                                                 | Input: $U_i \leq 30 \text{ V}$ , $I_i \leq 152 \text{ mA}$<br>Output: $U_i \leq 30 \text{ V}$ , $I_i \leq 152 \text{ mA}$                                                                                                                                                                                                                                                                  |
|                                                                                                                                                                                                                                                                                                                             | II 3 G Ex ic IIC T6...T4 Gc<br>II 3 D Ex tc IIIC T90 °C Dc                                                                                                                                                 | Input: $U_i \leq 30 \text{ V}$ , $I_i \leq 152 \text{ mA}$ , $P_{\text{max}} = \text{device limits itself}$ , $C_i \leq 22 \text{ nF}$ , $L_i \leq 53 \mu\text{H}$ .<br>Output: $U_i \leq 30 \text{ V}$ , $I_i \leq 152 \text{ mA}$ , $P_{\text{max}} = \text{device limits itself}$ , $C_i \leq 22 \text{ nF}$ ,<br>$L_i \leq 53 \mu\text{H}$ , external load resistance 0–780 $\Omega$   |
| <b>ND_E1</b><br>SIRA 11 ATEX 1006X<br><br>EN 60079-0:2012<br>EN 60079-1:2007<br>EN 60079-31:2009                                                                                                                                                                                                                            | II 2 G Ex d IIC T6...T4 Gb<br>II 2 D Ex tb IIIC T80 °C...T105 °C Db IP66                                                                                                                                   | Input: $U_i \leq 30 \text{ V}$<br>Output: $U_i \leq 30 \text{ V}$ , $P_{\text{max}} = \text{device limits itself}$ , external load resistance 0–780 $\Omega$                                                                                                                                                                                                                               |
| <b>IECEX</b>                                                                                                                                                                                                                                                                                                                |                                                                                                                                                                                                            |                                                                                                                                                                                                                                                                                                                                                                                            |
| <b>ND_X</b><br>IECEX VTT 10.0004X<br>IECEX VTT 10.0005X<br><br>IEC 60079-0: 2007/2011<br>IEC 60079-11: 2011<br>IEC 60079-26: 2006<br>IEC 60079-31: 2008<br><br>IEC 60079-0: 2007/2011<br>IEC 60079-11: 2011<br>IEC 60079-15: 2010,<br>IEC 60079-31: 2008                                                                    | Ex ia IIC T6...T4 Ga<br>Ex ta IIIC T90 °C Da<br>Ex ib IIC T6...T4 Gb<br>Ex tb IIIC T90 °C Db                                                                                                               | Input: $U_i \leq 28 \text{ V}$ , $I_i \leq 120 \text{ mA}$ , $P_i \leq 1 \text{ W}$ , $C_i \leq 22 \text{ nF}$ , $L_i \leq 53 \mu\text{H}$<br>Output: $U_i \leq 28 \text{ V}$ , $I_i \leq 120 \text{ mA}$ , $P_i \leq 1 \text{ W}$ , $C_i \leq 22 \text{ nF}$ , $L_i \leq 53 \mu\text{H}$ ,<br>external load resistance 0–690 $\Omega$                                                     |
|                                                                                                                                                                                                                                                                                                                             | Ex nA IIC T6...T4 Gc<br>Ex tc IIIC T90 °C Dc                                                                                                                                                               | Input: $U_i \leq 30 \text{ V}$ , $I_i \leq 152 \text{ mA}$<br>Output: $U_i \leq 30 \text{ V}$ , $I_i \leq 152 \text{ mA}$                                                                                                                                                                                                                                                                  |
|                                                                                                                                                                                                                                                                                                                             | Ex ic IIC T6...T4 Gc<br>Ex tc IIIC T90 °C Dc                                                                                                                                                               | Input: $U_i \leq 30 \text{ V}$ , $I_i \leq 152 \text{ mA}$ , $P_{\text{max}} = \text{device limits itself}$ , $C_i \leq 22 \text{ nF}$ , $L_i \leq 53 \mu\text{H}$ .<br>Output: $U_i \leq 30 \text{ V}$ , $I_i \leq 152 \text{ mA}$ , $P_{\text{max}} = \text{device limits itself}$ , $C_i \leq 22 \text{ nF}$ ,<br>$L_i \leq 53 \mu\text{H}$ , external load resistance 0–780 $\Omega$   |
| <b>ND_E1</b><br>IECEX SIR 11.0001X<br><br>IEC 60079-0:2011<br>IEC 60079-1:2007<br>IEC 60079-31:2008                                                                                                                                                                                                                         | Ex d IIC T6...T4 Gb<br>Ex tb IIIC T80 °C...T105 °C Db IP66                                                                                                                                                 | Input: $U_i \leq 30 \text{ V}$<br>Output: $U_i \leq 30 \text{ V}$ , $P_{\text{max}} = \text{device limits itself}$ , external load resistance 0–780 $\Omega$                                                                                                                                                                                                                               |
| <b>INMETRO</b>                                                                                                                                                                                                                                                                                                              |                                                                                                                                                                                                            |                                                                                                                                                                                                                                                                                                                                                                                            |
| <b>ND_Z</b><br>NCC 12.0793 X<br>NCC 12.0794 X<br><br>ABNT NBR IEC 60079-0:2013<br>ABNT NBR IEC 60079-11:2009<br>ABNT NBR IEC 60079-26:2008<br>(2009)<br>ABNT NBR IEC 60079-27:2010<br>ABNT NBR IEC 60079-0:2013<br>ABNT NBR IEC 60079-11:2009<br>IEC 60079-15:2012<br>ABNT NBR IEC 60079-27:2010<br>ABNT NBR IEC 60529:2005 | Ex ia IIC T4/T5/T6 Ga<br>Ex ia IIC T4/T5/T6 Gb                                                                                                                                                             | Input: $U_i \leq 28 \text{ V}$ , $I_i \leq 120 \text{ mA}$ , $P_i \leq 1 \text{ W}$ , $C_i \leq 22 \text{ nF}$ , $L_i \leq 53 \mu\text{H}$<br>Output: $U_i \leq 28 \text{ V}$ , $I_i \leq 120 \text{ mA}$ , $P_i \leq 1 \text{ W}$ , $C_i \leq 22 \text{ nF}$ , $L_i \leq 53 \mu\text{H}$ ,<br>external load resistance 0–690 $\Omega$ .                                                   |
|                                                                                                                                                                                                                                                                                                                             | Ex nA IIC T4/T5/T6 Gc                                                                                                                                                                                      | Input: $U_i \leq 30 \text{ V}$ , $I_i \leq 152 \text{ mA}$<br>Output: $U_i \leq 30 \text{ V}$ , $I_i \leq 152 \text{ mA}$                                                                                                                                                                                                                                                                  |
|                                                                                                                                                                                                                                                                                                                             | Ex ic IIC T4/T5/T6 Gc                                                                                                                                                                                      | Input: $U_i \leq 30 \text{ V}$ , $I_i \leq 152 \text{ mA}$ , $P_{\text{max}} = \text{device limits itself}$ , $C_i \leq 22 \text{ nF}$ , $L_i \leq 53 \mu\text{H}$ .<br>Output: $U_i \leq 30 \text{ V}$ , $I_i \leq 152 \text{ mA}$ , $P_{\text{max}} = \text{device limits itself}$ , $C_i \leq 22 \text{ nF}$ , $L_i \leq 53 \mu\text{H}$ ,<br>external load resistance 0–780 $\Omega$ . |
| <b>ND_E5</b><br>NCC 12.0795 X<br><br>ABNT NBR IEC 60079-0:2013<br>ABNT NBR IEC 60079-1:2009 (2011)<br>ABNT NBR IEC 60079-31:2011<br>ABNT NBR IEC 60529:2005                                                                                                                                                                 | Ex d IIC T4/T5/T6 Gb<br>Ex tb IIIC T100 °C Db IP66                                                                                                                                                         | Input: $U_i \leq 30 \text{ V}$<br>Output: $U_i \leq 30 \text{ V}$ , $P_{\text{max}} = \text{device limits itself}$ , external load resistance 0–780 $\Omega$                                                                                                                                                                                                                               |
| <b>cCSAus</b>                                                                                                                                                                                                                                                                                                               |                                                                                                                                                                                                            |                                                                                                                                                                                                                                                                                                                                                                                            |
| <b>ND_U</b>                                                                                                                                                                                                                                                                                                                 | IS Class I, Division 1, Groups A, B, C, D,<br>T4...T6<br>IS Class I, Zone 0, AEx ia, IIC T4...T6                                                                                                           | Input: $U_i \leq 28 \text{ V}$ , $I_i \leq 120 \text{ mA}$ , $P_i \leq 1 \text{ W}$ , $C_i \leq 22 \text{ nF}$ , $L_i \leq 53 \mu\text{H}$<br>Output: $U_i \leq 28 \text{ V}$ , $I_i \leq 120 \text{ mA}$ , $P_i \leq 1 \text{ W}$ , $C_i \leq 22 \text{ nF}$ , $L_i \leq 53 \mu\text{H}$ ,<br>external load resistance 0–690 $\Omega$ .                                                   |
|                                                                                                                                                                                                                                                                                                                             | NI Class I, Division 2, Groups A, B, C, D,<br>T4...T6<br>NI Class I, Zone 2, Ex nA IIC T4...T6.                                                                                                            | Input: $U_i \leq 30 \text{ V}$ , $P_{\text{max}} = \text{device limits itself}$ , $C_i \leq 22 \text{ nF}$ , $L_i \leq 53 \mu\text{H}$<br>Output: $U_i \leq 30 \text{ V}$ , $I_i \leq 152 \text{ mA}$ , $P_{\text{max}} = \text{device limits itself}$ , $C_i \leq 22 \text{ nF}$ ,<br>$L_i \leq 53 \mu\text{H}$ , external load resistance 0–780 $\Omega$ .                               |
| <b>ND_E2</b><br>1980091                                                                                                                                                                                                                                                                                                     | Class I, Div 1, Groups B, C, D; Class II,<br>Div 1, Groups E,F,G; Class III; T4...T6,<br>Enclosure type 4X<br>Ex d IIC T4...T6<br>AEx d IIC T4...T6<br>Ex tb IIIC T100 °C IP66<br>AEx tb IIIC T100 °C IP66 | Input: $U_i \leq 30 \text{ V}$<br>Output: $U_i \leq 30 \text{ V}$ , $P_{\text{max}} = \text{device limits itself}$ , external load resistance 0–780 $\Omega$                                                                                                                                                                                                                               |
| <b>TIIS (JIS)</b>                                                                                                                                                                                                                                                                                                           |                                                                                                                                                                                                            |                                                                                                                                                                                                                                                                                                                                                                                            |
| <b>ND_E4</b>                                                                                                                                                                                                                                                                                                                | Ex d II C T6                                                                                                                                                                                               | Input: $U_i \leq 30 \text{ V}$<br>Output: $U_i \leq 30 \text{ V}$ , $P_{\text{max}} = \text{device limits itself}$ , external load resistance 0–780 $\Omega$ .                                                                                                                                                                                                                             |

Table 2 Approvals and electrical values, FOUNDATION fieldbus and Profibus PA

| Certificate                                                                                                                                                                                                                                                                                                                            | Approval                                                                                                                                                                                                  | Electrical values                                                                                                                                                                              |
|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>ATEX</b>                                                                                                                                                                                                                                                                                                                            |                                                                                                                                                                                                           |                                                                                                                                                                                                |
| <b>ND_X</b><br>VTT 09 ATEX 033X<br>VTT 09 ATEX 034X<br><br>EN 60079-0: 2012<br>EN 60079-11: 2012<br>EN 60079-26: 2007<br>EN 60079-31: 2009                                                                                                                                                                                             | II 1G Ex ia IIC T6...T4 Ga<br>II 1D Ex ta IIIC T90 °C Da<br>II 2 G Ex ib IIC T6...T4 Gb<br>II 2 D Ex tb IIIC T90 °C Db<br>II 1 D Ex ia IIIC T90 °C...T120 °C Da<br>II 2 D Ex ib IIIC T90 °C...T120 °C Db  | $U_i \leq 24 \text{ V}$ , $I_i \leq 380 \text{ mA}$ , $P_i \leq 5.32 \text{ W}$ , $C_i \leq 5 \text{ nF}$ , $L_i \leq 10 \mu\text{H}$ .<br>Comply with the requirements for FISCO field device |
| EN 60079-0: 2012<br>EN 60079-11: 2012<br>EN 60079-15: 2010<br>EN 60079-31: 2009                                                                                                                                                                                                                                                        | II 3 G Ex nA IIC T6...T4 Gc<br>II 3 D Ex tc IIIC T90 °C Dc<br>II 3 D Ex ic IIIC T90 °C...T120 °C Dc                                                                                                       | $U_i \leq 24 \text{ V}$                                                                                                                                                                        |
|                                                                                                                                                                                                                                                                                                                                        | II 3 G Ex ic IIC T6...T4 Gc<br>II 3 D Ex tc IIIC T90 °C Dc<br>II 3 D Ex ic IIIC T90 °C...T120 °C Dc                                                                                                       | $U_i \leq 32 \text{ V}$ , $I_i \leq 380 \text{ mA}$ , $P_i \leq 5.32 \text{ W}$ , $C_i \leq 5 \text{ nF}$ , $L_i \leq 10 \mu\text{H}$ .<br>Comply with the requirements for FISCO field device |
| <b>ND_E1</b><br>SIRA 11 ATEX 1006X<br><br>EN 60079-0:2012<br>EN 60079-1:2007<br>EN 60079-31:2009                                                                                                                                                                                                                                       | II 2 G Ex d IIC T6...T4 Gb<br>II 2 D Ex tb IIIC T80 °C...T105 °C Db IP66                                                                                                                                  | $U_i \leq 32 \text{ V}$                                                                                                                                                                        |
| <b>IECEX</b>                                                                                                                                                                                                                                                                                                                           |                                                                                                                                                                                                           |                                                                                                                                                                                                |
| <b>ND_X</b><br>IECEX VTT 10.0004X<br>IECEX VTT 10.0005X<br><br>IEC 60079-0: 2007/2011<br>IEC 60079-11: 2011<br>IEC 60079-26: 2006<br>IEC 60079-31: 2008                                                                                                                                                                                | Ex ia IIC T6...T4 Ga<br>Ex ta IIIC T90 °C Da<br>Ex ib IIC T6...T4 Gb<br>Ex tb IIIC T90 °C Db<br>Ex ia IIIC T90 °C...T120 °C Da<br>Ex ib IIIC T90 °C...T120 °C Db                                          | $U_i \leq 24 \text{ V}$ , $I_i \leq 380 \text{ mA}$ , $P_i \leq 5.32 \text{ W}$ , $C_i \leq 5 \text{ nF}$ , $L_i \leq 10 \mu\text{H}$ .<br>Comply with the requirements for FISCO field device |
| IEC 60079-0: 2007/2011<br>IEC 60079-11: 2011<br>IEC 60079-15: 2010,<br>IEC 60079-31: 2008                                                                                                                                                                                                                                              | Ex nA IIC T6...T4 Gc<br>Ex tc IIIC T90 °C Dc<br>Ex ic IIIC T90 °C...T120 °C Dc                                                                                                                            | $U_i \leq 24 \text{ V}$                                                                                                                                                                        |
|                                                                                                                                                                                                                                                                                                                                        | Ex ic IIC T6...T4 Gc<br>Ex tc IIIC T90 °C Dc<br>Ex ic IIIC T90 °C...T120 °C Dc                                                                                                                            | $U_i \leq 32 \text{ V}$ , $I_i \leq 380 \text{ mA}$ , $P_i \leq 5.32 \text{ W}$ , $C_i \leq 5 \text{ nF}$ , $L_i \leq 10 \mu\text{H}$ .<br>Comply with the requirements for FISCO field device |
| <b>ND_E1</b><br>IECEX SIR 11.0001X<br><br>IEC 60079-0:2011<br>IEC 60079-1:2007<br>IEC 60079-31:2008                                                                                                                                                                                                                                    | Ex d IIC T6...T4 Gb<br>Ex tb IIIC T80 °C...T105 °C Db IP66                                                                                                                                                | $U_i \leq 32 \text{ V}$                                                                                                                                                                        |
| <b>INMETRO</b>                                                                                                                                                                                                                                                                                                                         |                                                                                                                                                                                                           |                                                                                                                                                                                                |
| <b>ND_Z</b><br>NCC 12.0793 X<br>NCC 12.0794 X<br><br>ABNT NBR IEC 60079-0:2008 (2011)<br>ABNT NBR IEC 60079-11:2009<br>ABNT NBR IEC 60079-26:2008 (2009)<br>ABNT NBR IEC 60079-27:2010<br>ABNT NBR IEC 60079-0:2008 (2011)<br>ABNT NBR IEC 60079-11:2009<br>IEC 60079-15:2010<br>ABNT NBR IEC 60079-27:2010<br>ABNT NBR IEC 60529:2009 | Ex ia IIC T4/T5/T6 Ga<br>Ex ia IIC T4/T5/T6 Gb                                                                                                                                                            | $U_i \leq 24 \text{ V}$ , $I_i \leq 380 \text{ mA}$ , $P_i \leq 5.32 \text{ W}$ , $C_i \leq 5 \text{ nF}$ , $L_i \leq 10 \mu\text{H}$ .<br>Comply with the requirements for FISCO field device |
|                                                                                                                                                                                                                                                                                                                                        | Ex nA IIC T4/T5/T6 Gc                                                                                                                                                                                     | $U_i \leq 24 \text{ V}$                                                                                                                                                                        |
|                                                                                                                                                                                                                                                                                                                                        | Ex ic IIC T4/T5/T6 Gc                                                                                                                                                                                     | $U_i \leq 32 \text{ V}$ , $I_i \leq 380 \text{ mA}$ , $P_i \leq 5.32 \text{ W}$ , $C_i \leq 5 \text{ nF}$ , $L_i \leq 10 \mu\text{H}$ .<br>Comply with the requirements for FISCO field device |
| <b>ND_E5</b><br>NCC 12.0795 X<br><br>ABNT NBR IEC 60079-0:2008 (2011)<br>ABNT NBR IEC 60079-1:2009 (2011)<br>ABNT NBR IEC 60079-31:2011<br>ABNT NBR IEC 60529:2009                                                                                                                                                                     | Ex d IIC T4/T5/T6 Gb<br>Ex tb IIIC T100 °C Db IP66                                                                                                                                                        | $U_i \leq 32 \text{ V}$                                                                                                                                                                        |
| <b>cCSAus</b>                                                                                                                                                                                                                                                                                                                          |                                                                                                                                                                                                           |                                                                                                                                                                                                |
| <b>ND_U</b>                                                                                                                                                                                                                                                                                                                            | IS Class I, Division 1, Groups A, B, C, D, T4...T6                                                                                                                                                        | $U_i \leq 24 \text{ V}$ , $I_i \leq 380 \text{ mA}$ , $P_i \leq 5.32 \text{ W}$ , $C_i \leq 5 \text{ nF}$ , $L_i \leq 10 \mu\text{H}$                                                          |
|                                                                                                                                                                                                                                                                                                                                        | IS Class I, Zone 0, AEx ia, IIC T4...T6                                                                                                                                                                   |                                                                                                                                                                                                |
|                                                                                                                                                                                                                                                                                                                                        | NI Class I, Division 2, Groups A, B, C, D, T4...T6.                                                                                                                                                       | $U_i \leq 24 \text{ V}$ , $I_i \leq 380 \text{ mA}$ , $P_i \leq 5.32 \text{ W}$ , $C_i \leq 5 \text{ nF}$ , $L_i \leq 10 \mu\text{H}$                                                          |
|                                                                                                                                                                                                                                                                                                                                        | NI Class I, Zone 2, Ex nA IIC T4...T6.                                                                                                                                                                    |                                                                                                                                                                                                |
| <b>ND_E2</b><br>1980091                                                                                                                                                                                                                                                                                                                | Class I, Div 1, Groups B, C, D; Class II, Div 1, Groups E, F, G; Class III; T4...T6,<br>Enclosure type 4X<br>Ex d IIC T4...T6<br>AEx d IIC T4...T6<br>Ex tb IIIC T100 °C IP66<br>AEx tb IIIC T100 °C IP66 | $U_i \leq 32 \text{ V}$                                                                                                                                                                        |



## Optional parts

### ND9000H and ND7000H

#### Position transmitter

|                     |                                                   |
|---------------------|---------------------------------------------------|
| Output signal:      | 4–20 mA (galvanic isolation;<br>600 V DC)         |
| Supply voltage:     | 12–30 V                                           |
| Resolution:         | 16 bit / 0.244 µA                                 |
| Linearity:          | < 0.05 % FS                                       |
| Temperature effect: | < 0.35 % FS                                       |
| External load:      | max 0–780 Ω<br>max 0–690 Ω for intrinsically safe |

### ND9000/H, ND9000/F, ND9000/P,

### ND9000F/B06, ND9000P/B06

#### Proximity sensors and micro switches, 2 pieces (with extension module)

|          |                                                            |
|----------|------------------------------------------------------------|
| Code D33 | SST Sensor Dual Module                                     |
| Code D44 | Namur Sensor Dual Module                                   |
| Code I02 | P+F NJ2-12GK-SN                                            |
| Code I09 | P+F NCB2-12GM35-N0                                         |
| Code I32 | Omron E2E-X2Y1                                             |
| Code I41 | P+F NJ4-12GK-SN                                            |
| Code I45 | P+F NJ3-18GK-S1N                                           |
| Code I56 | IFC 2002-ARKG/UP                                           |
| Code K05 | Omron D2VW-5                                               |
| Code K06 | Omron D2VW-01                                              |
| Code B06 | Omron D2VW-01 (ND9100F/P, ND9200F/P<br>and ND9300F/P only) |

## 2.5 Recycling and disposal

Most valve controller parts can be recycled if sorted according to material.

Most parts have material marking. A material list is supplied with the valve controller. In addition, separate recycling and disposal instructions are available from the manufacturer.

A valve controller may also be returned to the manufacturer for recycling and disposal. There will be a charge for this.

## 2.6 Safety precautions

### NOTE (ND9000, ND7000):

Avoid earthing a welding machine in close proximity to an ND valve controller.

Damage to the equipment may result.

### CAUTION (ND9000, ND7000):

#### Do not exceed the permitted values!

Exceeding the permitted values marked on the valve controller may cause damage to the controller and to equipment attached to the controller and could lead to uncontrolled pressure release in the worst case. Damage to the equipment and personal injury may result.

### CAUTION (ND9000, ND7000):

#### Do not remove or dismantle a pressurized controller!

Removing or dismantling a pressurized prestage or spool valve of an ND leads to uncontrolled pressure release. Always shut off the supply air and release the pressure from the pipelines and equipment before removing or dismantling the controller. Otherwise personal injury and damage to equipment may result.

### WARNING (ND9000, ND7000):

**During automatic or manual calibration the valve operates between open and closed positions. Make sure that the operation does not endanger people or processes!**

### WARNING (ND9000, ND7000):

**Do not operate the device with electronics cover (39) removed!**

Electromagnetic immunity is reduced, valve may stroke. Explosion protection may be impaired.

### Ex d WARNING (ND9200, ND7200, ND9300):

**Do not open the device when energized!**

Explosion protection is lost.

### ELECTRICAL SAFETY WARNING (ND9200, ND7200, ND9300):

**Use fuses for limit switch installations with 50 V AC / 75 V DC or higher.**

### Ex WARNING (ND9100, ND7100):

#### Electrostatic charge hazard!

The cover is non-conductive. Clean with a damp cloth only!

#### Spark hazard!

Protect the aluminium housing from impacts and friction!

### Ex WARNING (ND9100, ND9200, ND9300 and ND7100):

#### For use in the presence of combustible dust.

Ignition protection relies on the enclosure. Protect the cover of the valve controller from impacts. When temperature is higher than 70 °C / 158 °F the temperature rating of the cable shall be higher than the ambient temperature.

### Ex WARNING (ND9200, ND7200, ND9300):

**The locking screw (part 107) of the cover is essential to explosion protection.**

The cover has to be locked in place for Ex d protection. The screw grounds the cover to the housing.

**Intrinsic Safety (Ex i) WARNING (ND9100, ND9200, ND9300 and ND7100):**

**Ensure that the complete installation and wiring is intrinsically safe before operating the device!**

The equipment must be connected via a certified Zener barrier placed outside the hazardous area.

**Ex WARNING (ND9200, ND7200):**

**Electrostatic charge hazard!**

The windows and identification plate are non-conductive. Clean with a damp cloth only!

**Ex WARNING (ND9100, ND7100):**

**For use in the presence of combustible dust.**

**Device shall not be subjected to a prolific charge generating mechanism.**

**Ex WARNING (ND9000, ND7000):**

**Accumulation of dust shall be avoided!**

**Ex d WARNING (ND9200, ND7200, ND9300):**

**Use a cable gland and blind plug with suitable Ex d certification.**

**For ambient temperature over 70 °C / 158 °F use a heat resistant cable and cable gland suitable for at least 90 °C / 194 °F.**

**Ex n WARNING (ND9100, ND9200, ND9300 and ND7100):**

**At an ambient temperature  $\geq +70$  °C / 158 °F, the temperature rating of selected connection cable shall be in accordance with the maximum ambient temperature range.**

**Selected cable gland shall not invalidate the type of protection.**

**Ex i WARNING (ND9100, ND9200, ND9300 and ND7100):**

**At an ambient temperature  $\geq +70$  °C / 158 °F, the temperature rating of selected connection cable shall be in accordance with the maximum ambient temperature range.**

**Ex NOTE:**

Follow the standards EN/IEC 60079-14 when installing the equipment and EN/IEC 60079-25 when connecting Ex i interfaces.

### 3 TRANSPORTATION, RECEPTION AND STORAGE

The valve controller is a sophisticated instrument, handle it with care.

- ☐ Check the controller for any damage that may have occurred during transportation.
- ☐ Store the uninstalled controller preferably indoors, keep it away from rain and dust.
- ☐ Do not unpack the device until installing it.
- ☐ Do not drop or knock the controller.
- ☐ Keep the flow ports and cable glands plugged until installing.
- ☐ Follow instructions elsewhere in this manual.

## 4 MOUNTING

### 4.1 General

**NOTE:**

The enclosure of ND9000 and ND7000 intelligent valve controller meets the IP66 protection class according to EN 60529 in any position when the cable entry is plugged according to IP66.

Based on good mounting practice, the recommended mounting position is electrical connections placed downwards. This recommendation is shown in our mounting position coding for control valves.

If these requirements are not fulfilled, and the cable gland is leaking and the leakage is damaging valve controller or other electrical instrumentation, our warranty is not valid.

**NOTE:**

Make sure the mounting of the device and the valve assembly is suitable for the weight of the assembly.

If the ND is supplied with valve and actuator, the tubes are mounted and the ND adjusted in accordance with the customer's specifications. If the controller is ordered separately, the mounting parts for the assembly must be ordered at the same time.

Sample order: (B1CU13)-Z-ND9\_06HN

The controller is equipped with the Metso flush mounting face (not ND9300), the old Neles mounting face and for connection according to VDI/VDE 3845.

Shaft coupling alternatives for the controller for Metso actuators are shown in Fig. 6.

For mounting parts for Metso actuators, see 12.5–12.10.

### 4.2 Mounting on EC and EJ actuators

See figure in Section 12.5.

#### ND9100, ND7100

- ☐ Mount the U-shaped coupling (47) to the shaft. Apply thread-locking compound to the screws (48) and tighten firmly.
- ☐ Remove all protective plastic plugs (5 pcs.) from all pneumatic connections. Mount the metal plugs (53) to the unused controller connections with sealant. For EJ (single acting, spring to close) and EJA (single acting, spring to open) actuators, mount a metal plug (54) with sealant to the C1 connection at the bottom of the controller.
- ☐ Mount the O-rings (38, 2 pcs.) into the air connections in the bottom of the controller.
- ☐ Mount the O-ring (49) into the square groove in the bottom of the controller.
- ☐ Place the valve controller on top of the actuator so that the pointer of the shaft washer (16) is located in the position shown in Fig. 3.
- ☐ Fasten the screws (4).

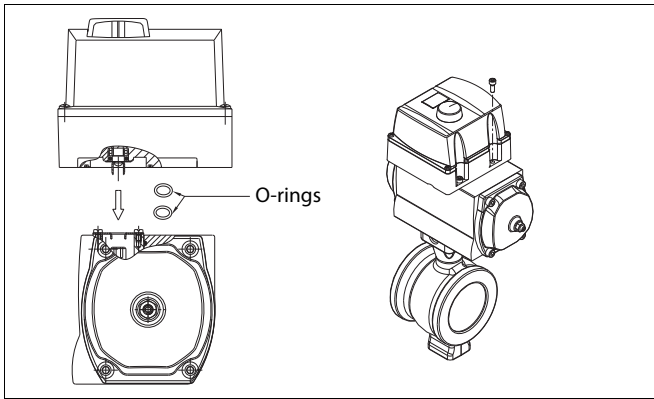


Fig. 3 Mounting on EC and EJ actuators, ND9100 and ND7100

#### ND9200, ND7200

- ❑ Mount the U-shaped coupling (47) to the shaft. Apply thread-locking compound to the screws (48) and tighten firmly.
  - ❑ Remove the protective plastic plugs from pneumatic connections C2, S and C1. Mount the metal plugs (53) to the unused controller connections with sealant.
- For EC (double acting) actuators, remove the metal plugs (54, 2 pcs) from the connections at the bottom of the controller.
- For EJ (single acting, spring to close) and EJA (single acting, spring to open) actuators, leave the metal plug (54) in the C1 connection at the bottom of the controller and remove the metal plug from the C2 connection at the bottom.
- ❑ Mount the O-rings (38, 4 pcs.) into the air connections in the bottom of the controller and the mounting plate (64).
  - ❑ Install the mounting plate (64) on the actuator as shown in 12.5.
  - ❑ Place the valve controller on top of the actuator so that the pointer is located in the position shown in Fig. 4.
  - ❑ Fasten the screws (4).

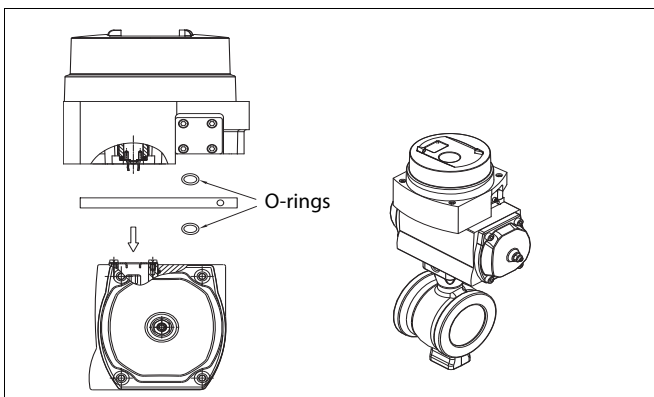


Fig. 4 Mounting on EC and EJ actuators, ND9200 and ND7200

### 4.3 Mounting on Metso actuators with VDI/VDE mounting face

See figures in Section 12.6–12.7.

#### ND9100, ND9400, ND7100

- ❑ Mount the H-shaped coupling (47) to the shaft. Apply the thread-locking compound to the screw (48) and tighten firmly.
- ❑ Remove all protective plastic plugs from the pneumatic connections (5 pcs.). Mount the metal plugs (54) with sealant to the unused controller connections at the bottom of the controller.
- ❑ **BJ and other single acting actuators:** mount a metal plug (53) with sealant to the C1 connection.
- ❑ Set the direction arrow of the actuator in the direction of the valve closure member and attach the ear (2) to the indicator cover in the position shown in Section 12.6-12.7. Secure the screw of the ear using e.g. Loctite and tighten firmly.
- ❑ Attach the bracket (1) to the ND.
- ❑ Attach the bracket (1) to the actuator. The shaft coupling of the ND must fit into the ear (2) so that the pointer of the shaft washer (16) is located in the position shown in Fig. 5.

#### ND9200, ND7200, ND9300

- ❑ Make sure the mounting bracket is suitable for the weight of the controller. See detailed weight information in Section 2.4.
- ❑ **ND9300:** Extra mounting holes exist in the housing for additional support. See dimension drawings for ND9300 in Chapter 13. The use of this extra support is mandatory in addition to the standard face.
- ❑ **ND9300:** Due to the extra weight of stainless steel version and/or possible heavy vibration, make sure there are proper supports in the pipeline to hold the weight of the valve assembly.
- ❑ Mount the H-shaped coupling (47) to the shaft. Apply the thread-locking compound to the screw (48) and tighten firmly.
- ❑ Remove the protective plastic plugs from pneumatic connections C2, S and C1. Leave the metal plugs (54) in the unused connections at the bottom of the controller.
- ❑ **BJ and other single acting actuators:** install a metal plug (53) with sealant to the C1 connection.
- ❑ Set the direction arrow of the actuator in the direction of the valve closure member and attach the ear (2) to the indicator cover in the position shown in Section 12.6-12.7. Secure the screw of the ear using e.g. Loctite and tighten firmly.
- ❑ Attach the bracket (1) to the controller.
- ❑ Attach the bracket (1) to the actuator. The shaft coupling of the controller must fit into the ear (2) so that the pointer is located in the position shown in Fig. 5.

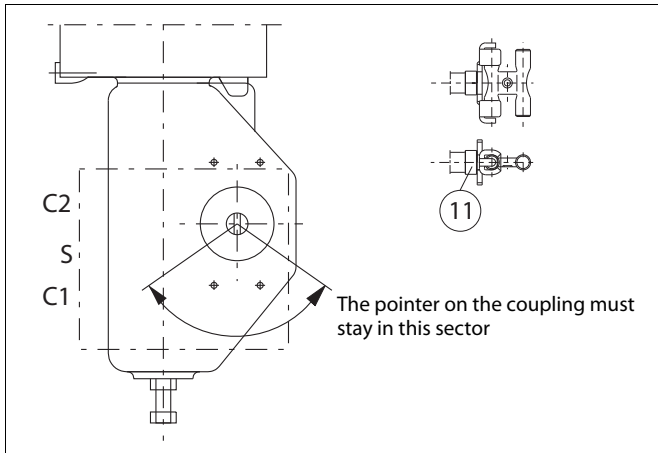


Fig. 5 Mounting on Metso actuator with VDI/VDE mounting face

#### 4.4 Mounting on linear actuator of nelesCV Globe

See figure in Section 12.9

##### ND9100, ND7100

- ❑ Attach the J-shaped feedback lever (47) to the valve controller shaft. Apply the thread-locking compound to the screws and tighten firmly.
- ❑ Remove all plastic plugs from all actuator connections (5 pcs.). Mount the metal plugs (53) to the unused controller connections with sealant.
- ❑ Mount the metal plug (54) with sealant to the connection C1 at the bottom of the controller and mount the O-rings (38, 2 pcs.) to the connections.
- ❑ Attach the mounting plate (39) to the valve controller with screws (28).
- ❑ Mount the conical plug (16) to the lever and select the position on the scale according to the valve stroke.
- ❑ Install the O-ring (31) to the actuator. Place the conical plug into the frame on the stem and tighten the screws (4).

##### ND9200, ND7200

- ❑ Make sure the mounting bracket is suitable for the weight of the controller. See detailed weight information in Section 2.4.
- ❑ Attach the J-shaped feedback lever (47) to the valve controller shaft. Apply the thread-locking compound to the screws and tighten firmly.
- ❑ Remove the protective plastic plugs from pneumatic connections C2, S and C1. Mount the metal plugs (53) to the unused controller connections with sealant.
- ❑ Leave metal plug (54) in the connection C1 at the bottom of the controller. Remove the metal plug (54) from the C2 connection at the bottom. Mount the O-rings (38, 2 pcs.) to the connections.
- ❑ Attach the mounting plate (64) to the valve controller with screws (65).
- ❑ Mount the O-rings (38, 2 pcs.) and attach the mounting plate (39) to the valve controller with screws (28).
- ❑ Mount the conical plug (16) to the lever and select the position on the scale according to the valve stroke.

- ❑ Install the O-ring (31) to the actuator. Place the conical plug into the frame on the stem and tighten the screws (4).

#### 4.5 Mounting on linear actuator with IEC 60534 mounting face

See figure in Section 12.10

##### ND9100, ND9400, ND7100

- ❑ Attach the feedback arm with spacer to the valve controller shaft. Note the position of the mark on the shaft as in 12.10. Apply thread locking compound to the screws and tighten firmly. Attach the spring to the feedback arm as shown in Section 12.10.
- ❑ Mount the valve controller mounting bracket loosely to the yoke of the actuator.
- ❑ Remove all plastic plugs from all actuator connections (5 pcs.). Mount the metal plugs (54) with sealant to the unused controller connections at the bottom of the controller.
- ❑ Mount the valve controller loosely to the mounting bracket guiding the pin on the actuator stem to the slot of the feedback arm.
- ❑ Align the bracket and the valve controller with the actuator stem and adjust their position so that the feedback arm is approximately at a 90° angle to the actuator stem (in the mid-stroke position).
- ❑ Tighten the valve controller mounting bracket screws.
- ❑ Adjust the distance of the valve controller to the pin on the actuator stem so that the pin stays in the lever slot at full stroke. Ensure also that the maximum angle of the lever does not exceed 45° in either direction. Maximum allowed travel of the lever is shown in Section 12.10. Best control performance is achieved when the feedback lever utilises the maximum allowed angle ( $\pm 45^\circ$  from horizontal position). The whole range should be at least 45°.
- ❑ Make sure that the valve controller is in right angle and tighten all the mounting bolts.
- ❑ Ensure that the valve controller complies with previous steps. Check that the actuator pin does not touch the valve controller case throughout the entire stroke of the actuator. If the actuator pin is too long it may be cut to size.
- ❑ Apply grease (Molykote or equivalent) to the contact surfaces of the actuator pin and the feedback arm to reduce wear.

##### ND9200, ND7200, ND9300

- ❑ Make sure the mounting bracket is suitable for the weight of the controller. See detailed weight information in Section 2.4.
- ❑ **ND9300:** Extra mounting holes exist in the housing for additional support. See dimension drawings for ND9300 in Chapter 13. The use of this extra support is mandatory in addition to the standard face.
- ❑ **ND9300:** Due to the extra weight of stainless steel version and/or possible heavy vibration, make sure there are proper supports in the pipeline to hold the weight of the valve assembly.

- ❑ Attach the feedback arm with spacer to the valve controller shaft. Note the position of the pointer on the shaft as in 12.10. Apply thread locking compound to the screws and tighten firmly. Attach the spring to the feedback arm as shown in Section 12.10.
- ❑ Mount the valve controller mounting bracket loosely to the yoke of the actuator.
- ❑ Remove the protective plastic plugs from pneumatic connections C2, S and C1. Leave the metal plugs (54) in the unused connections at the bottom of the controller. Single acting actuators: install a metal plug (53) with sealant to the C1 connection.
- ❑ Mount the valve controller loosely to the mounting bracket guiding the pin on the actuator stem to the slot of the feedback arm.
- ❑ Align the bracket and the valve controller with the actuator stem and adjust their position so that the feedback arm is approximately at a 90° angle to the actuator stem (in the mid-stroke position).
- ❑ Tighten the valve controller mounting bracket screws.
- ❑ Adjust the distance of the valve controller to the pin on the actuator stem so that the pin stays in the lever slot at full stroke. Ensure also that the maximum angle of the lever does not exceed 45° in either direction. Maximum allowed travel of the lever is shown in Section 12.10. Best control performance is achieved when the feedback lever utilises the maximum allowed angle ( $\pm 45^\circ$  from horizontal position). The whole range should be at least 45°.
- ❑ Make sure that the valve controller is in right angle and tighten all the mounting bolts.
- ❑ Ensure that the valve controller complies with previous steps. Check that the actuator pin does not touch the valve controller case throughout the entire stroke of the actuator. If the actuator pin is too long it may be cut to size.
- ❑ Apply grease (Molykote or equivalent) to the contact surfaces of the actuator pin and the feedback arm to reduce wear.

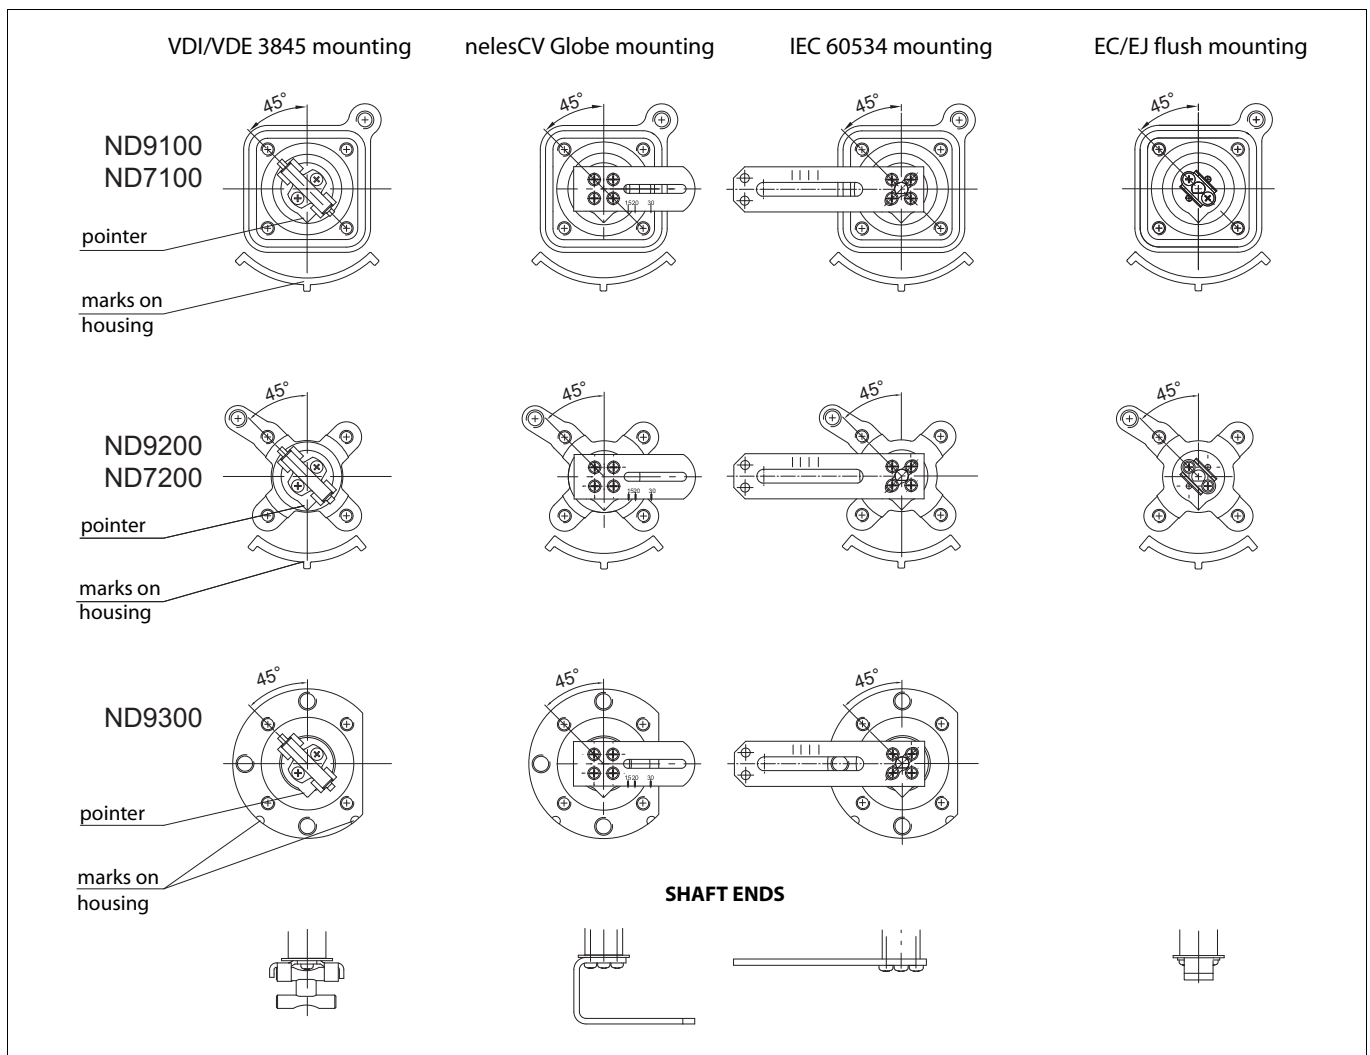


Fig. 6 Shaft coupling alternatives

## 4.6 Piping

### CAUTION:

**Do not exceed the permitted supply pressure (8 bar / 115 psi) of the ND9000 and ND7000!**

Table 4 provides the recommended tube sizes in accordance with actuator sizes. Tube sizes are the minimum values allowed. Operating times may be tested by the FieldCare software.

- ☐ Connect the air supply to S.
- ☐ Connect C1 and C2 to the actuator, see Fig. 7 and 8.
- ☐ If ND9000 or ND7000 is connected direct to the EC or EJ actuator, connections C1 and C2 must be plugged, see 12.7.

Air connections are as follows

ND9100, ND7100: G 1/4

ND9200, ND9300, ND9400, ND7200, : 1/4 NPT

Liquid sealants, such as Loctite 577 are recommended for the pipe threads.

### NOTE:

A valve controller mounted on a spring actuator must be connected only as single-acting. See Fig. 7 and 8.

### NOTE:

An excess of sealant may result in faulty operation of the controller when accessed to pneumatic components.

Sealing tape is not recommended.

Ensure that the air piping is clean.

When pneumatic connector is removed, clean threads carefully from dry sealant particles before mounting connector back.

The air supply must be clean, dry and oil-free instrument air, see Section 2.4.

Table 3 Spring rates

| Actuator type                                                                    | Spring rate (bar/psi) |
|----------------------------------------------------------------------------------|-----------------------|
| B1JK                                                                             | 3 / 43                |
| B1J                                                                              | 4.2 / 61              |
| B1JV                                                                             | 5.5 / 80              |
| QPB                                                                              | 3 / 43                |
| QPC                                                                              | 4.3 / 62              |
| QPD                                                                              | 5.6 / 81              |
| EJK                                                                              | 3 / 43                |
| EJ                                                                               | 4 / 57                |
| EJV                                                                              | 5 / 72                |
| Adjust regulator pressure to a level that is max 1 bar (14.5 psi) + spring rate. |                       |

Table 4 Piping and stroke times

| Actuator    |                                                    |       | ND 2<br>Supply 1/4" NPT<br>Actuator 1/4" NPT |                                     |               | ND 3<br>Supply 1/4" NPT<br>Actuator 1/4" NPT |             |               | ND 6<br>Supply 1/2" NPT<br>Actuator 1/2" NPT |             |               |
|-------------|----------------------------------------------------|-------|----------------------------------------------|-------------------------------------|---------------|----------------------------------------------|-------------|---------------|----------------------------------------------|-------------|---------------|
| B1C         | Stroke volume<br>dm <sup>3</sup> / in <sup>3</sup> | NPT   | Piping                                       | Open<br>(s)                         | Close<br>(s)  | Piping                                       | Open<br>(s) | Close<br>(s)  | Piping                                       | Open<br>(s) | Close<br>(s)  |
| 6           | 0.3                                                | 18    | 1/4                                          | 6 mm or 1/4"                        | 1.6*          | 6 mm or 1/4"                                 | 1.0*        | 1.0*          | –                                            | –           | –             |
| 9           | 0.6                                                | 37    | 1/4                                          | –                                   | –             | 6 mm or 1/4"                                 | 2.0         | 2.0           | –                                            | –           | –             |
| 11          | 1.1                                                | 67    | 3/8                                          | –                                   | –             | 10 mm or 3/8"<br>[6 mm or 1/4" (x)]          | 4.1         | 4.1           | –                                            | –           | –             |
| 13          | 2.3                                                | 140   | 3/8                                          | –                                   | –             | 10 mm or 3/8"                                | –           | –             | –                                            | –           | –             |
| 17          | 4.3                                                | 262   | 1/2                                          | –                                   | –             | –                                            | –           | –             | 10 mm or 3/8"                                | 3.6         | 3.6           |
| 20          | 5.4                                                | 330   | 1/2                                          | –                                   | –             | –                                            | –           | –             | 10 mm or 3/8"                                | 5.0         | 5.0           |
| 25          | 10.5                                               | 610   | 1/2                                          | –                                   | –             | –                                            | –           | –             | 10 mm or 3/8"                                | 9.5         | 9.5           |
| 32          | 21                                                 | 1282  | 3/4                                          | –                                   | –             | –                                            | –           | –             | 10 mm or 3/8"                                | 18.0        | 18.0          |
| 40          | 43                                                 | 2624  | 3/4                                          | –                                   | –             | –                                            | –           | –             | 10 mm or 3/8"                                | 35.0        | 35.0          |
| 50          | 84                                                 | 5126  | 1                                            | –                                   | –             | –                                            | –           | –             | 10 mm or 3/8"                                | 67.0        | 67.0          |
| 60          | 121                                                | 7380  | 1                                            | –                                   | –             | –                                            | –           | –             | 10 mm or 3/8"                                | –           | –             |
| 75          | 189                                                | 11500 | 1                                            | –                                   | –             | –                                            | –           | –             | 10 mm or 3/8"                                | –           | –             |
| 502         | 195                                                | 11900 | 1                                            | –                                   | –             | –                                            | –           | –             | 10 mm or 3/8"                                | 130.0       | 130.0         |
| 602         | 282                                                | 17200 | 1                                            | –                                   | –             | –                                            | –           | –             | 10 mm or 3/8"                                | –           | –             |
| 752         | 441                                                | 26900 | 1                                            | –                                   | –             | –                                            | –           | –             | 10 mm or 3/8"                                | –           | –             |
| B1J<br>B1JA | Stroke volume<br>dm <sup>3</sup> / in <sup>3</sup> | NPT   | Piping                                       | Air<br>(s)                          | Spring<br>(s) | Piping                                       | Air<br>(s)  | Spring<br>(s) | Piping                                       | Air<br>(s)  | Spring<br>(s) |
| 6           | 0.47                                               | 28.7  | 3/8                                          | 10 mm or 3/8"<br>[6 mm or 1/4" (x)] | –             | 10 mm or 3/8"<br>[6 mm or 1/4" (x)]          | –           | –             | –                                            | –           | –             |
| 8           | 0.9                                                | 55    | 3/8                                          | 10 mm or 3/8"<br>[6 mm or 1/4" (x)] | –             | 10 mm or 3/8"<br>[6 mm or 1/4" (x)]          | –           | –             | –                                            | –           | –             |
| 10          | 1.8                                                | 110   | 3/8                                          | –                                   | –             | 10 mm or 3/8"                                | –           | –             | –                                            | –           | –             |
| 12          | 3.6                                                | 220   | 1/2                                          | –                                   | –             | –                                            | –           | –             | 10 mm or 3/8"                                | 3.0         | 5.2           |
| 16          | 6.7                                                | 409   | 1/2                                          | –                                   | –             | –                                            | –           | –             | 10 mm or 3/8"                                | 5.8         | 7.7           |
| 20          | 13                                                 | 793   | 3/4                                          | –                                   | –             | –                                            | –           | –             | 10 mm or 3/8"                                | 9.0         | 14.0          |
| 25          | 27                                                 | 2048  | 3/4                                          | –                                   | –             | –                                            | –           | –             | 10 mm or 3/8"                                | 19.0        | 25.0          |
| 32          | 53                                                 | 3234  | 1                                            | –                                   | –             | –                                            | –           | –             | 10 mm or 3/8"                                | 36.0        | 50.0          |
| 322         | 106                                                | 6468  | 1                                            | –                                   | –             | –                                            | –           | –             | 10 mm or 3/8"                                | 70.0        | 100.0         |
| QP          | Stroke volume<br>dm <sup>3</sup> / in <sup>3</sup> | NPT   | Piping                                       | Air<br>(s)                          | Spring<br>(s) | Piping                                       | Air<br>(s)  | Spring<br>(s) | Piping                                       | Air<br>(s)  | Spring<br>(s) |
| 1C          | 0.62                                               | 37    | 3/8                                          | 10 mm or 3/8"<br>[6 mm or 1/4" (x)] | –*            | 10 mm or 3/8"<br>[6 mm or 1/4" (x)]          | 1.2*        | 2.1*          | –                                            | –           | –             |
| 2C          | 1.08                                               | 66    | 3/8                                          | –                                   | –             | 10 mm or 3/8"                                | 2.4         | 3.0           | –                                            | –           | –             |
| 3C          | 2.18                                               | 133   | 3/8                                          | –                                   | –             | 10 mm or 3/8"                                | 4.8         | 5.2           | –                                            | –           | –             |
| 4C          | 4.34                                               | 265   | 3/8                                          | –                                   | –             | –                                            | –           | –             | 10 mm or 3/8"                                | 3.2         | 3.7           |
| 5C          | 8.7                                                | 531   | 3/8                                          | –                                   | –             | –                                            | –           | –             | 10 mm or 3/8"                                | 7.5         | 11.0          |
| 6C          | 17.5                                               | 1068  | 3/4                                          | –                                   | –             | –                                            | –           | –             | 10 mm or 3/8"                                | 12.0        | 20.0          |

Air supply piping 10 mm or 3/8" for all actuators.

Pipe sizes are nominal, i.e. approximately outer diameter. Inner diameter is typically 2 mm smaller.

x = Standard pipe size used in Neles control valves.

(x) = Minimum pipe size (if smaller than standard).

\*) Spool size 2 is preferred for accurate control and standard for Neles control valves.


Spool size 3 can be used if fast full stroke times are required.

Stroking times have been measured without valve.

Tests have been done with supply pressure of 5 bar.

## DOUBLE-ACTING ACTUATOR

1. Increasing input signal to open valve (shown)

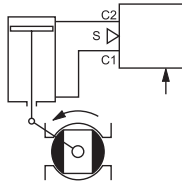


Default setting:  
 DIR = OPE  
 ROT = cC (close valve to clockwise)  
 ATYP = 2-A  
 PFA = CLO  
 A0, CUTL and VTYP according to valve type

2. Increasing input signal to close valve (**not recommended**)

Default setting:  
 DIR = CLO  
 ROT = cC (close valve to clockwise)  
 ATYP = 2-A  
 PFA = CLO  
 A0, CUTL and VTYP according to valve type

## DOUBLE-ACTING ACTUATOR, REVERSED PIPING

3. Increasing input signal to open valve (**not recommended**)

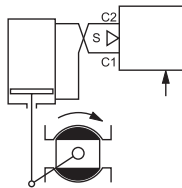


Default setting:  
 DIR = OPE  
 ROT = cC (close valve to clockwise)  
 ATYP = 2-A  
 PFA = OPE  
 A0, CUTL and VTYP according to valve type

4. Increasing input signal to close valve (shown)

Default setting:  
 DIR = CLO  
 ROT = cC (close valve to clockwise)  
 ATYP = 2-A  
 PFA = OPE  
 A0, CUTL and VTYP according to valve type

## SINGLE-ACTING ACTUATOR, SPRING TO CLOSE

5. Increasing input signal to open valve (shown)

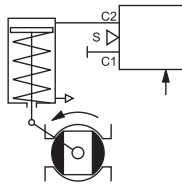


Default setting:  
 DIR = OPE  
 ROT = cC (close valve to clockwise)  
 ATYP = 1-A  
 PFA = CLO (must be in the spring direction)  
 A0, CUTL and VTYP according to valve type

6. Increasing input signal to close valve (**not recommended**)

Default setting:  
 DIR = CLO  
 ROT = cC (close valve to clockwise)  
 ATYP = 1-A  
 PFA = CLO (must be in the spring direction)  
 A0, CUTL and VTYP according to valve type

## SINGLE-ACTING ACTUATOR, SPRING TO OPEN

7. Increasing input signal to close valve (shown)

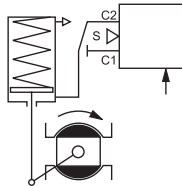

Default setting:  
 DIR = CLO  
 ROT = cC (close valve to clockwise)  
 ATYP = 1-A  
 PFA = OPE (must be in the spring direction)  
 A0, CUTL and VTYP according to valve type

8. Increasing input signal to open valve (**not recommended**)


Default setting:  
 DIR = OPE  
 ROT = cC (close valve to clockwise)  
 ATYP = 1-A  
 PFA = OPE (must be in the spring direction)  
 A0, CUTL and VTYP according to valve type

Fig. 7 Operation directions and air connections, ND9000H and ND7000H



## DOUBLE-ACTING ACTUATOR


## 1. Self closing

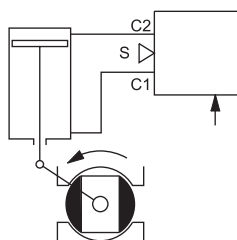

Default setting:  
 ROT = cC (close valve to clockwise)  
 ATYP = 2-A  
 PFA = CLO  
 A0, CUTL and VTYP according to valve type

## DOUBLE-ACTING ACTUATOR, REVERSED PIPING


## 2. Self opening

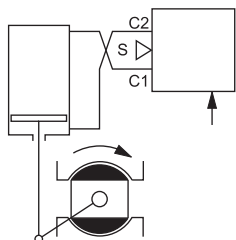

Default setting:  
 ROT = cC (close valve to clockwise)  
 ATYP = 2-A  
 PFA = OPE  
 A0, CUTL and VTYP according to valve type

## SINGLE-ACTING ACTUATOR, SPRING TO CLOSE


## 3. Self closing

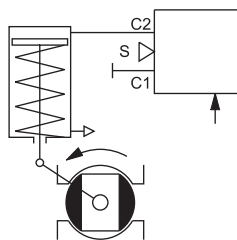

Default setting:  
 ROT = cC (close valve to clockwise)  
 ATYP = 1-A  
 PFA = CLO (must be in the spring direction)  
 A0, CUTL and VTYP according to valve type

## SINGLE-ACTING ACTUATOR, SPRING TO OPEN

## 4. Self opening

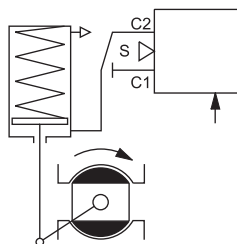

Default setting:  
 ROT = cC (close valve to clockwise)  
 ATYP = 1-A  
 PFA = OPE (must be in the spring direction)  
 A0, CUTL and VTYP according to valve type

Fig. 8 Operation directions and air connections, ND9000F and ND9000P

## 4.7 Electrical connections

### ND9000H, ND7000H

The ND9000H and ND7000H is powered by a standard 4–20 mA current loop that also functions as a carrier to the HART communication.

The input signal cable is led through a

- ☐ M20 x 1.5 cable gland, or
- ☐ 1/2 NPT cable gland (U, E2)

Connect the conductors to the terminal strip as shown in Fig. 9. It is recommended that the earthing of the input cable shield be carried out from the DCS end only.

The position transmitter is connected to 2-pole terminal PT as shown in Fig. 9. The position transmitter needs an external power supply. The ND9000H / ND7000H and the position transmitter circuits are galvanically isolated and withstand a 600 V AC voltage.

#### NOTE:

The ND9000H and ND700H equal a load of 485  $\Omega$  in the current loop.

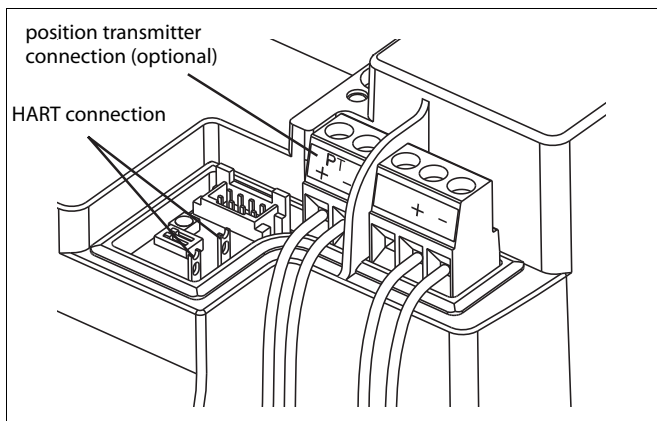


Fig. 9 Terminals, ND9000H and ND7000H

### ND9000F, ND9000P

The ND9000F is powered by FOUNDATION fieldbus (IEC 61158-2).

The ND9000P is powered by Profibus PA (IEC 61158-2).

The same bus cable is used also for the fieldbus communication.

The bus cable is led through a

- ☐ M20 x 1.5 cable gland, or
- ☐ 1/2 NPT cable gland (U, E2)

Connect the conductors to the terminal strip as shown in Fig. 10.

Reverse polarity protection permits connection of the bus cables in any order.

The cable shield can be grounded by connecting the shield to the earth connection screw. The shield can be left unconnected by using the empty terminal.

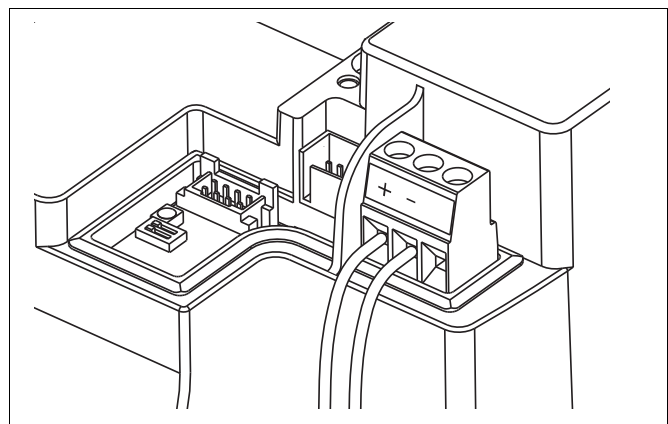


Fig. 10 Terminals, ND9000F and ND9000P

**Please note following before mounting the cover of the valve controller:**

- ☐ Attach the LUI (223) cabling to the sticker on the reverse side of the LUI.  
Check that the cabling does not get squeezed by the electronics cover (39) or the device cover (100).
- ☐ Check using a feeler gauge that the clearance between the position indicator (109) and the electronics cover is 1 mm.

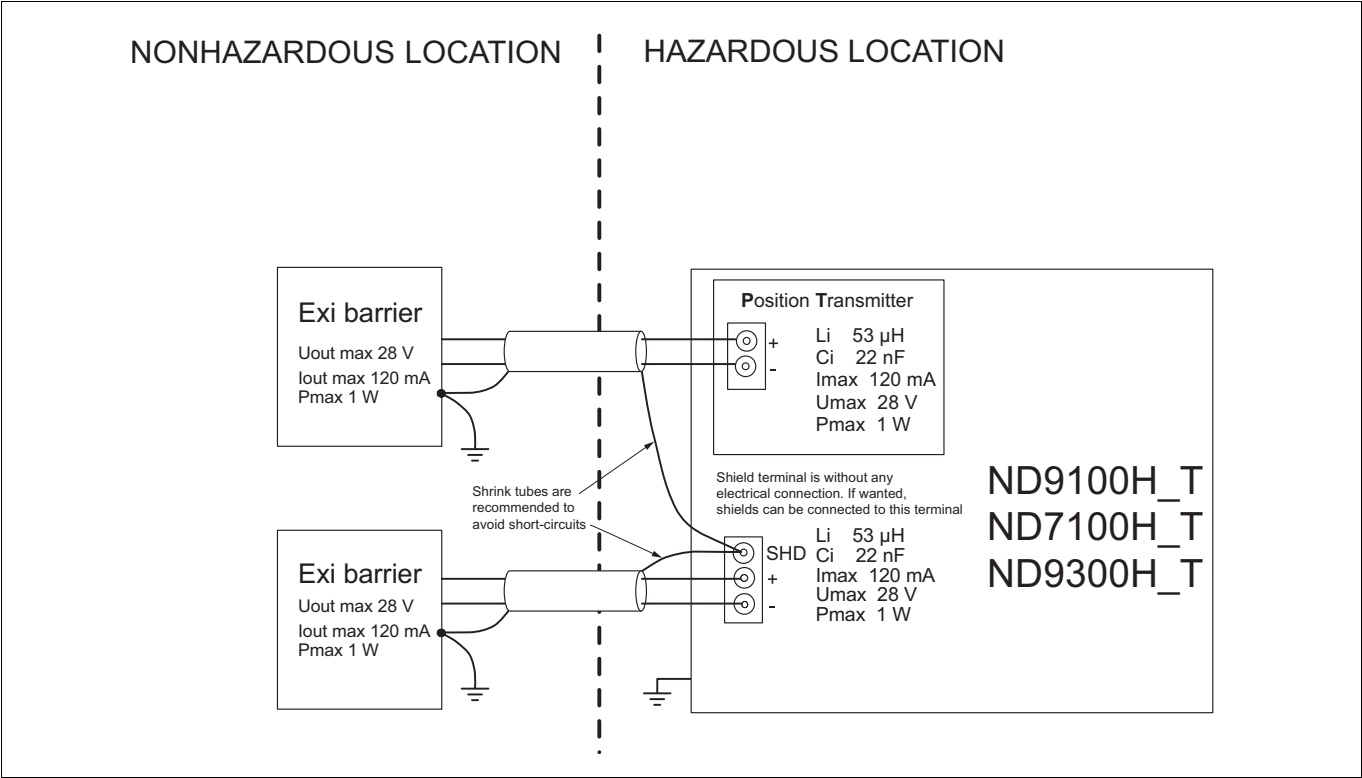


Fig. 11 Control wiring, ND9000 and ND7000, Ex i

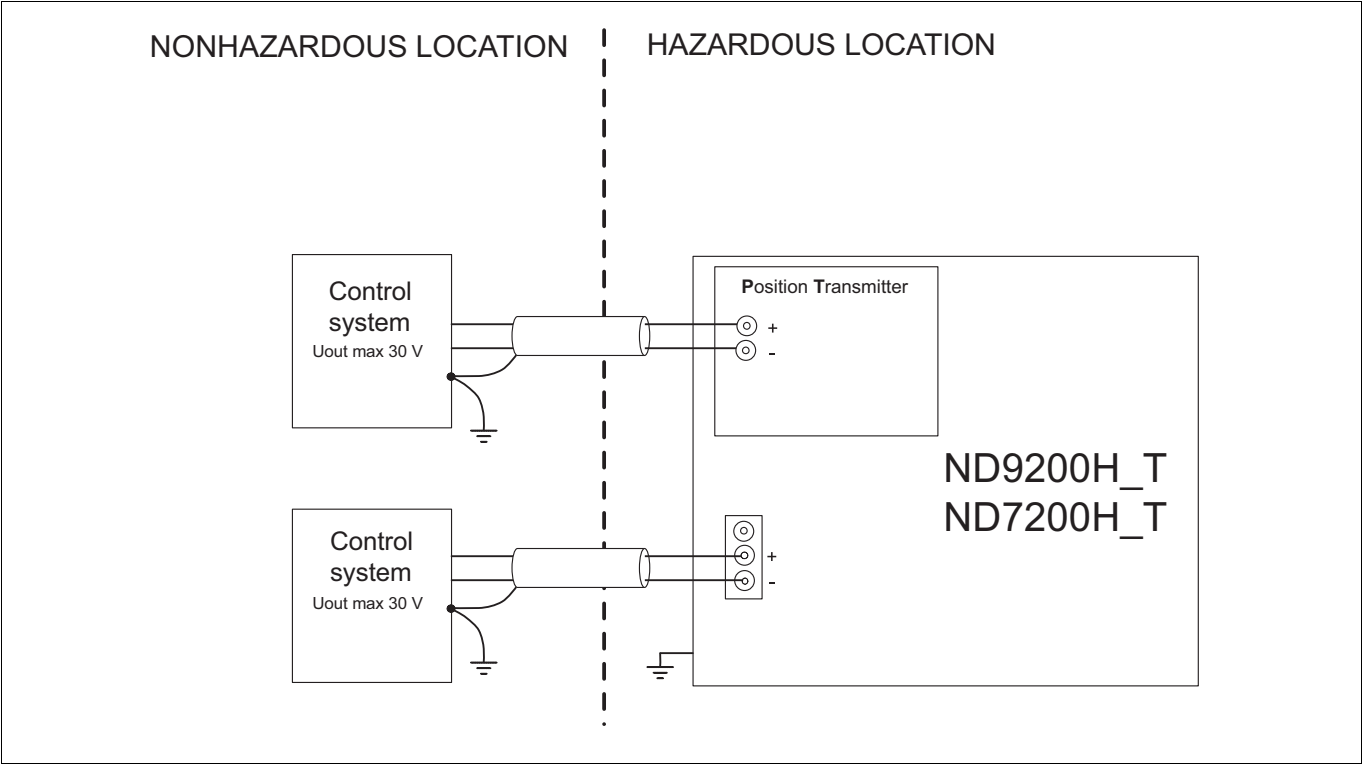


Fig. 12 Control wiring, ND9000 and ND7000, Ex d

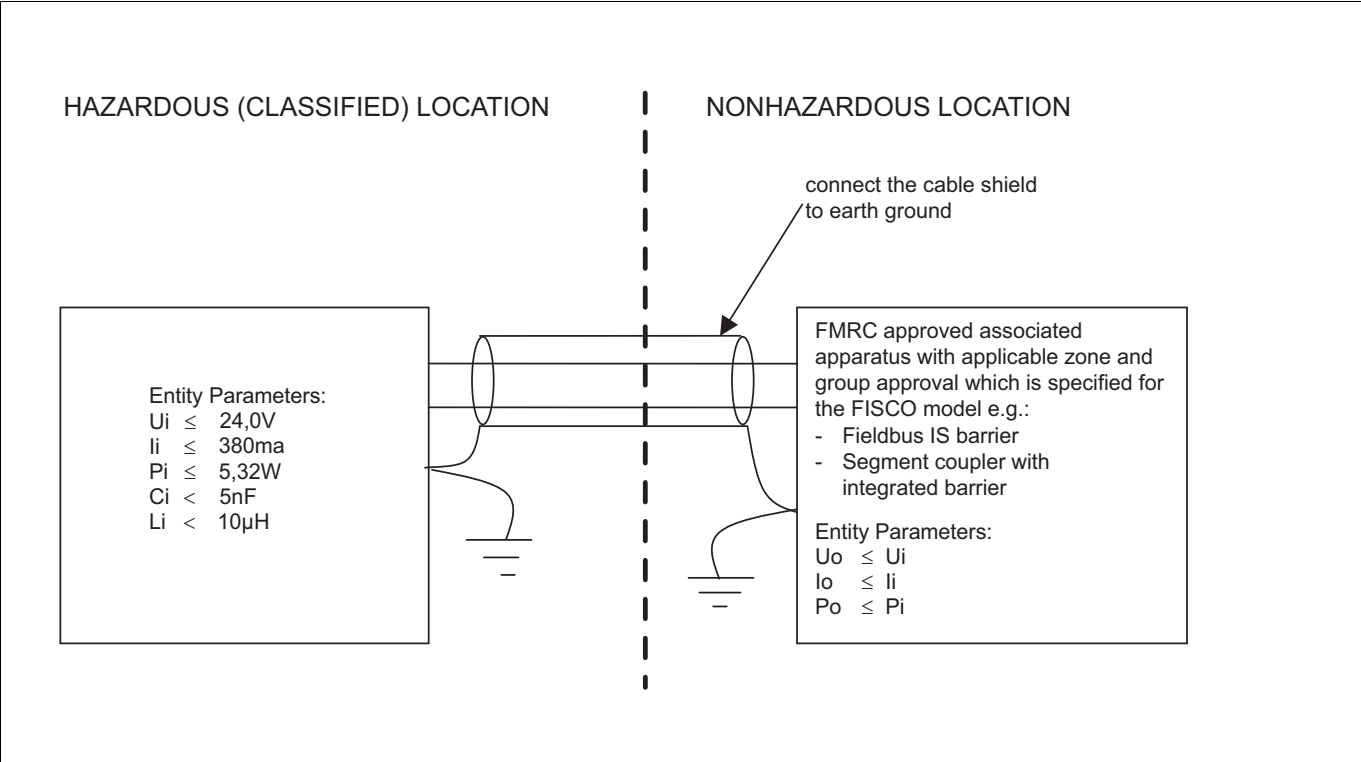


Fig. 13 Control wiring, ND9000F and ND9000P, Ex i

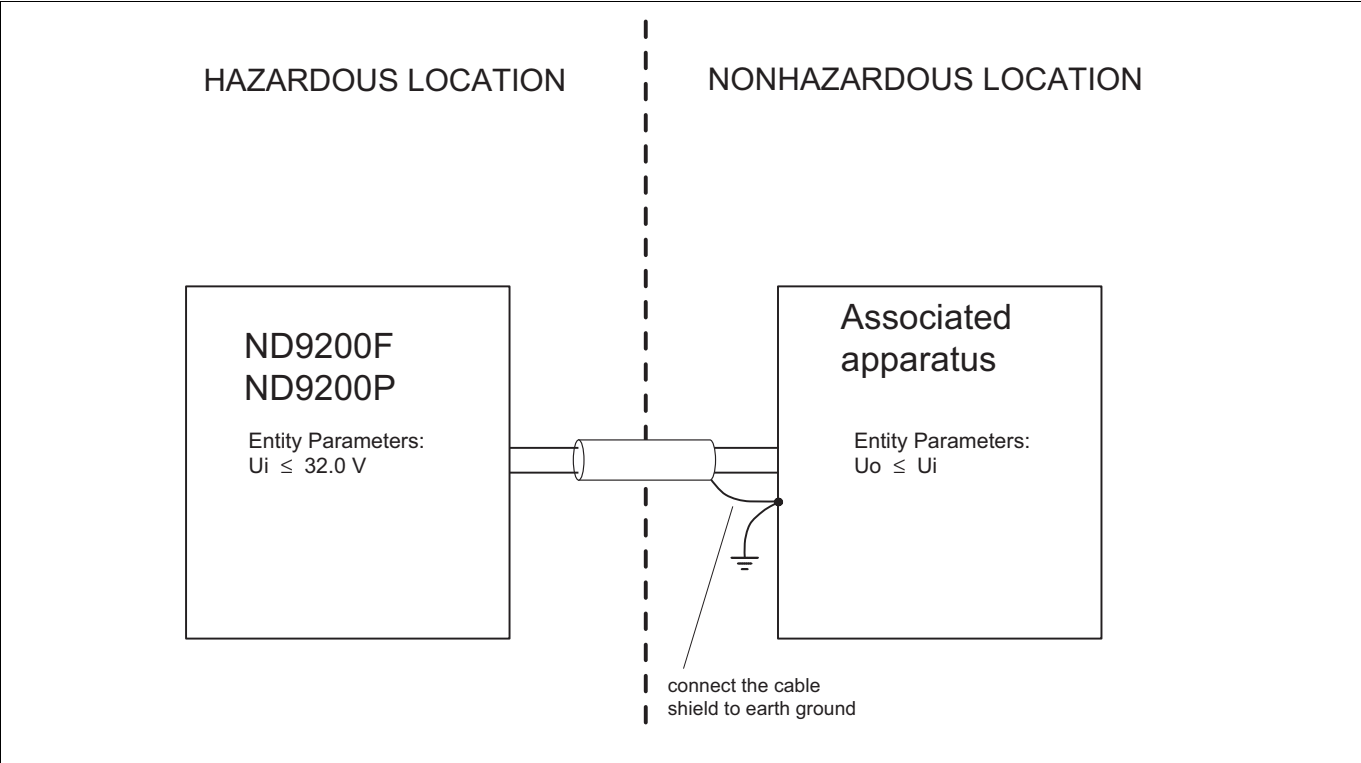


Fig. 14 Control wiring, ND9000F and ND9000P, Ex d

### 4.7.1 Remote mounting

#### ND9100H, ND9100F, ND9100P, ND7100H

For applications if there is e.g. heavy vibrations, environment temperature is very high or access is difficult, there is available remote position measurement option. In this kind of applications position sensor is attached to actuator and ND9000 can be installed further away. Pneumatic piping between ND9000 and actuator is done as explained in chapter 4.6 and wiring between position sensor and ND9000 according to Fig. 13.

There are three different cable lengths available between ND9000 and remote position sensor: 1.2m, 3m and 30m.

If position sensor is remote mounted to linear actuator, there are some parameters which have to be defined as following:

- ☐ valve acting type (VTYP) have to be defined as rotary
- ☐ valve rotation direction (ROT) have to be defined as Clockwise to Close (CC)

Remote position sensor for rotary actuators is available also with limit switch.

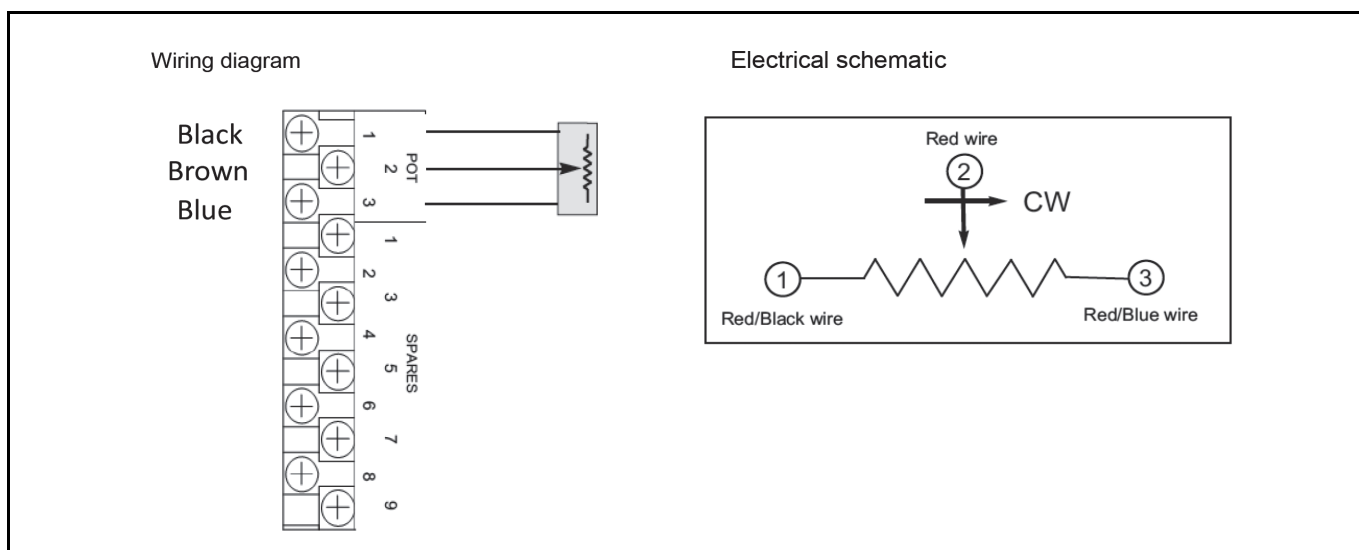


Fig. 15 Pin assignment in female connector view (connector in device)

#### Pin assignement

| Pin# | Function                     |
|------|------------------------------|
| 1    | Cable Shield Ground (Ground) |
| 2    | Potentiometer Plus (Blue)    |
| 3    | Potentiometer Center (Brown) |
| 4    | Potentiometer Minus (Black)  |


### 4.7.2 Quartz position sensor connections and calibration



#### Potentiometer Calibration

1. Operate the actuator to the desired "zero" position. Connect an ohm meter across the terminals POT 1 & POT 2 to measure the potentiometer output.
2. Loosen the bottom set screw and rotate the coupling until the ohm meter reads approximately 5k Ohms (assuming a 10K Ohm potentiometer). Retighten the set screw and verify the ohm meter still reads approximately 5k Ohms.
3. Operate the actuator to the desired "100 %" position (assuming 90 degree rotation) and verify the ohm meter reads (2.7K Ohms or 7.7K Ohms +/- 10 %, depending on rotation direction).
4. Remove all test equipment.


5. Connect the position sensor cable to the terminal strip as shown in the above wiring diagram.
6. Connect the connector end of the position sensor cable to the ND9000 female connector shown in Fig. 13.

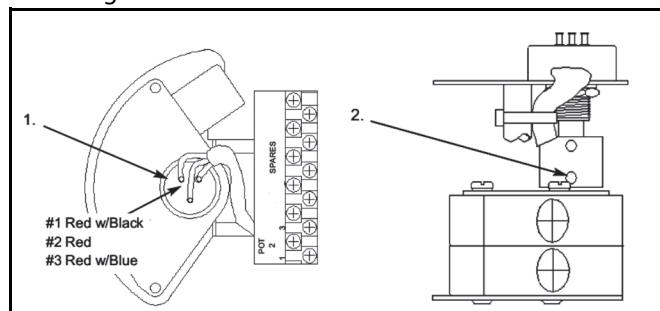


### 4.7.3 Remote mounting by using Metso ReC

If there is 4-20mA output from the position sensor, that can't be connected directly to ND9100R. This kind of cases there have to be ReC adapter which converts position signal suitable for ND9100 like shown in schematic picture

Connection terminals in Rec adapter:

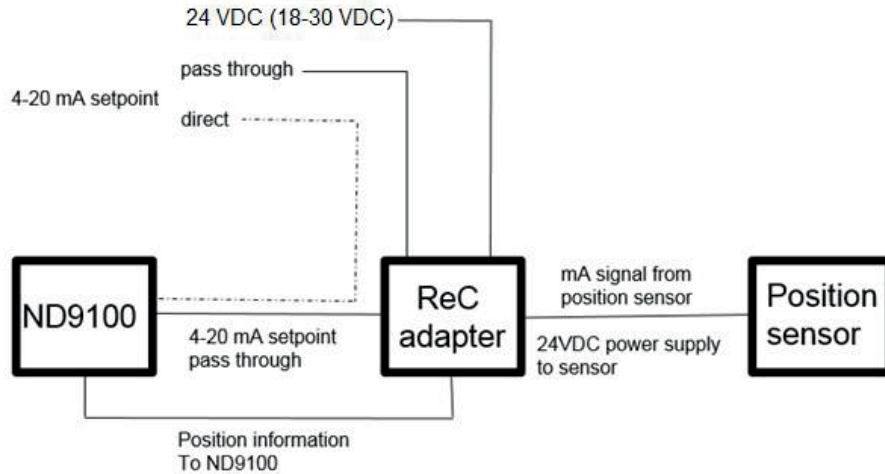

Connection terminals in Rec adapter

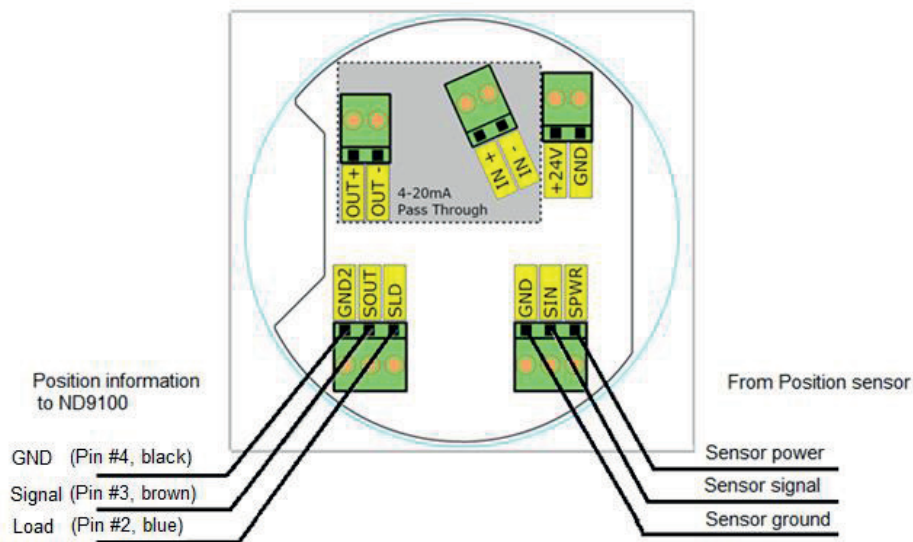

#### NOTES:

1. Cut the ND9 cable (RC01, RC02 or RC03) and the Position sensor cable to optimal length for your application. Then connect the individual wires as shown in connection diagram.
2. Connect positioner control (4...20mA) signal directly to ND or alternatively to Pass through terminals IN+/IN-, and Metso ND9 control input cable to OUT+/OUT-.
  - 4-20mA Pass Through connectors positive (+) terminals are internally shorted, and negative (-) terminals are internally shorted.
3. Connector with "+24V" and "GND" shall be supplied from external 24V (nominal 24 VDC, range is 18-30 VDC) voltage supply. This supply is powering the converter and the external position sensor.
4. Use proper cable gland or blind plug for each cable entry.

## 5 LOCAL USER INTERFACE (LUI)

The local user interface may be used to monitor the device behaviour as well as configuring and commissioning the controller during installation and normal operation. The local user interface consists of 2 row LCD and 4 button keypad interface. There are also custom graphical characters for special conditions.

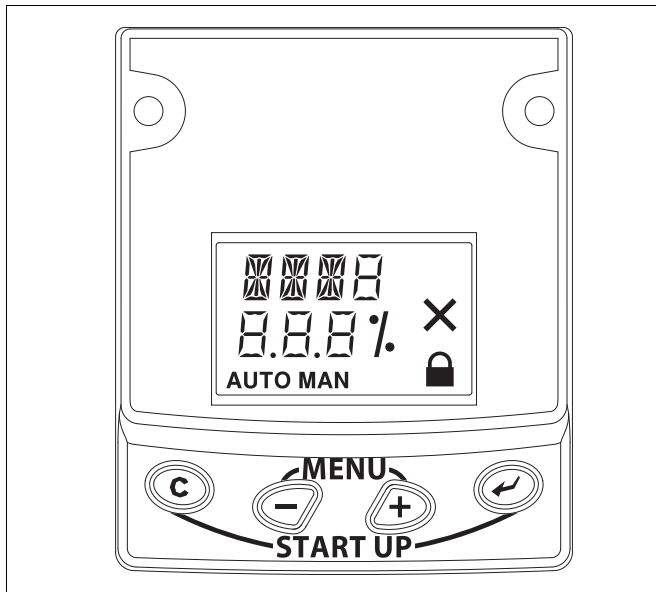


Fig. 16 Local user interface (LUI)

### 5.1 Measurement monitoring

When the device is powered, it enters the measurement monitoring view. The following measurements may be viewed from the display. The Table 5 identify the default unit and also optional unit of the measurement.

Table 5 Default / optional units of measurements

| Measurement                              | Default unit               | Optional unit                     |
|------------------------------------------|----------------------------|-----------------------------------|
| valve position                           | Percentage (of full scale) | Angle, where 0 % refers to 0 deg. |
| target position                          | Percentage (of full scale) | none                              |
| current loop setpoint (ND9000H, ND7000H) | mA                         | Percentage (of full scale)        |
| setpoint (ND9000F, P)                    | Percentage (of full scale) |                                   |
| actuator pressure difference             | bar                        | psi                               |
| supply pressure                          | bar                        | psi                               |
| device temperature                       | degree Celsius             | degree Fahrenheit                 |

If the unit selection is altered from the FieldCare software to US units, the pressure default unit will automatically be changed to psi and temperature unit to Fahrenheit.

The active unit may be changed by pressing the key constantly. The display shows the current unit selection on the top row of the display. You may change the selection by pressing or key while keeping the key pressed down. When the buttons are released the current selection will be activated.

If the device has been idle for 1 hour, and there is no user activity on the local user interface, the measurements will start scrolling on the display. This enables the user to view all the measurements through the window of the main cover.

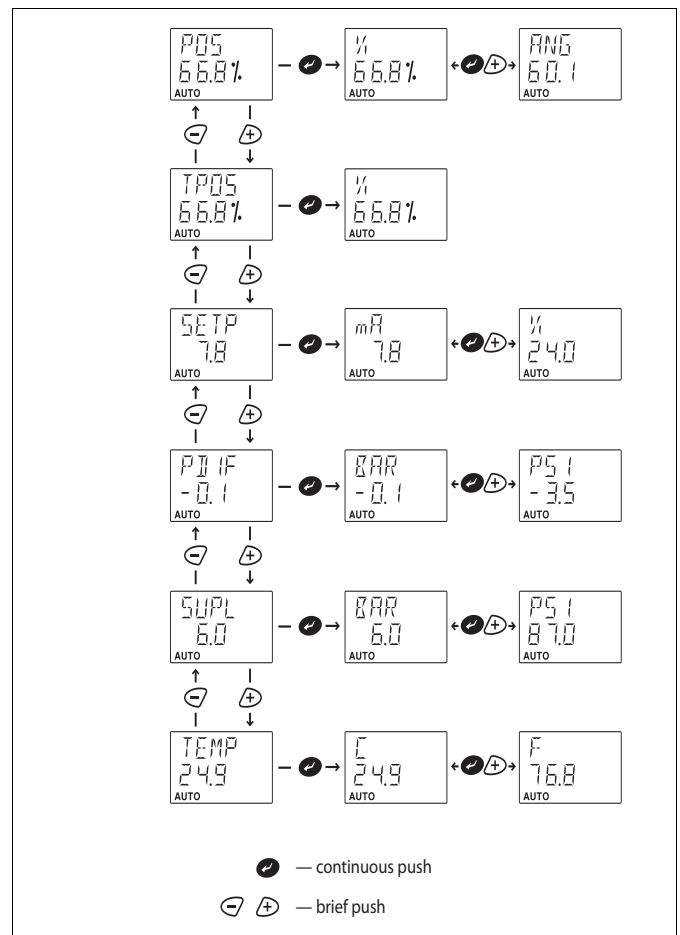


Fig. 17 Measurement unit change, ND9000H and ND7000H

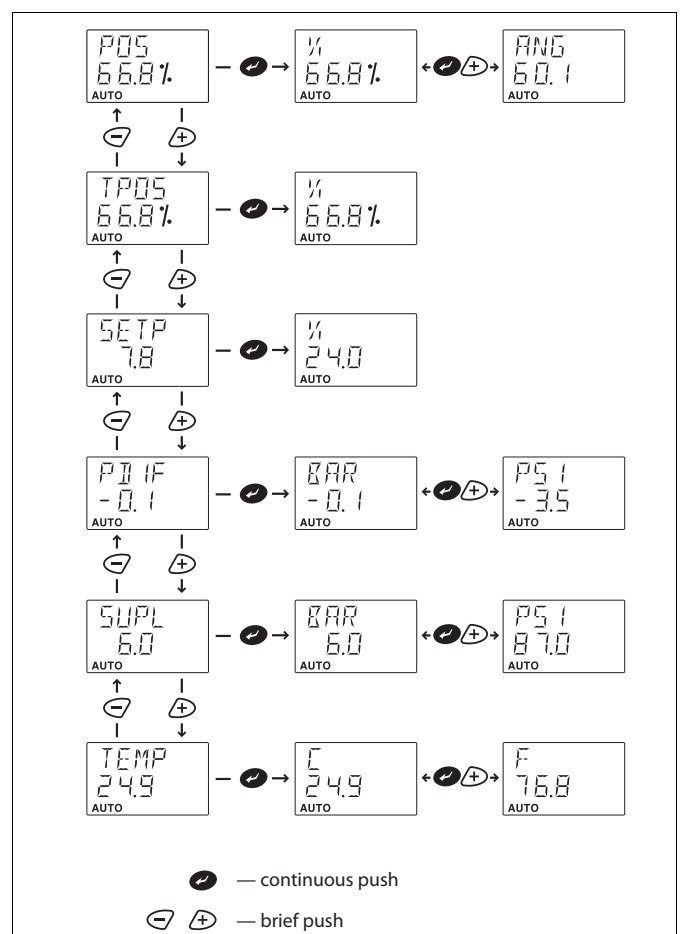


Fig. 18 Measurement unit change, ND9000F and ND9000P

## 5.2 Guided start-up

Guided startup offers a fast view of the most critical parameters of the ND controller, actuator and valve configuration. After verifying the parameters the valve travel calibration is recommended. The guided start-up is entered by pressing the  $\odot$  and  $\ominus$  keys simultaneously.

The configuration parameters are listed in following order, see explanation from 5.5:

|                          |                    |
|--------------------------|--------------------|
| Valve type               | VTYP               |
| Actuator type            | ATYP               |
| Positioner fail action   | PFA                |
| Valve rotation direction | ROT                |
| Valve dead angle         | A0                 |
| PA address               | ADR (ND9000P only) |

If you modify any of the parameters you will also need to calibrate the device. See 5.6 for detailed description.

### NOTE:

You may cancel any action by pressing the  $\odot$  button. Cancelling of operation returns user interface view one level up in menu hierarchy.

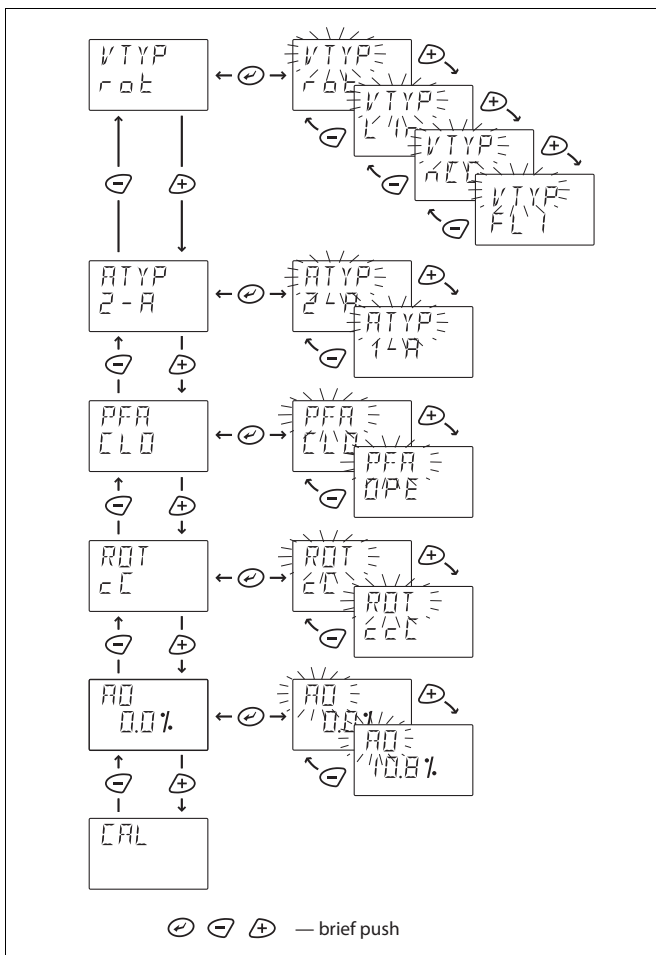


Fig. 19 Guided start-up, ND9000H, ND7000H and ND9000F

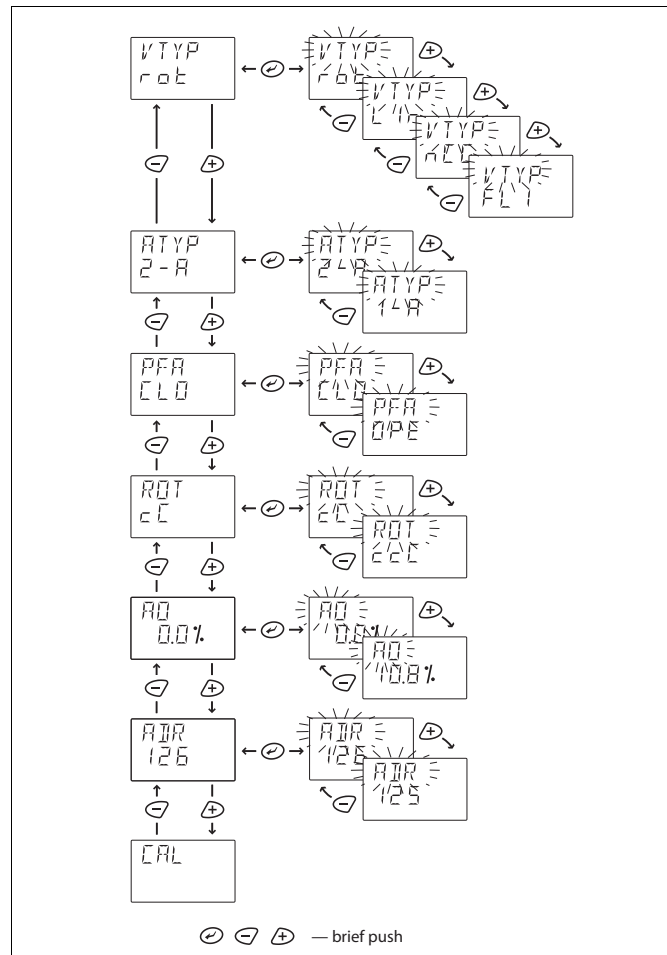


Fig. 20 Guided start-up, ND9000P

## 5.3 Configuration menu

The local user interface is organised in a menu structure. To enter the menus press  $\oplus$  and  $\ominus$  keys simultaneously in the measurement monitoring view panel. To move to the next or previous selection by pressing  $\oplus$  or  $\ominus$  key accordingly.

## 5.4 Mode menu

If the user wants to change the valve operating mode, press the  $\odot$  key at the *MODE* selection. The *MODE* will start to flash and by pressing  $\oplus$  or  $\ominus$  key you may alter the operation mode selection. User accepts the current selection by pressing the  $\odot$  key.

There are two options for the operating mode.

### 5.4.1 AUTO

During the auto mode, the controller controls the valve position according to the incoming setpoint signal from the 4–20 mA signal source or from the bus.



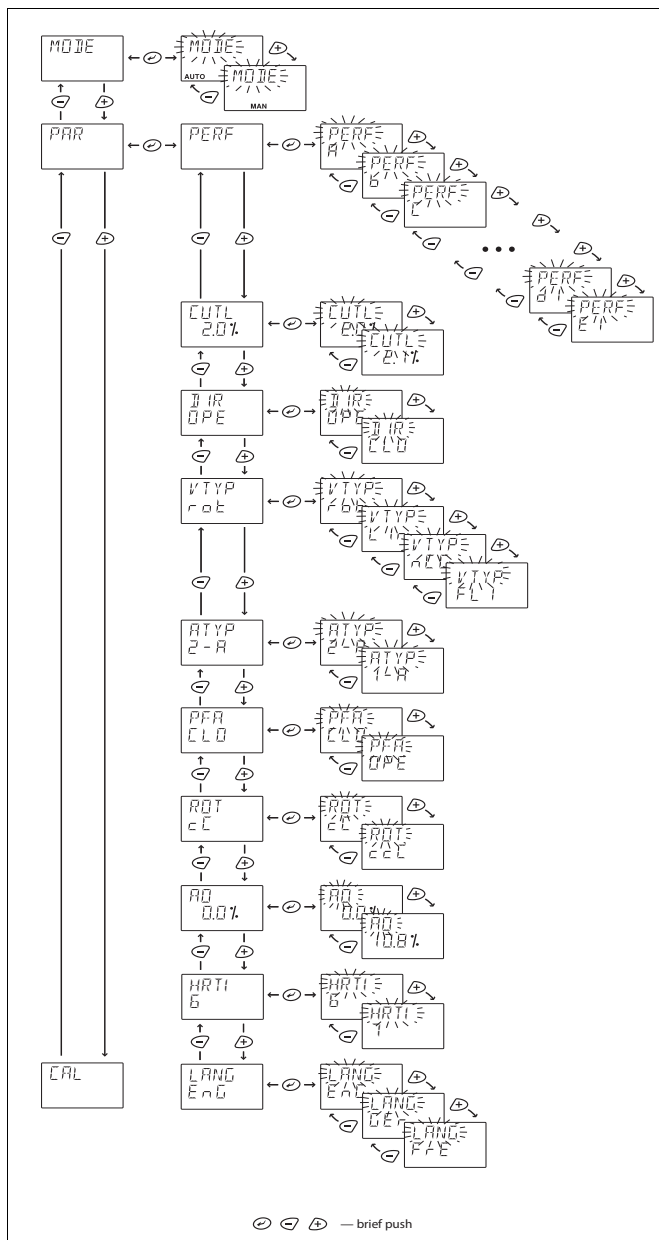


Fig. 21 Configuration, ND9000H and ND7000H

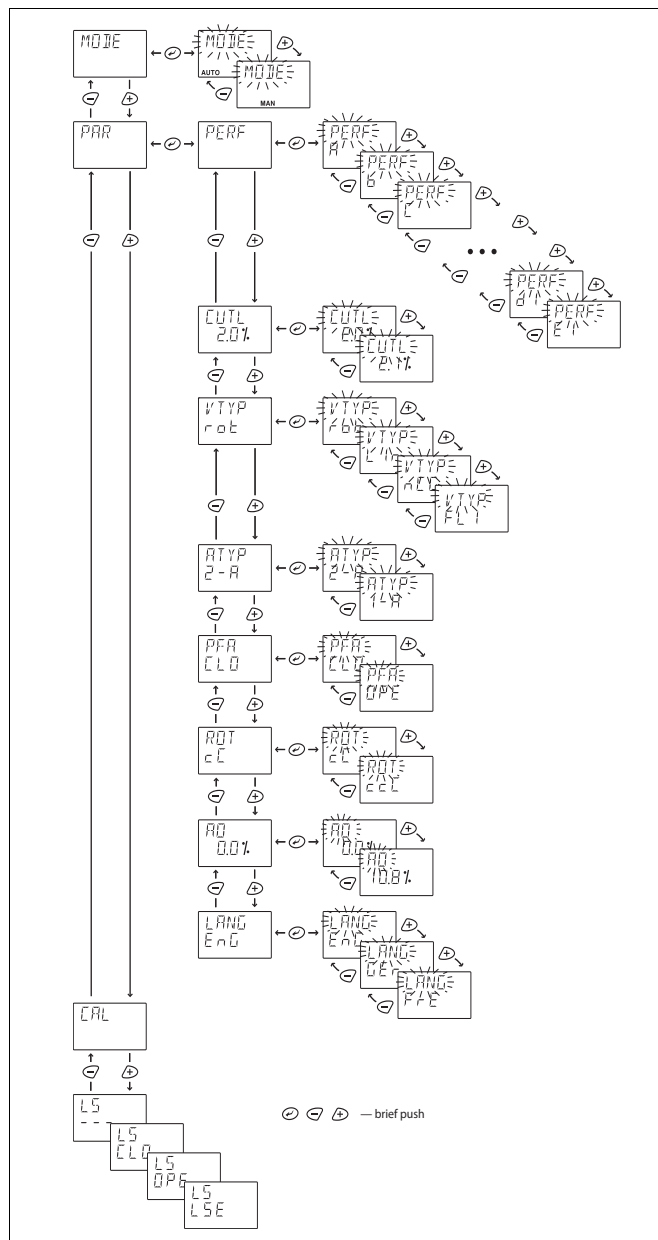


Fig. 22 Configuration, ND9000F

### 5.4.2 MAN

During this mode the valve position may be controlled manually by using the keypad and pressing the  $\rightarrow$  or  $\leftarrow$  key. The position of the manually driven valve is not saved in the memory of the controller, i.e. the valve will not return to the same position after signal failure. However, the valve may be driven back into position after signal failure by using  $\rightarrow$  and  $\leftarrow$  keys. The manual control starts from the current position of the valve after the MAN-mode is activated. In order to change the manual setpoint return to the measurement monitoring view and go to target position measurement. Press the  $\odot$  key shortly to activate the target position editing, text *TPOS* starts to blink and now you are able to edit the setpoint by pressing  $\rightarrow$  or  $\leftarrow$  key. The setpoint changes in 0.1 % increments/decrements in spite of the selected unit and the valve starts to move immediately. A continuous push changes the setpoint faster. In order to view other measurements, press the  $\odot$  or  $\odot$  key and select a measurement. Repeat the previous steps if you would like to alter the setpoint value again.

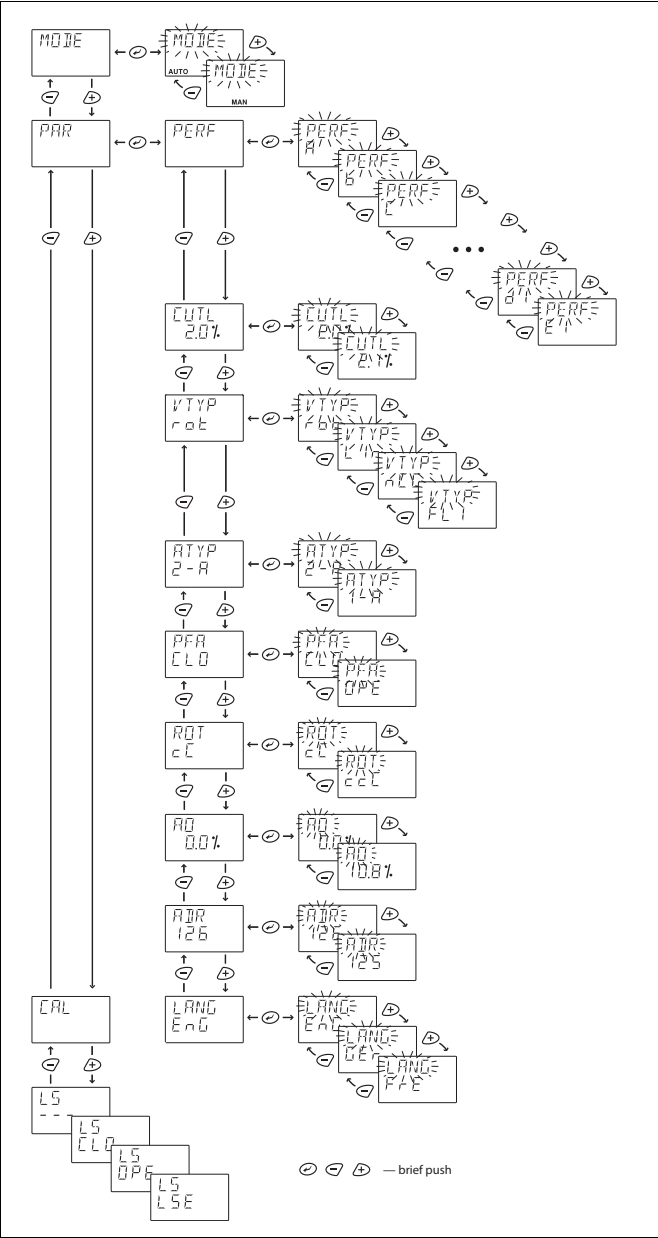


Fig. 23 Configuration, ND9000P

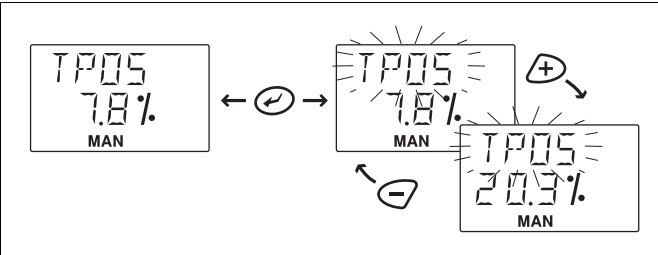


Fig. 24 Setpoint change in MAN mode

5.5 Configuration parameters

When *PAR* is on the display you may enter the configuration menu by pressing the key. In this menu the most important configuration and signal modification parameters are viewable. You may view the current value and edit them by pressing the key at the relevant parameter. The name of the parameter will appear on the upper row of the display and the current value is on the lower row.

5.5.1 Performance level, *PERF*

If you want to change the tuning of the valve position control, the *PERF* selection is available. The default factory value is *E*.

- Once *PERF* is displayed press the key to enter the edit state and *PERF* starts to blink.
- Select between five values by pressing the or key.

Table 6 Performance level

| Selection | Meaning           | Description                                                       |
|-----------|-------------------|-------------------------------------------------------------------|
|           | Aggressive        | Immediate response to signal changes, overshoots                  |
|           | Fast              | Fast response to signal changes, small overshooting               |
|           | Optimum           | Very small overshoot with minimum step response time              |
|           | Stable            | No overshooting, slow response to input signal changes            |
|           | Maximum stability | No overshooting, deadband may increase, slow but stable behaviour |

For use with volume boosters and/or very fast actuators, additional performance levels A1 to D1 can be used. Characteristics of these extended levels are the same as those in the table above. However, with performance level settings A1 to D1, adaptive properties of the ND control algorithm are disabled.

- After the desired value is displayed, press the key to conclude the operation.

5.5.2 Low cut-off, *CUTL*

Low cut-off safety range *CUTL* ensures the valve closing against mechanical travel stops. The factory default value is 2 %.

- Once *CUTL* is displayed press the key to enter the edit state and the *CUTL* will start to blink. The currently selected value appears as a percentage (%) on the display
- Modify the parameter value by pressing or keys alternately until the desired value appears on the display.
- After the desired value is displayed, press the key to conclude the operation.

5.5.3 Signal direction, *IIR*

ND9000H, ND7000H

The opening and closing direction of the valve with raising current loop signal is defined by signal direction parameter *IIR*.

- When *IIR* is displayed press the key to enter the edit state and *IIR* starts to blink.
- Select either the *OPE* or *CLD* values by pressing the and keys. The value *OPE* signifies the raising signal 4–20 mA to open the valve and *CLD* means the raising signal to close the valve.
- To conclude, press the key when the desired value is shown on the display.

See default values in Fig. 7 and 8.

### 5.5.4 Valve type, $VTYPE$

To compensate for nonlinearity of the position feedback caused by the actuator linkage mechanism of a linear control valve, the appropriate selection must be made on the  $VTYPE$  display.

- ❑ After selecting  $VTYPE$  on the display, press the  $\odot$  key to enter the edit state and the  $VTYPE$  starts to blink.
- ❑ Select between four values  $rot$ ,  $Lin$ ,  $nEG$  or  $FLI$  using the  $\oplus$  and  $\ominus$  keys. The value  $rot$  indicates a rotary valve and  $Lin$  a linear valve. Use  $nEG$  only for nelesCV Globe valves to accommodate special linkage geometry. Use  $FLI$  only for linear valves when linkage geometry is needed to be corrected by valve controller.
- ❑ To conclude press the  $\odot$  key when the desired value is shown on the display.

**NOTE:**

Perform valve calibration always when  $VTYPE$  has been changed.

### 5.5.5 Actuator type, $ATYPE$

In order to optimise the control performance the device needs to be informed about the actuator type.

- ❑ After selecting  $ATYPE$  on the display, press the  $\odot$  key to enter the edit state and  $ATYPE$  starts to blink.
- ❑ Select between two values  $2-A$  or  $1-A$  using the  $\oplus$  and  $\ominus$  keys. The value  $2-A$  indicates a double acting actuator and  $1-A$  a single acting actuator.
- ❑ To conclude press the  $\odot$  key when the desired value is shown on the display.

**NOTE:**

Perform valve calibration always when  $ATYPE$  has been changed.

### 5.5.6 Positioner fail action, $PFA$

Positioner fail action will take place in case of signal failure or when the controller software discovers a fatal device failure. For single acting actuators set value in the spring direction. For double acting actuators see Fig. 7 and 8 for correct settings.

- ❑ Once  $PFA$  is displayed, press the  $\odot$  key to enter the edit state and the  $PFA$  will start blinking.
- ❑ You may select between two values by pressing the  $\oplus$  or  $\ominus$  key. The  $CLO$  value indicates that the valve ought to be closed in fail action situations. The  $OPE$  value indicates the valve to be opened in fail action situations.
- ❑ After the desired value is displayed, press the  $\odot$  key to conclude the operation.

**NOTE:**

Perform valve calibration always when controller fail action parameter has been changed.

### 5.5.7 Valve rotation direction, $ROT$

The application-specific parameter  $ROT$  defines the relationship between position sensor rotation and valve action.

- ❑ Once  $ROT$  is displayed press the  $\odot$  key to enter the edit state and  $ROT$  starts to blink.
- ❑ Now you may select between two values by pressing the  $\oplus$  or  $\ominus$  key. The value  $cL$  indicates clockwise rotation for closing the valve and  $cCL$  means counterclockwise to close.
- ❑ After the desired value is displayed, press the  $\odot$  key to conclude the operation.

**NOTE:**

Perform valve calibration always when  $ROT$  has been changed.

### 5.5.8 Valve dead angle, $\alpha_0$

The  $\alpha_0$  setting is made for Metso segment and ball valves. This setting takes into account the "dead angle"  $\alpha_0$  of the ball valves. The entire signal range is then used for effective valve opening  $90^\circ - \alpha_0$ . Use 0 % as the "dead angle" for the valves not mentioned in Table 7.

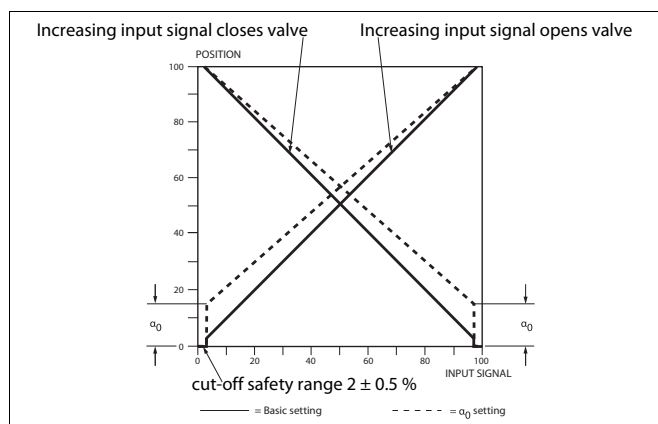


Fig. 25 Principle of setting, ND9000H and ND7000H

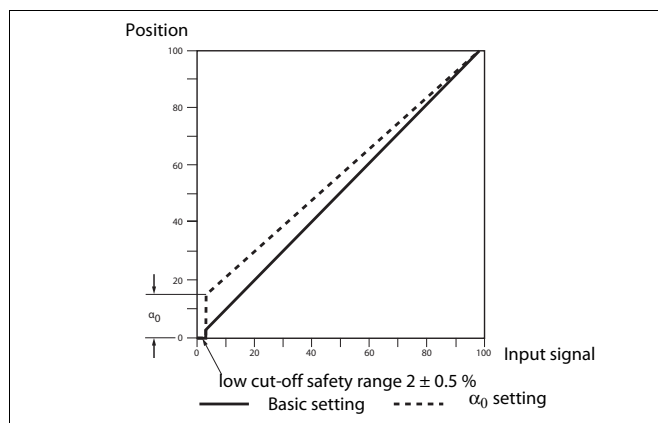


Fig. 26 Principle of setting, ND9000F and ND9000P

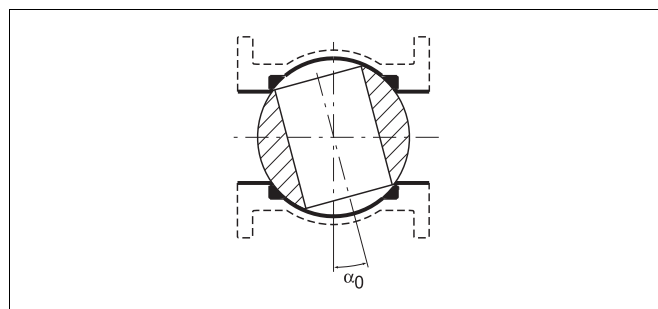


Fig. 27 Dead angle

Table 7 Dead angle in percentage

| Valve size |       | Valve series      |                   |               |              |           |              |            |          |      |                  |          |      |
|------------|-------|-------------------|-------------------|---------------|--------------|-----------|--------------|------------|----------|------|------------------|----------|------|
|            |       | MBV<br>QMBV<br>1) | MBV<br>QMBV<br>2) | D,<br>P,<br>C | T5,<br>QT5   | QX-<br>T5 | T25,<br>QT25 | QX-<br>T25 | R,<br>QR | E    | R-<br>SOFT<br>3) | FL<br>4) | ZX   |
| mm         | in    | Dead angle, %     |                   |               |              |           |              |            |          |      |                  |          |      |
| 15         | 1/2   |                   |                   |               |              |           |              |            |          |      |                  |          | 15   |
| 20         | 3/4   |                   |                   |               |              |           |              |            |          |      |                  |          | 15   |
| 25         | 1     | 14                | -                 | -             | 25.5         | 19.5      | -            | -          | 15       | 25.5 | 27               |          | 12.5 |
| 25/1       | 1/1   |                   |                   |               |              |           |              |            |          |      |                  | 11       |      |
| 25/2       | 1/2   |                   |                   |               |              |           |              |            |          |      |                  | 11       |      |
| 25/3       | 1/3   |                   |                   |               |              |           |              |            |          |      |                  | 10       |      |
| 40         | 1 1/2 | 12                | -                 | -             | 24.5         | 12.5      | -            | -          | 12       | 16   | 21               |          | 12.5 |
| 50         | 2     | 10                | 9                 | 13.5          | 24.5         | 12.5      | 18           | 8          | 17       | 20.5 | 23               |          | 12.5 |
| 65         | 2 1/2 | 9                 | -                 | -             | -            | -         | -            | -          | 13       | -    | 18               |          |      |
| 80         | 3     | 10                | 8                 | 12            | 18           | 8         | 16.5         | 8.5        | 9        | 8.5  | 15.5             |          |      |
| 100        | 4     | 10                | 8                 | 12            | 16.5         | 8.5       | 16           | 9          | 8        | 7    | 14.5             |          |      |
| 125        | 5     | 12                | -                 | -             | -            | -         | 12           | 6.5        | 8        | -    |                  |          |      |
| 150        | 6     | 10                | 8                 | 11.5          | 16           | 9         | 13.5         |            | 8        | 13.5 | 13               |          |      |
| 200        | 8     | 9                 | 7                 | 8.5           | 12           | 6.5       | 9.5          |            | 7        |      | 11.5             |          |      |
| 250        | 10    | 9                 | 7                 | 7.5           | 13.5         |           | 9.5          |            | 7        |      | 10.5             |          |      |
| 300        | 12    | 8                 | 6                 | 6.5           | 9.5          |           | 7.5          |            | 6        |      | 9.5              |          |      |
| 350        | 14    |                   | 6                 | 6             | -            |           |              |            | 5        |      | 9.5              |          |      |
| 400        | 16    |                   | 5                 | 5.5           | 9.5<br>(14") |           |              |            | 5        |      | 9.5              |          |      |
| 450        | 18    |                   |                   | 6             | 7.5<br>(16") |           |              |            |          |      |                  |          |      |
| 500        | 20    |                   |                   | 6             |              |           |              |            | 4.5      |      |                  |          |      |
| 600        | 24    |                   |                   | 5.5           |              |           |              |            |          |      |                  |          |      |
| 650        | 26    |                   |                   | 7             |              |           |              |            |          |      |                  |          |      |
| 700        | 28    |                   |                   | 7             |              |           |              |            |          |      |                  |          |      |
| 750        | 30    |                   |                   | 6             |              |           |              |            |          |      |                  |          |      |
| 800        | 32    |                   |                   | -             |              |           |              |            |          |      |                  |          |      |
| 900        | 36    |                   |                   | 5.5           |              |           |              |            |          |      |                  |          |      |

1) Seat supported 2) Trunnion 3) Soft seated R-valve 4) Low Cv Finetrol

- ❑ After selecting **RD** on the display, press the **↻** key to enter the edit state and **RD** starts to blink. The value currently selected appears as a percentage (%) on the display.
- ❑ Modify the parameter value by pressing **⊕** or **⊖** keys alternately until the desired value appears on the display.
- ❑ Press the **↻** key to make your selection and return to the setting state.

### 5.5.9 Profibus slave address setting

#### ND9000P only

- ❑ You can modify the Profibus slave address by pressing **⊕** and **⊖** keys. Range is 0-126, default value is 126.
- ❑ Press the **↻** key to make your selection and return to the setting state.

### 5.5.10 Low cut-off, low limit, high cut-off, high limit

ND supports signal cut-off and limiting in both ends of the operating range. The configuration parameters are; low cut-off, low limit, high cut-off and high limit.

- ❑ If the input signal is smaller than low cut-off, the valve will be fully closed.
- ❑ If the input signal is smaller than low limit, the valve stays in the low limit.
- ❑ If the input signal is greater than high cut-off, the valve will be fully opened.
- ❑ If the input signal is greater than high limit, the valve stays in the high limit.

The cut-off overrides the limit as follows:

- ❑ If the low cut-off > low limit, the low limit is not active.
- ❑ If the low cut-off < low limit, both low cut-off and limit are active.
- ❑ If the low cut-off is set to zero, the low cut-off is not active.
- ❑ If the high cut-off < high limit, the high limit is not active.
- ❑ If the high cut-off > high limit, both high cut-off and limit are active.
- ❑ If the high cut-off is set to 100 %, the high cut-off is not active.

Only the low cut-off is adjustable using the LUI. Low limit, high cut-off and high limit are configurable via FieldCare software.

### 5.5.11 HART version

- ❑ Select if device is used as HART 6 or HART 7 device by using the **+** and **-** keys.
- ❑ To conclude press the **[enter]** key when the desired value is shown on the display.
- ❑ As default device is HART 6 device.

### 5.5.12 Language selection, LANG

- ❑ Select between three languages **EnG**, **GEr** or **FrE** using the **⊕** and **⊖** keys.
- ❑ To conclude press the **↻** key when the desired value is shown on the display.

## 5.6 Valve travel calibration

During the calibration the ND controller searches for optimum internal control parameters for the valve position control. Also it defines open and close ends. After the calibration sequence is finished, press the **↻** key to get back to the measurement view.

You may interrupt the calibration sequences at any time by pressing the **↻** key, then device returns to basic measurement display. Calibration parameters will not be changed if calibration is cancelled or failed. If calibration fails, LUI and DTM event log shows error message. See Chapter 7 for more information. The calibration will not alter the **PERF** parameter.

Select **CAL** from the menu by using **⊕** or **⊖** keys and press the **↻** key. Define the calibration type **AUTO**, **MAN**, **1PT CAL**, **LCAL 3P** or **LCAL 9P**, see Fig. 27. In case of **LCAL 3P** and **LCAL 9P**, see more information from 5.6.4.


When **CAL** menu from the LUI is opened again, the last started travel calibration will be shown first on the list.

#### NOTE:

If **AUTO CAL**, **MAN CAL**, **LCAL 3P** or **LCAL 9P** is selected, the valve controller must be in **AUTO** mode. 1-point calibration may run in both **AUTO** and **MAN** mode.

#### WARNING:

**Automatic calibration drives the valve against the mechanical open and closed travel limits of the valve-actuator assembly. Make sure that these procedures can be safely executed.**

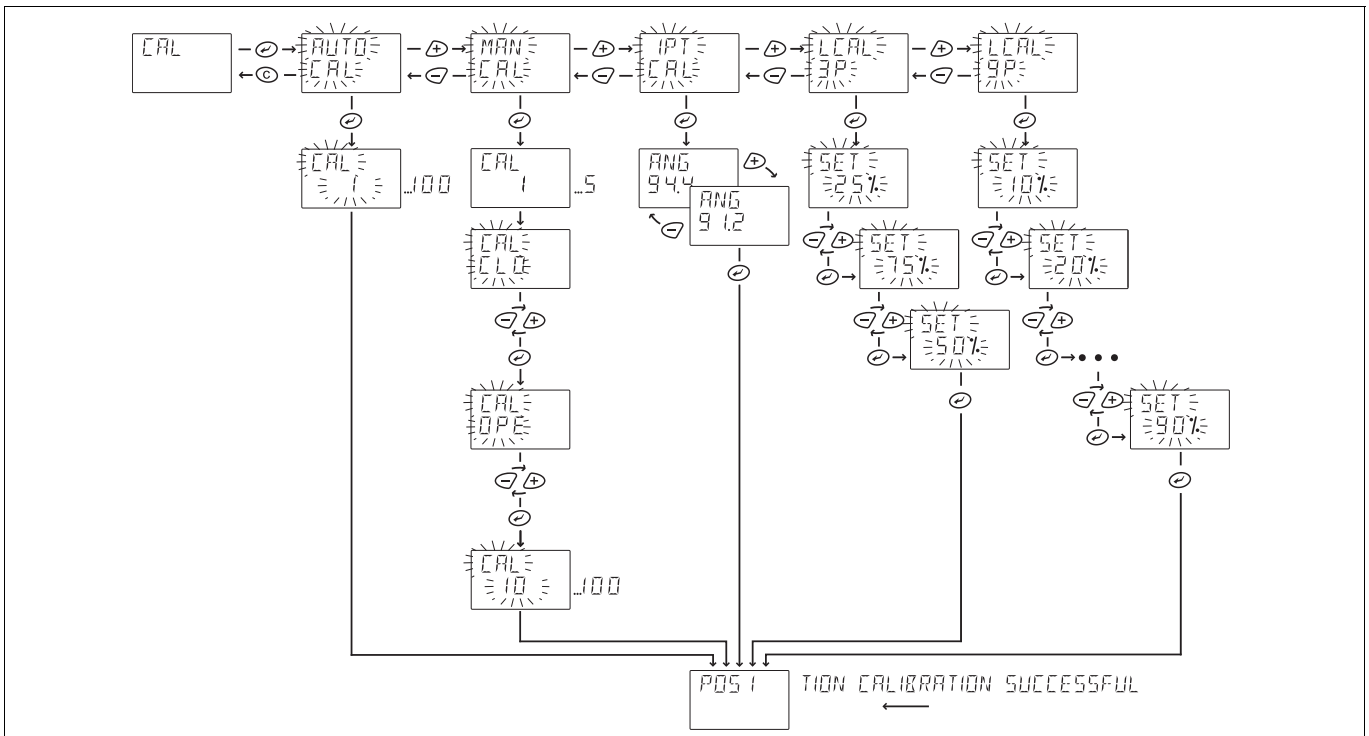

*Fig. 28 Calibration selection*

### 5.6.1 AUTO calibration function

During the calibration process the display will show blinking *EAL* and numbers run from 1 to 100 to show calibration progress. After calibration the display shows scrolling *POSITION CALIBRATION SUCCESSFUL* text and device returns to basic measurement display after one hour. Press the © key to get back to the basic measurement view immediately.

If you cannot drive the valve into a fully open position or if there is no mechanical limit stop, a manual calibration is required.

If *AUTO CAL* option is not available in the menu, please check Section 5.6.2

### 5.6.2 MAN calibration function

After selecting the *MAN* calibration function from the menu press the  key to activate the procedure. First there will be short valve speed identification. Then user is asked to drive valve manually into open or close end (depends on installation), the display shows *CAL OPE* or *CAL CLO*. With the  or  keys drive the valve manually to the open () or closed () position and then press the  key.

After defining first end position, user is asked to drive valve to another end position. Display shows **VAL OPE** or **VAL CLD** (depends on installation). With the **→** or **←** keys drive the valve manually to the open (**100 %**) or closed (**0 %**) position and then press the **↻** key.

The display shows blinking *CAL* and numbers continue to run from 10 to 100 to show the calibration progress. After calibration the display shows scrolling *POSITION CALIBRATION SUCCESSFUL* text and device returns to basic measurement display after one hour. Press the  key to get back to the basic measurement view immediately.

If the last performed calibration has been **MAN**, and valve type is selected as *LIn* or *FLI*, it is not possible to run **AUTO** calibration. *AUTO CAL* is disabled from the calibration menu.

Only way to get *AUTO CAL* back to the calibration menu is to select valve type as *rot* again, then there are all calibration options available again.

### 5.6.3 1-Point calibration

1-point calibration is useful in cases in which the valve controller needs to be changed but it is not possible to run the normal calibration and the valve is not allowed to change position (the valve is active, for example). **This procedure does not ensure the best possible control performance, and it is always recommended to run either AUTO or MAN calibration, as soon as possible.** The primary way to calibrate valve position is to use either **AUTO** or **MAN** calibration.

Before starting 1-point calibration, read the warnings and notes below and **check that the valve is mechanically locked. Before starting 1-point calibration, adjust the TPOS value in the MAN mode (see Section 5.4.2) to correspond with the physical position of the valve.**

Once the 1-point calibration is started, the first view shows *ANG* above and *NN.N* below (see Fig. 27). *NN.N* presents the maximum turning angle (in degrees) that the valve can perform.

To change the value:

- ❑ Press , *NN.N* begins blink
- ❑ Press  and  keys to change the value

After the correct valve operation angle is set, press  key.

After calibration the ND9000 and ND7000 scrolls *POSITION CALIBRATION SUCCESSFUL* text. You may interrupt the calibration sequences at any time by pressing the  key.

After the calibration sequence is finished, press the  key twice to get back to the measurement view.

Please refer to Chapter 7 if this sequence has failed and an error message is displayed.

The valve can now be unlocked.

**WARNING:**

**Supply pressure can be connected to the valve controller only after 1-point calibration is successfully completed. If supply pressure is connected to the valve controller before successful 1-point calibration, the valve may move and cause danger.**

**NOTE:**

If an incorrect valve operation angle is given to the valve controller during 1-point calibration, valve operation will be incorrect. In this case, you must perform 1-point calibration again with correct valve operation angle value.

**NOTE:**

If the valve position is not stable (due to heavy vibration etc) during 1-point calibration, the calibration will not end successfully. Check that the valve position is fully stable during this operation.

### 5.6.4 Linearization

Linearization *FLI* can be used for linear valves when linkage geometry is needed to be corrected by valve controller.

Linearization can be done with 3 points (and end points) or with 9 points (and end points).

3-point linearization will be done in positions 25 %, 50 % and 75 %.

9-point linearization will be done in positions 10 %, 20 %, 30 %, 40 %, 50 %, 60 %, 70 %, 80 % and 90 %.

**NOTE:**

There have to be external position measurement in linear valve that you can compare actual position and given position.

**Before linearization:**

- ☐ Perform the Valve travel calibration (auto or manual).
- ☐ Before 3-point or 9-point linearization is visible on the display. Valve type *VTYP* has to be set as Fixed Linear *FLI*.

**Linearization:**

- ☐ Select 3-point *LCAL 3P* or 9-point *LCAL 9P* linearization from *CLL* by pressing the  key.
- ☐ The display shows *SET 10 %* or *SET 25 %* depending on which is selected: 3-point or 9-point calibration.
- ☐ Drive valve position manually with the  and  keys to *10 %* or *25 %*.
- ☐ When required position is reached (according to position measured by external measurement) press the  key.
- ☐ The display starts to blink next position (*50 %* or *20 %*). When last point have confirmed, the LUI displays that calibration is successful and returns to basic measurement display.

- ☐ User can terminate linearization any time by pressing the  key. Linearization is cancelled and device returns to basic measurement display. No changes to linearization are made and corresponding message is shown to user.

If linearization fails, a message about the reason will be shown on the LUI display and also in event log that can be read with DTM. If linearization is not successfully completed, there will be no changes in linearization.

### 5.6.5 LS status

#### ND9000F and ND9000P only

LS shows the status of limit switches:

|            |                                                    |
|------------|----------------------------------------------------|
| ---        | No LS active                                       |
| <i>CLD</i> | LS "Closed" active                                 |
| <i>OPE</i> | LS "Open" active                                   |
| <i>LSE</i> | LS Error, both switches activated at the same time |

## 5.7 Special displays

### 5.7.1 User interface locked

In order to prevent unauthorised access, the Local User Interface may be locked. In this mode measurements may be viewed but configurations and calibrations are prohibited. You may lock and unlock the device only via HART (ND9000H, ND7000H) or dip switch (ND9000F, ND9000P), see Fig. 32 and 33. When the Local User Interface is locked the lock symbol will be activated on the display.

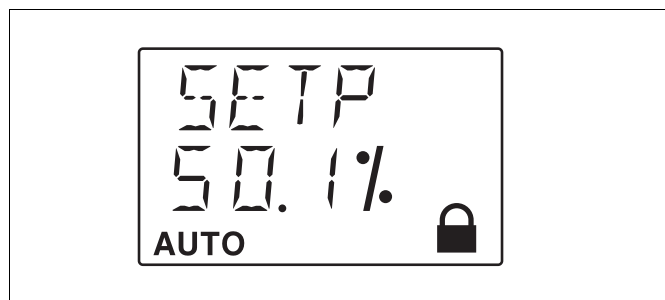


Fig. 29 LUI locked

### 5.7.2 Online-alarm active

If an online alarm has been detected the solid **X** symbol is activated. This symbol will disappear after the recovery from online alarm. You may view the reason for the alarm by viewing the latest event while pushing the  and  keys simultaneously or by using FieldCare software where all events may be viewed.

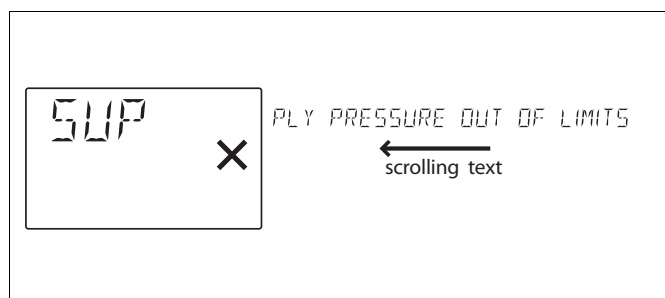


Fig. 30 Example of online alarm message



### 5.7.3 Viewing of latest event

You may view the latest event by pressing the  and  keys simultaneously in the measurement monitoring view. The message is scrolled on the top row of the display twice. You may stop the scrolling by pressing the  key. By pressing the  key, the message will disappear.

For the list of events see Chapter 7.

### 5.7.4 Fail-safe active

When the ND detects serious device failure (setpoint, valve position and control signals) it enters fail-safe mode, which drives the control valve into the position defined in the parameter controller fail action (*PFA*). Fail-safe mode is indicated by the display as seen in Fig. 30. The error message is displayed until the cause of error is eliminated and the ND unit is restarted, i.e. the power is momentarily disconnected.

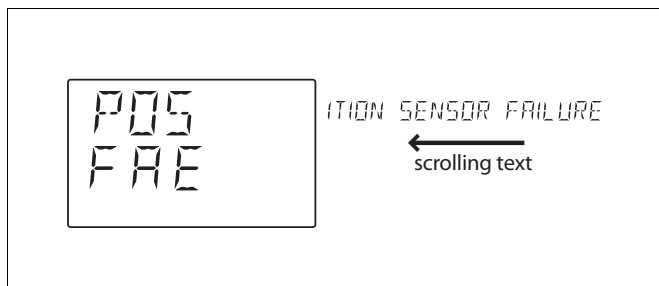


Fig. 31 Example of failsafe display

### 5.7.5 Reduced performance

When the ND detects spool valve measurement failure, it enters reduced performance mode. This is indicated by the blinking **X** in the display, see Fig. 31.

In reduced performance mode valve control can not be optimized. To correct the problem replace the spool valve assembly and perform auto calibration.

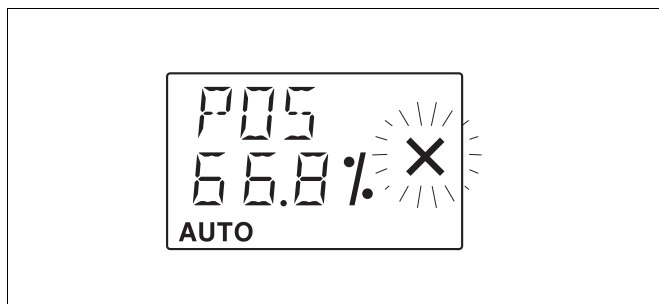


Fig. 32 Reduced performance display

## 5.8 Write protection

### HART write protection, ND9000H and ND7000H

The ND9000H and ND7000H are delivered from the factory with the default set as HART write protection OFF. Reading and changing parameters is allowed. HART protection may be enabled with a switch (DIP1) located on the communication circuit board under the Local User Interface module. Changes that may influence the valve position cannot be made using the FieldCare software or HART hand held when switch no. 1 (on the left-hand side of the switch block) is ON, Fig. 33.

### Write protection, ND9000F, ND9000P

The ND9000F/ND9000P is delivered from the factory with HW write protection OFF as the default setting. Reading and changing parameters is thus allowed.

Write protection can be enabled with the switch (DIP1) located on the circuit board, Fig. 34.

The simulation can be enabled with the switch (DIP2) located on the circuit board, Fig. 34.

Write protection protects all write access to all writeable parameters of the device. Changing the parameters from the LUI or fieldbus configurator is thus not allowed.

The simulation switch is OFF as the default setting. A0 block simulation is thus disabled. The simulation can be enabled with the switch (DIP2) located on the circuit board, Fig. 34.

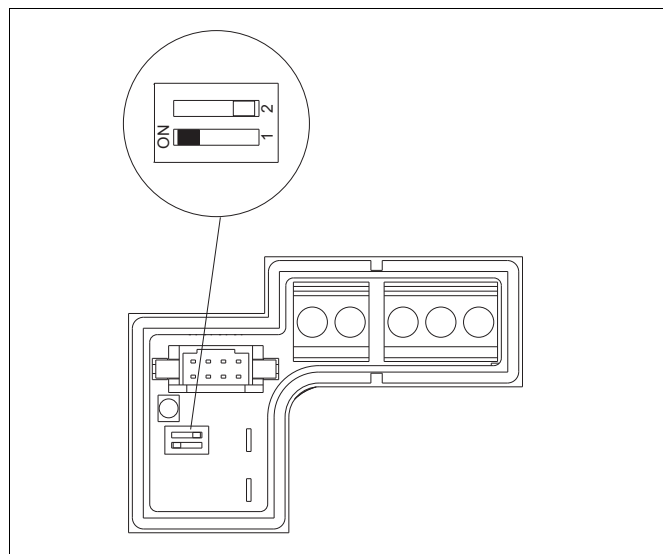


Fig. 33 HART write protection, ND9000H and ND7000H

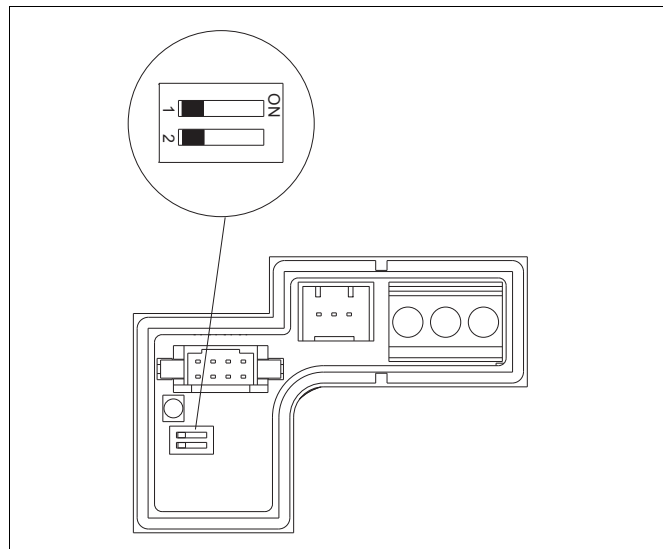


Fig. 34 Write protection, ND9000F and ND9000P

## 6 MAINTENANCE

### Ex d WARNING (ND9200, ND7200, ND9300):

**Service of the cylindrical flameproof joints is not allowed.**

This includes the diaphragm cover (part 171), flame arrester plunger (part 200), their mating surfaces in the housing (part 2) and the shaft assembly fixed in the housing.

The maintenance requirements of the ND valve controller depend on the service conditions, for instance, the quality of instrument air. Under normal service conditions there is no requirement for regular maintenance.

When maintaining the ND ensure that the supply air is shut off and pressure is released. In the following text the numbers in brackets ( ) correspond to the part numbers in the exploded view as shown in Chapter 12, unless otherwise stated.

The ND valve controller includes the following interchangeable modules: prestage unit (120), spool valve (193), communication circuit board with optional position transmitter (215).

In ND9100 and ND7100 the modules are located below the covers (39) and (43). In ND9200, ND7200 and ND9300 the spool valve is located on the bottom side of the device while the other modules are located below the covers (100) and (39). In the event of failure the whole module must be changed. The module retrofit must be assembled in a clean, dry environment. In reassembly apply a thread-locking compound (for instance, Loctite 243) and tighten the screws firmly.

### 6.1 Prestage

#### NOTE:

The prestage must be handled carefully. In particular the moving parts of the prestage should not be touched when the inner cover (39) is not in place.

#### 6.1.1 Removal

##### ND9100, ND9400 and ND7100

- ❑ Open the prestage cover (43) attached with M4 screw (44). Unplug the prestage wire connector on the spool sensor board. Unscrew the M4 screws (139, 2 pcs.) and lift up the prestage module. Remove the O-ring (140).

##### ND9200, ND7200, ND9300

- ❑ Loosen the M8 stop screw (110) in the position indicator (109) and turn the position indicator from the shaft (11). Remove the inner cover (39) attached with M3 screws (42, 3 pcs.).
- ❑ Unplug the prestage wire connector from the spool sensor board (182). Unscrew the M4 screws (139, 2 pcs.) and lift up the prestage module. Remove the O-ring (140).

#### 6.1.2 Installation

##### ND9100, ND9400 and ND7100

- ❑ Place a new O-ring (140) into the groove on the spool valve and press the prestage into place. Make sure the nozzle is guided into the O-ring properly. The screws guide the prestage body into the correct position. Tighten the screws (139) evenly.
- ❑ Push the prestage 2-pole wire connector into the socket on the spool sensor board. The wire connector may only be fitted in the correct position. Replace the prestage cover (43) and tighten the M4 screw (44).

##### ND9200, ND7200, ND9300

- ❑ Place a new O-ring (140) into the groove in the housing and press the prestage into place. Make sure the nozzle is guided into the O-ring properly. The screws guide the prestage body into the correct position. Tighten the screws (139) evenly.
- ❑ Push the prestage 2-pole wire connector into the socket on the spool sensor board. The wire connector can only be fitted in the correct position. Replace the inner cover (39) and tighten the M3 screws.

### 6.2 Spool valve

#### 6.2.1 Removal

#### NOTE:

Each spool valve body has an individual corresponding spool which cannot be replaced by any other spool. Never alter the orientation of the spool. The orientation of the spool is marked on the device, see Fig. 34 and 35.

##### ND9100, ND9400 and ND7100

- ❑ Before removing the spool valve assembly (193) the prestage (120) must be removed. See 6.1.
- ❑ Unscrew the M4 screws (47, 3 pcs.), M3 screws (48, 2 pcs.) and M3 screw (49). Remove the spool valve assembly.
- ❑ The spool valve may be cleaned if special attention is paid to a clean environment and proper procedure. After unscrewing the M4 screws (47, 3 pcs.) the spool valve may be lifted from the fixture. Hold the ends of the body with your fingers to avoid dropping the spool from the body. Clean the spool and the bore of the body with care. Do not leave any fibres from cleaning materials in the bore or on the spool. Do not scratch the mating surfaces of the spool and body. The restrictor is located under the spool valve in the fixture. It may be cleaned when the spool valve is removed.

##### ND9200, ND7200, ND9300

For spool valve removal it is usually necessary to unmount the valve controller from the actuator.

- ❑ Working from the bottom side of the valve controller, unscrew the M4 screws (47, 3 pcs.). Remove the spool valve cover (61) and the spool valve (193) with gasket (174). Hold the ends of the body with your fingers to avoid dropping the spool from the body.



- ❑ Spool valve removal is only possible in the spring-forced failsafe position of the spool. In the case of a stuck spool it might be necessary to remove the secondary diaphragm cover (167), the spool spring (166) with its disc (164) and the secondary diaphragm (162) with its plate. After the removal of these parts it is possible to use a punch to force the spool to the failsafe position.
- ❑ The spool valve may be cleaned if special attention is paid to a clean environment and proper procedure.
- ❑ Clean the spool and the bore of the body with care. Do not leave any fibres from cleaning materials in the bore or on the spool. Do not scratch the mating surfaces of the spool and body.

## 6.2.2 Installation

### NOTE:

If the maintenance operations have been done for the spool valve assembly, the device **must** always be calibrated.

### ND9100, ND7100

- ❑ Ensure that the gasket (174) is properly located in the groove on the bottom of the spool valve assembly. Mount the spool valve assembly on to the housing and tighten the M3 and M4 screws evenly. Ensure the O-ring (140) slots inside the groove fully. Mount the prestage unit directly on the spool valve unit as in 6.1.

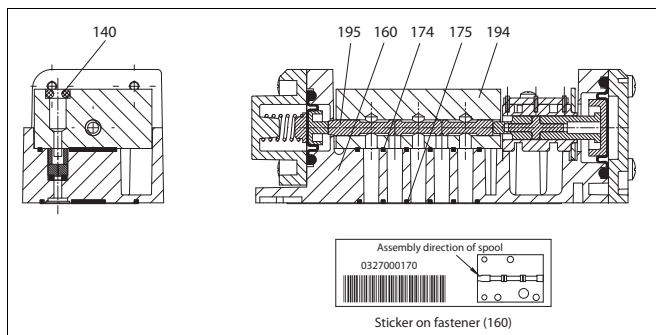


Fig. 35 Spool valve assembly, ND9100 and ND7100

### ND9200, ND7200, ND9300

- ❑ Ensure that the gaskets (174) and (63) are properly located in their grooves on the bottom of the housing. Mount the spool valve and the spool valve cover (61) to the housing, and tighten M4 screws evenly.

## 6.3 Flame arrestor assembly

### ND9200, ND7200, ND9300

The flame arrestor and the restrictor are fit into the same plug which is located under the diaphragm cover (171). This assembly can not be disassembled and should be replaced if clogged.

- ❑ To remove the flame arrestor assembly, unscrew the screws (173, 4 pcs.) and remove the diaphragm cover (171) with its O-ring. Turn a M3 screw into the threaded hole of the flame arrestor assembly to extract it from the housing. Installation is the reversal of removal. Place the O-rings carefully.

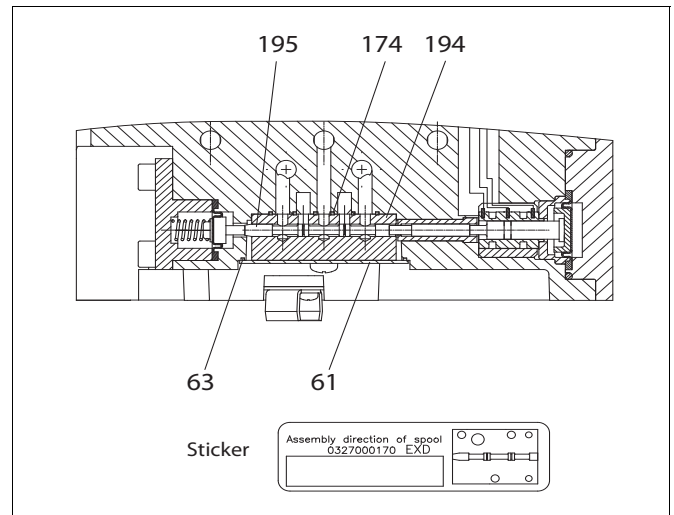


Fig. 36 Spool valve assembly, ND9200, ND7200 and ND9300

## 6.4 Diaphragms

### ND9200, ND7200, ND9300

The diaphragms (169, 162) may be replaced by removing the respective covers (171, 167). The unit should be unmounted from the actuator and the side to be worked on turned upwards in order to avoid loss of small parts. When replacing the secondary diaphragm (162), the spool spring (166) with its guide (164) has to be removed first. When reassembling, pay special attention to the installation of the diaphragms and O-rings.

## 6.5 Communication board

### 6.5.1 Removal

#### NOTE:

Ground yourself on the body of the device before touching the circuit board.

#### NOTE:

**Do not remove the Valve Controller Board (210)!**  
Removing the board will void the warranty.

### ND9100, ND7100

- ❑ Loosen the M8 grub screw (110) off the position indicator (109) and turn the position indicator from the shaft. Remove the cover of the prestage (43). Remove the electronics cover (39) attached with M3 screws (42, 4 pcs.).
- ❑ Remove the M3 screws (217, 4 pcs.). Hold the sides of the circuit board and lift it directly upwards and outwards. Handle the board carefully, touching only the sides.

### ND9200, ND7200, ND9300

- ❑ Loosen the M8 stop screw (110) in the position indicator (109) and turn the position indicator from the shaft (11). Remove the inner cover (39) attached with M3 screws (42, 3 pcs.).
- ❑ Remove the M3 screws (217, 4 pcs.). Hold the sides of the circuit board and lift it directly upwards and outwards. Handle the board carefully, touching only the sides.

## 6.5.2 Installation

### Ex WARNING:

**Grounding of the circuit board is essential to explosion protection.**

The board is grounded to the housing by the mounting screw next to the terminal blocks.

### ND9100, ND7100

- ❑ Mount the new communication circuit board carefully.
- ❑ Locate the pins with the matching connector on the board. Tighten the M3 screws (217) evenly.
- ❑ Install the electronics cover (39)s and the cover of the prestage (43).
- ❑ Mount the position indicator (109) on the shaft and tighten the M8 screw (110) temporarily. The final orientation and locking of the position indicator should be done after installation of the valve controller to the actuator.

### ND9200, ND7200, ND9300

- ❑ Mount the new communication circuit board carefully.
- ❑ Locate the pins with the matching connector on the board. Tighten the M3 screws (217) evenly.
- ❑ Install the inner cover (39).
- ❑ Mount the position indicator (109) on the shaft and tighten the M8 stop screw (110) temporarily. The final orientation and locking of the position indicator should be done after installation of the valve controller to the actuator.

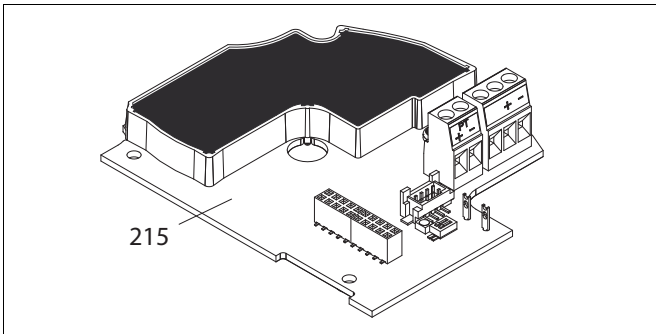


Fig. 37 Communication board, ND9000H and ND7000H

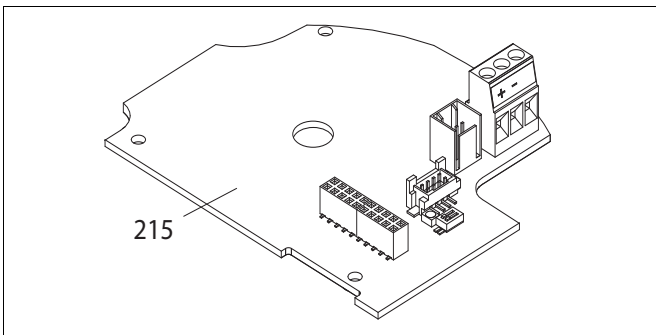


Fig. 38 Communication board, ND9000F and ND9000P

## 7 ERROR MESSAGES

### 7.1 Failsafe errors

| Display message                             | Description                                                                                          |
|---------------------------------------------|------------------------------------------------------------------------------------------------------|
| POSITION SENSOR FAILURE                     | Position sensor measurement failed. Change the ND device to a new one.                               |
| SETPOINT SENSOR FAILURE (HART version only) | mA measurement failed. Change the ND device to a new one.                                            |
| PRESTAGE SHORTCUT ERROR                     | Shortcut in the prestage unit.                                                                       |
| FAE nnn                                     | Fatal malfunction in the device. nnn is a number between 001–004. Change the ND device to a new one. |

### 7.2 Alarms

| Display message             | Description                                                                                 |
|-----------------------------|---------------------------------------------------------------------------------------------|
| DEVIATION ALARM             | Valve deviation out of limits.                                                              |
| STICTION LOW ALARM          | Stiction has exceeded the low limit (ND9000 only).                                          |
| STICTION HIGH ALARM         | Stiction has exceeded the high limit (ND9000 only).                                         |
| LOAD FOR OPENING LOW ALARM  | Load for opening has exceeded the low limit (ND9000 only).                                  |
| LOAD FOR OPENING HIGH ALARM | Load for opening has exceeded the high limit (ND9000 only).                                 |
| SPOOL VALVE PROBLEM         | Spool valve problem in the controller. Check the spool valve unit and replace if necessary. |
| PNEUMATICS PROBLEM          | Inconsistent actuator pressures. Check pneumatic connections and actuator leakage.          |
| FRICTION PROBLEM            | Valve is not moving correctly. Check load factor.                                           |

### 7.3 Errors

| Display message             | Description                                                                                                                                                                                                                                                                        |
|-----------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| PRESTAGE CUT ERROR          | Prestage wire is cut or connector is loose.                                                                                                                                                                                                                                        |
| PRESSURE SENSOR 1 FAILURE   | Actuator pressure sensor has failed. The device performance level is reduced if device is used as D/A actuator. This will not effect to control performance for single acting actuator. Change the ND device to a new one during next maintenance activity.                        |
| PRESSURE SENSOR 2 FAILURE   | Actuator pressure sensor has failed. The device performance level is reduced. Change the ND device to a new one during next maintenance activity.                                                                                                                                  |
| PRESSURE SENSOR 3 FAILURE   | Supply pressure sensor has failed. This does not affect the performance level.                                                                                                                                                                                                     |
| SPOOL VALVE SENSOR FAILURE  | Spool valve sensor failed. Check the sensor connections. The device performance level is reduced. For ND9100 and ND7100 change spool valve assembly (193) during next maintenance activity. For ND9200/ND7200/ND9300 replace device to a new one during next maintenance activity. |
| TEMPERATURE SENSOR FAILURE  | Temperature measurement failed. The accuracy of the measurements is reduced. Change the ND device to a new one during next maintenance activity.                                                                                                                                   |
| STATISTICS DATABASE ERROR   | Failed to store statistics. New measurements will be lost.                                                                                                                                                                                                                         |
| EVENT DATABASE ERROR        | Failed to store events. The new events will be lost.                                                                                                                                                                                                                               |
| POSITION CALIBRATION FAILED | Travel calibration failed. Check the configuration parameters and controller mounting. Check that the controller shaft is correctly aligned.                                                                                                                                       |

|                                                 |                                                                                                                                                                                                                                |
|-------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| POSITION CHANGE TOO SMALL                       | Given samples in Linearization are closer than 5 % to each other, i.e. there's not enough change between two consequent samples.                                                                                               |
| LINEARIZATION FAILED                            | 3P/9P linearisation failed.                                                                                                                                                                                                    |
| FACTORY SETTINGS RESTORE FAIL                   | Factory settings restoring failed.                                                                                                                                                                                             |
| TOO SMALL VALVE MOVEMENT                        | Position sensor range failed during calibration. Valve controller shaft failed to rotate minimum 45 degrees. Check the configuration parameters and controller mounting. Check that the controller shaft is correctly aligned. |
| POSITIONER SHAFT MOVEMENT OUT OF RANGE          | Pointer out of mark on housing, see Figure 6.                                                                                                                                                                                  |
| CALIBRATION TIMEOUT                             | Calibration timeout occurred. Check configuration and installation.                                                                                                                                                            |
| CALIBRATION START FAILED                        | The calibration starting conditions are not met. Check the supply pressure.                                                                                                                                                    |
| TOO SMALL SPOOL VALVE MOVEMENT                  | Spool sensor range failed during position calibration. Check the configuration parameters. Check the prestage and spool valve unit.                                                                                            |
| POOR VALVE PACKAGE CONTROLLABILITY              | Position calibration takes too long time due to weak controllability.                                                                                                                                                          |
| CHECK ASSEMBLY RELATED PARAMETERS               | Check assembly and assembly related parameters and start calibration again.                                                                                                                                                    |
| CALIBRATION FAIL - SUPPLY PRESSURE OUT OF RANGE | Supply pressure out of range during position calibration.                                                                                                                                                                      |
| CALIBRATION FAIL - SENSOR FAILURE               | Sensor failure (valve position/spool position) is detected during position calibration.                                                                                                                                        |
| CALIBRATION FAIL - POSITION OUT OF RANGE        | Valve position out of range is detected during position calibration.                                                                                                                                                           |

## 7.4 Warnings

| Display message                         | Description                                                                                                                                               |
|-----------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------|
| TOTAL OPERATION TIME WARNING            | Operating time exceeded limit.                                                                                                                            |
| VALVE FULL STROKES WARNING              | Valve stroke counter limit reached.                                                                                                                       |
| VALVE REVERSALS WARNING                 | Valve reversals counter limit reached.                                                                                                                    |
| ACTUATOR FULL STROKES WARNING           | Actuator stroke counter limit reached.                                                                                                                    |
| ACTUATOR REVERSALS WARNING              | Actuator reversals counter limit reached.                                                                                                                 |
| SPOOL FULL STROKES WARNING              | Spool stroke counter limit reached.                                                                                                                       |
| SPOOL REVERSALS WARNING                 | Spool reversals counter limit reached.                                                                                                                    |
| STEADY STATE DEVIATION WARNING          | Warning that steady state deviation has increased.                                                                                                        |
| DYNAMIC STATE DEVIATION WARNING         | Warning that dynamic state deviation has increased (ND9000 only).                                                                                         |
| STICTION LOW WARNING                    | Warning that stiction has exceeded the low limit (ND9000 only).                                                                                           |
| STICTION HIGH WARNING                   | Warning that stiction has exceeded the high limit (ND9000 only).                                                                                          |
| LOAD FOR OPENING TOO LOW                | Warning that load for opening has exceeded the low limit (ND9000 only).                                                                                   |
| LOAD FOR OPENING TOO HIGH               | Warning that load for opening has exceeded the high limit (ND9000 only).                                                                                  |
| SUPPLY PRESSURE OUT OF LIMITS           | Supply pressure has exceeded the specified operating conditions.                                                                                          |
| TEMPERATURE OUT OF LIMITS               | Temperature has exceeded the specified operating conditions.                                                                                              |
| HUNTING DETECTION WARNING               | Valve hunting detected. Change performance level to less aggressive to stabilize valve. Check that the spool valve capacity is suitable for the actuator. |
| REDUCED PERFORMANCE ACTIVATED           | Valve controller performance is reduced due to defective spool valve sensor or defective pressure sensor.                                                 |
| TOO LOW SUPPLY PRESS FOR 1-ACT ACTUATOR | Too low supply pressure level for 1-acting actuator.                                                                                                      |
| VALVE REVERSALS TREND WARNING           | Warning that valve reversals per day has exceeded the limit.                                                                                              |
| SETPOINT REVERSALS TREND WARNING        | Warning that setpoint reversals per day has exceeded the limit.                                                                                           |
| VALVE TRAVEL TREND WARNING              | Warning that valve travel per day has exceeded the limit.                                                                                                 |
| VALVE REVERSALS WH STABLE SETP WARNING  | Warning that valve reversals while setpoint is stable, per day, has exceeded the limit                                                                    |

## 7.5 Notifications

| Display message                 | Description                                                                                                                                   |
|---------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------|
| POSITION CALIBRATION SUCCESSFUL | Position calibration successfully performed.                                                                                                  |
| LINEARIZATION SUCCESSFUL        | 3P/9P linearisation successfully performed.                                                                                                   |
| TEST CANCELLED                  | Off-line test has been cancelled.                                                                                                             |
| TEST DONE                       | Off-line test has been successfully performed.                                                                                                |
| TEST FAILED                     | Off-line test failed. Repeat the test sequence.                                                                                               |
| CALIBRATION CANCELLED           | Calibration has been cancelled.                                                                                                               |
| FACTORY DEFAULTS ACTIVATED      | Factory settings activated. Device have to be configured and calibrated.                                                                      |
| PT NOT ACTIVATED                | (Only with position transmitter option).<br>The position transmitter is not energized.                                                        |
| 1PT CAL FAILED                  | 1-point calibration failed. Check the mounting of the valve controller. Verify input parameter (range) value. Check rotation parameter (ROT). |
| REDUCED PERFORMANCE DEACTIVATED | Spool valve measurement and normal valve control is recovered.                                                                                |

## 8 TROUBLE SHOOTING

### Mechanical/electrical defects

1. A change in the valve position setpoint will not affect the position of the actuator

- ☐ Supply pressure too low
- ☐ Spool valve sticks
- ☐ Incorrect configuration parameters
- ☐ Actuator and/or valve jammed
- ☐ Signal wires incorrectly connected, no value on display
- ☐ Circuit boards are defective
- ☐ Calibration has not been carried out
- ☐ Device is in manual mode
- ☐ Prestage is defective
- ☐ Device is in fail-safe mode
- ☐ Spool mounted backwards into spool valve

2. The actuator goes to the end position with a small change of input signal

- ☐ Tubes between controller and actuator are incorrect, see Fig. 7 and 8
- ☐ The parameter settings *PFA* and *ROT* are incorrectly selected

3. Inaccurate positioning

- ☐ Spool valve dirty
- ☐ Too high actuator load
- ☐ Supply pressure too low
- ☐ Spool or pressure sensors are defective
- ☐ Actuator leakage

4. Overshooting or positioning too slow

- ☐ Change *PERF* value
- ☐ Spool valve dirty
- ☐ Supply air tube too small or supply air filter dirty
- ☐ Valve sticks
- ☐ Check leakages in tubes between controller and actuator
- ☐ Check leakages in mechanical stop screws

5. Error during valve travel calibration

- ☐ Valve controller is in *MAN* mode
- ☐ Check the coupling alignment with the pointer, see Fig. 6.
- ☐ The parameter settings *PFA* and *ROT* are incorrectly selected
- ☐ The actuator or valve did not move or was stuck during calibration
- ☐ Supply pressure too low
- ☐ Spool valve dirty

## 9 ND9000 WITH LIMIT SWITCHES

### 9.1 Introduction

#### 9.1.1 General description

ND9000 can be equipped with limit switches. Limit switches are used for electrical position indication of the valves and other devices. The switching points may be chosen freely.

#### ND9100

ND9100\_/D\_ and ND9100\_/I\_ have two inductive proximity switches, ND9100\_/K0\_ has two microswitches.

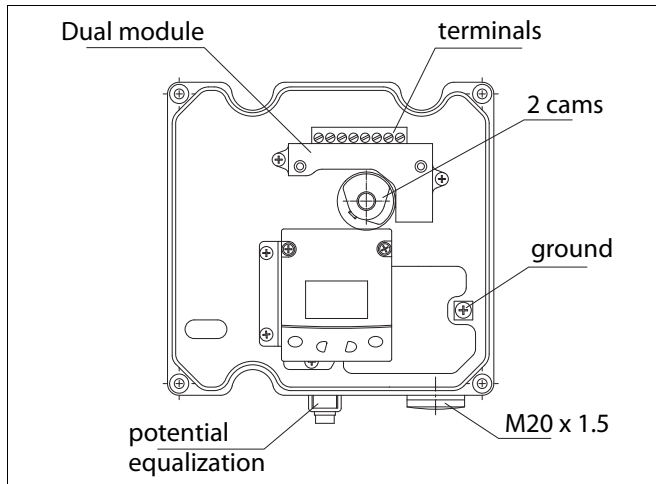


Fig. 39 ND9100\_/D\_ layout

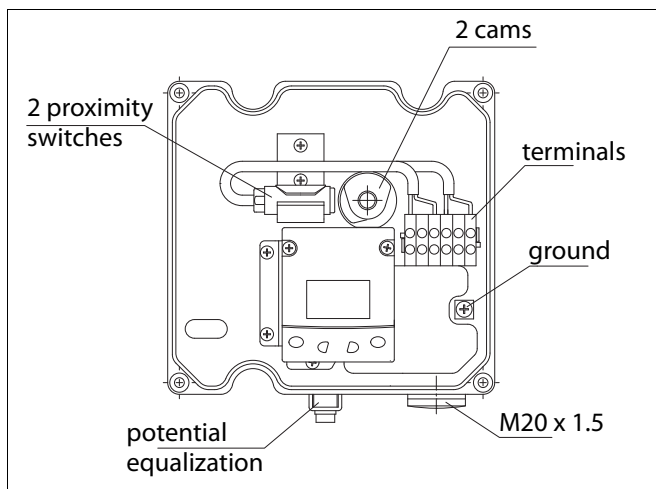


Fig. 40 ND9100\_/I\_ layout

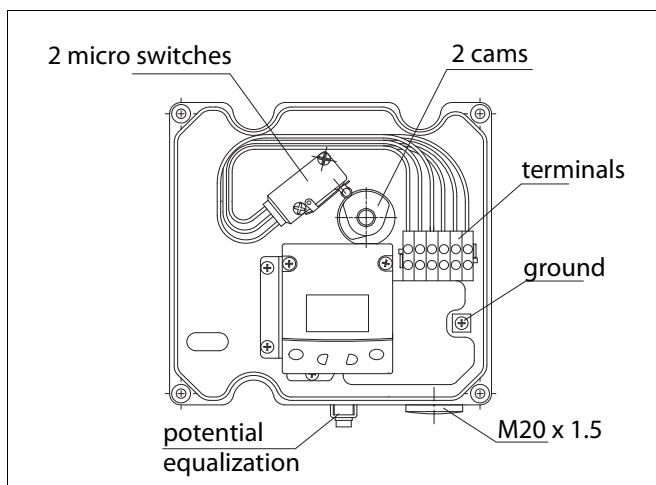


Fig. 41 ND9100\_/K0\_ layout

#### ND9100F/B06 and ND9100P/B06

ND9100F/B06 and ND9100P/B06 have two bus powered mechanical micro switches which are connected to the FBI circuit board. Thus the limit information is available directly on the bus through the DI function blocks.

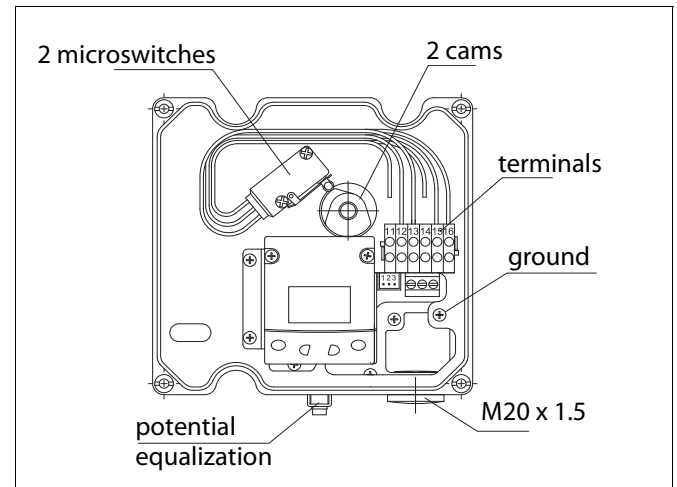


Fig. 42 ND9100F/B06 and ND9100P/B06 layout

#### ND9200

ND9200\_/D\_ and ND9200\_/I\_ have two inductive proximity switches, ND9200\_/K0\_ has two microswitches.

#### ND9200F/B06 and ND9200P/B06

ND9200F/B06 and ND9200P/B06 have two bus powered mechanical micro switches.

#### ND9300

ND9300\_/I\_ have two inductive proximity switches, ND9300\_/K0\_ has two microswitches.

#### ND9300F/B06 and ND9300P/B06

ND9300F/B06 and ND9300P/B06 have two bus powered mechanical micro switches.

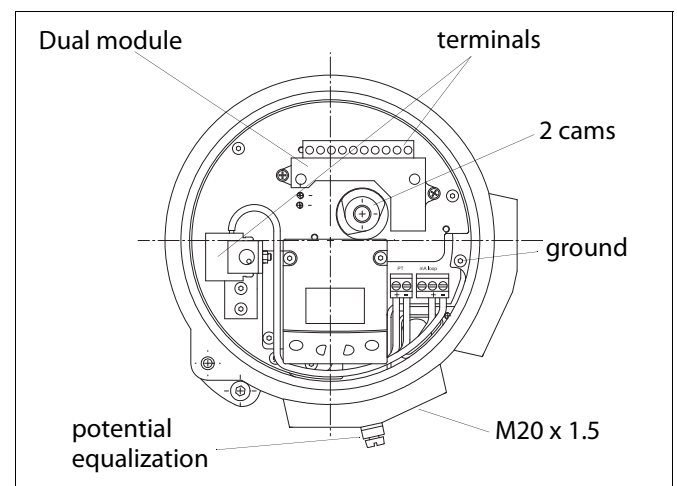


Fig. 43 ND92/93\_/D\_ layout

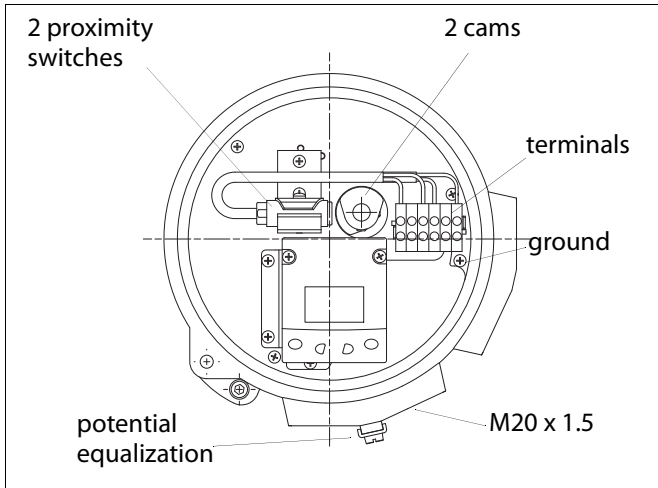


Fig. 44 ND92/93\_H/I\_, ND92/93\_F/I\_ and ND92/93\_P/I\_ layout

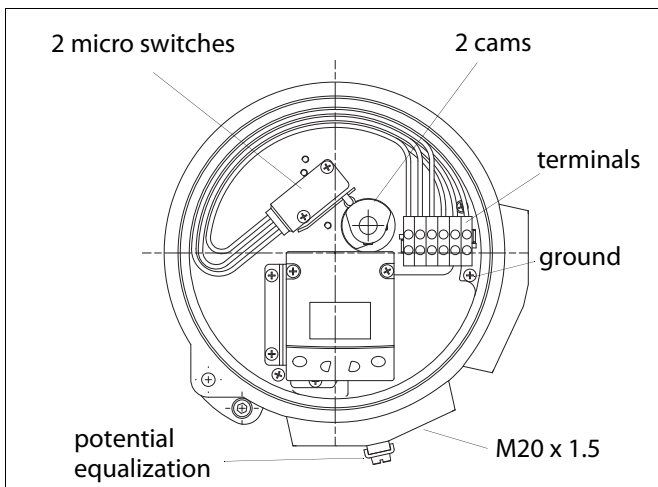


Fig. 45 ND92/93\_H/K0\_, ND92/93\_F/K0\_ and ND92/93\_P/K0\_ layout

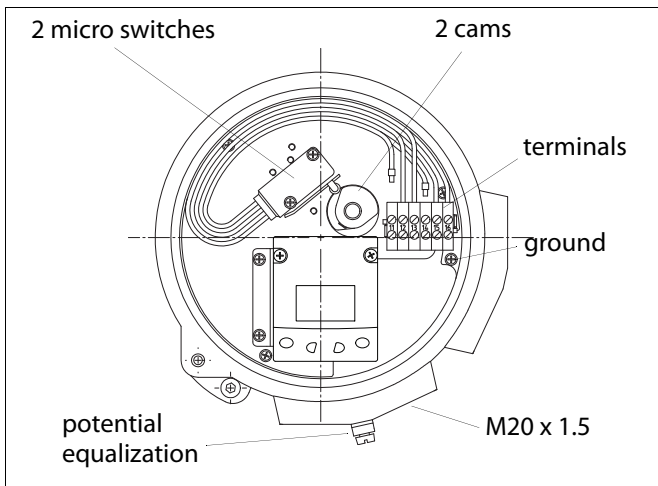


Fig. 46 ND92/93\_F/B06 and ND92/93\_P/B06 layout

## 9.1.2 Markings

The limit switch is provided with an identification plate, see Fig. 46 and 47. Identification plate markings include:

- ☐ Type designation
- ☐ Electrical values
- ☐ Enclosure class
- ☐ Temperature range
- ☐ Conduit entry
- ☐ Serial number
- ☐ Manufacturing serial number

The type designation is described in Chapter 15.

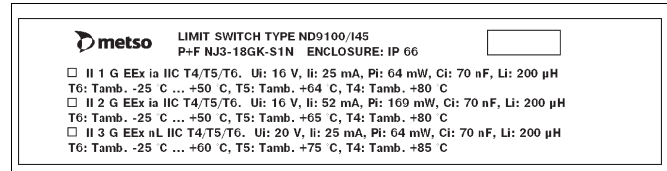


Fig. 47 Example of the identification plate, ND9100

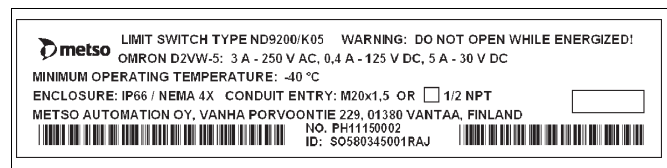


Fig. 48 Example of the identification plate, ND9200

## 9.1.3 Technical specifications

### 9.1.3.1 ND9000 \_/D\_\_

Proximity switch: Inductive, Dual Module  
 2 sensors,  
 Normally Open (33)  
 Normally Closed (44)

Electrical values:  
 SST Dual Module (33)

Indications: Target on sensor = LED on  
 Target off sensor = LED off

Operating voltage: 8–125 V DC; 24–125 V AC

Maximum voltage drop:  
 6.5 V / 10 mA  
 7.0 V / 100 mA

Current ratings:  
 Max inrush 2.0 A / 125 V DC / V AC  
 Max continuous 0.3 A / 125 V DC / V AC  
 Minimum on current 2.0 mA  
 Leakage current <0.15 mA with DC voltage  
 <0.25 mA with AC voltage

Namur Dual Module (44)

Indications: Target on sensor = LED off  
 Target off sensor = LED on

Operating voltage: 6–29 V DC

Current ratings: Target on (LED off) <1.0 mA  
 Target off (LED on) >3.0 mA

Must use intrinsically safe repeater barrier.

Namur sensors conform to DIN 19234 standard.

Number of switches: 2

**9.1.3.2 ND9000\_/I\_**

Proximity switch type: Inductive

|                     |       |
|---------------------|-------|
| P+F NJ2-12GK-SN     | (I02) |
| P+F NCB2-12GM35-N0  | (I09) |
| OMRON E2E-X2Y1      | (I32) |
| P+F NJ4-12GK-SN     | (I41) |
| P+F NJ3-18GK-S1N    | (I45) |
| IFM IFC2002-ARKG/UP | (I56) |

Electrical values: According to switch type,  
check connection diagram from  
Section 12.11

Number of switches: 2

Protection class of housing:

IP66 (DIN 40050, IEC 60529)

Conduit entry:

M20 x 1.5  
(ND9100U and  
ND9200E2, ND9300E2: 1/2 NPT)

**9.1.3.3 ND9000\_/K0\_**

Microswitch type: OMRON D2VW-5 (K05)  
OMRON D2VW-01 (K06)  
(gold-plated contacts,  
contact form is SPDT)  
Protection class IP67

Resistive load: 3A: 250 V AC (K05)  
5A: 30 V DC  
0.4 A: 125 V DC  
100 mA: 30 V DC/125 V AC (K06)

Switch accuracy: &lt; 2°

Number of switches: 2

Protection class of housing:

IP66 (DIN 40050, IEC 60529)

Conduit entry:

M20 x 1.5  
(ND9100U and  
ND9200E2, ND9300E2:  
1/2 NPT)

**9.1.3.4 ND9000F/B06, ND9000P/B06**

Microswitch type: OMRON D2VW-01 (B06)  
(gold-plated contacts,  
contact form is SPDT)  
Protection class IP67

Resistive load: 100 mA: 30 V DC/125 V AC

Switch accuracy: &lt; 2°

Number of switches: 2

Protection class of housing:

IP66 (DIN 40050, IEC 60529)

Conduit entry:

M20 x 1.5  
(ND9100U and  
ND9200E2, ND9300E2: 1/2 NPT)

**9.1.4 Electric data and ambient temperatures**

Table 8

| Limit switch code                      | Switch type         | Electrical data                                 | Max. Number of switches | Ambient Range      |  |
|----------------------------------------|---------------------|-------------------------------------------------|-------------------------|--------------------|--|
| 2-wire, DC voltage proximity switches: |                     |                                                 |                         |                    |  |
| I02                                    | P+F NJ2-12GK-SN     | Ui: 16 V, Ii: 52 mA                             | 2                       | See tables 9 .. 18 |  |
| I09                                    | P+F NCB2-12GM35-N0  | Ui: 16 V, Ii: 52 mA                             | 2                       |                    |  |
| I56                                    | IFM IFC2002-ARKG/UP | U: 10-36 V DC, I <sub>max</sub> : 150 mA        | 2                       |                    |  |
| I41                                    | P+F NJ4-12GK-SN     | Ui: 16 V, Ii: 52 mA                             | 4                       |                    |  |
| 3-wire, DC voltage proximity switches: |                     |                                                 |                         |                    |  |
| I45                                    | P+F NJ3-18GK-S1N    | Ui: 16 V DC, Ii: 52 mA                          | 2                       |                    |  |
| 2-wire, AC voltage proximity switches: |                     |                                                 |                         |                    |  |
| I32                                    | OMRON E2E-X2Y1      | U: 24-240 V AC, I <sub>max</sub> : 200 mA       | 2                       |                    |  |
| Dual module type proximity switches::  |                     |                                                 |                         |                    |  |
| D33                                    | SST Dual Module, NO | 2 A - 8-125 V DC, 24-125 V AC                   | 1                       |                    |  |
| D44                                    | Namur Dual Module   | 3 mA; 1 mA, 6-29 V DC                           | 1                       |                    |  |
| DC/AC voltage micro switches:          |                     |                                                 |                         |                    |  |
| K05                                    | OMRON D2VW-5        | 3 A - 250 V AC, 0.4 A - 125 V DC, 5 A - 30 V DC | 2                       |                    |  |
| K06                                    | OMRON D2VW-01       | 100 mA - 30 V DC / 125 V AC                     | 2                       |                    |  |
| B06                                    | OMRON D2VW-01       | BUS POWERED, NO EXTERNAL POWER NEEDED           | 2                       |                    |  |

Table 9

| ND9000                                                                                                                                            | Ambient temperature ranges (Ta)<br>filled according to type |                |                |
|---------------------------------------------------------------------------------------------------------------------------------------------------|-------------------------------------------------------------|----------------|----------------|
|                                                                                                                                                   | T6<br>T80 °C                                                | T5<br>T95 °C   | T4<br>T105 °C  |
| NDabcdE1e<br>NDabcdE1e/I02<br>NDabcdE1e/I04<br>NDabcdE1e/K05<br>NDabcdE1e/K06<br>NDabcdE1e/B06<br>NDabcdE1e/I32<br>NDabcdE1e/R35<br>NDabcdE1e/I41 | -40 ... +60 °C                                              | -40 ... +75 °C | -40 ... +85 °C |
| NDabcdE1e/D33<br>NDabcdE1e/D44                                                                                                                    | -40 ... +60 °C                                              | -40 ... +75 °C | -40 ... +82 °C |
| NDabcdE1e/R01                                                                                                                                     | -40 ... +60 °C                                              | -40 ... +75 °C | -25 ... +80 °C |
| NDabcdE1e/I59                                                                                                                                     | -40 ... +60 °C                                              | -40 ... +60 °C | -40 ... +60 °C |
| NDabcdE1e/I09<br>NDabcdE1e/I45<br>NDabcdE1e/I57<br>NDabcdE1e/I58                                                                                  | -25 ... +60 °C                                              | -25 ... +75 °C | -25 ... +85 °C |
| NDabcdE1e/I56                                                                                                                                     | -25 ... +60 °C                                              | -25 ... +75 °C | -25 ... +80 °C |
| NDabcdE1e/I11<br>NDabcdE1e/I21<br>NDabcdE1e/I34<br>NDabcdE1e/I60                                                                                  | -25 ... +60 °C                                              | -25 ... +70 °C | -25 ... +70 °C |
| NDabcdE1Ce**                                                                                                                                      | -53 ... +60 °C                                              | -53 ... +75 °C | -53 ... +85 °C |
| NDabcdE1Ce/I59**                                                                                                                                  | -53 ... +60 °C                                              | -53 ... +60 °C | -53 ... +60 °C |
| NDabcdE1Ce/I41**                                                                                                                                  | -50 ... +60 °C                                              | -50 ... +75 °C | -50 ... +85 °C |

Not allowed with external junction box (J, -40 °C)



Table 10 Ambient temperatures, ND9\_X

| Variant type | II 1 G Ex ia IIC T6...T4 Ga; II 1 D Ex ta IIIC T90 °C Da<br>II 2 G Ex ib IIC T6...T4 Gb; II 2 D Ex tb IIIC T90 °C Db |                   |                   |
|--------------|----------------------------------------------------------------------------------------------------------------------|-------------------|-------------------|
|              | Ambient temperature ranges                                                                                           |                   |                   |
|              | T6                                                                                                                   | T5                | T4                |
| ND91_X       | -40 °C ... +50 °C                                                                                                    | -40 °C ... +65 °C | -40 °C ... +80 °C |
| ND91_X/I02   | -40 °C ... +50 °C                                                                                                    | -40 °C ... +64 °C | -40 °C ... +80 °C |
| ND91_X/I09   | -25 °C ... +50 °C                                                                                                    | -25 °C ... +65 °C | -25 °C ... +80 °C |
| ND91_X/I45   | -25 °C ... +50 °C                                                                                                    | -25 °C ... +64 °C | -25 °C ... +80 °C |

Table 11 Ambient temperatures, ND9\_X

| Variant type | II 3 G Ex nA IIC T6...T4 Gc; II 3 D Ex tc IIIC T90 °C Dc<br>II 3 G Ex ic IIC T6...T4 Gc; II 3 D Ex tb IIIC T90 °C Dc |                   |                   |
|--------------|----------------------------------------------------------------------------------------------------------------------|-------------------|-------------------|
|              | Ambient temperature ranges                                                                                           |                   |                   |
|              | T6                                                                                                                   | T5                | T4                |
| ND91_X       | -40 °C ... +60 °C                                                                                                    | -40 °C ... +75 °C | -40 °C ... +85 °C |
| ND91_X/I02   | -40 °C ... +60 °C                                                                                                    | -40 °C ... +75 °C | -40 °C ... +85 °C |
| ND91_X/I09   | -25 °C ... +60 °C                                                                                                    | -25 °C ... +75 °C | -25 °C ... +85 °C |
| ND91_X/I45   | -25 °C ... +60 °C                                                                                                    | -25 °C ... +75 °C | -25 °C ... +85 °C |

Table 12 Ambient temperatures, ND9\_N

| Variant type                                                           | Ambient temperature ranges |
|------------------------------------------------------------------------|----------------------------|
| ND_N_<br>ND_N_/I02<br>ND_N_/K05<br>ND_N_/K06<br>ND_N_/B06<br>ND_N_/I32 | -40 °C ... +85 °C          |
| ND_N_/D33<br>ND_N_/D44                                                 | -40 °C ... +82 °C          |
| ND_N_/I45                                                              | -25 °C ... +85 °C          |
| ND_N_/I56                                                              | -25 °C ... +80 °C          |
| ND_NC_ (*)                                                             | -53 °C ... +85 °C          |
| ND_NC_/I41 (*)                                                         | -50 °C ... +85 °C          |

Note \*) Not allowed with external junction box (J, -40 °C)

Table 13 Ambient temperatures, ND9\_U

| Variant type                                     | IS Class I, Division 1, Groups A, B, C, D, T4...T6<br>IS Class I, Zone 0, AEx ia, IIC T4...T6 |                  |                  |
|--------------------------------------------------|-----------------------------------------------------------------------------------------------|------------------|------------------|
|                                                  | Ambient temperature ranges                                                                    |                  |                  |
|                                                  | T6                                                                                            | T5               | T4               |
| ND9_U                                            | -40 °C... +50 °C                                                                              | -40 °C... +65 °C | -40 °C... +80 °C |
| ND9_U/D44<br>ND9_U/I02<br>ND9_U/I09<br>ND9_U/I45 | Pending                                                                                       |                  |                  |

Table 14 Ambient temperatures, ND9\_U

| Variant type                                     | NI Class I, Division 2, Groups A, B, C, D, T4...T6<br>NI Class I, Zone 2, Ex nA IIC T4...T6 |                  |                  |
|--------------------------------------------------|---------------------------------------------------------------------------------------------|------------------|------------------|
|                                                  | Ambient temperature ranges                                                                  |                  |                  |
|                                                  | T6                                                                                          | T5               | T4               |
| ND9_U                                            | -40 °C... +50 °C                                                                            | -40 °C... +65 °C | -40 °C... +80 °C |
| ND9_U/D44<br>ND9_U/I02<br>ND9_U/I09<br>ND9_U/I45 | Pending                                                                                     |                  |                  |

Table 15 Ambient temperatures, ND9\_E2

| Variant type | Ex d IIC T4...T6, AEx d IIC T4...T6<br>Ex tb IIIC T100 °C IP66, AEx tb IIIC T100 °C IP66 |                   |                   |
|--------------|------------------------------------------------------------------------------------------|-------------------|-------------------|
|              | Ambient temperature ranges                                                               |                   |                   |
|              | T6                                                                                       | T5                | T4                |
| ND9_E2       | -40 °C... +60 °C                                                                         | -40 °C... +75 °C  | -40 °C... +85 °C  |
| ND9_E2/I02   | -40 °C ... +60 °C                                                                        | -40 °C ... +75 °C | -40 °C ... +85 °C |
| ND9_E2/I09   | -25 °C ... +60 °C                                                                        | -25 °C ... +75 °C | -25 °C ... +85 °C |
| ND9_E2/I32   | -25 °C ... +60 °C                                                                        | -25 °C ... +70 °C | -25 °C ... +70 °C |
| ND9_E2/D33   | -40 °C ... +60 °C                                                                        | -40 °C ... +75 °C | -40 °C ... +82 °C |
| ND9_E2/D44   | -40 °C ... +60 °C                                                                        | -40 °C ... +75 °C | -40 °C ... +82 °C |
| ND9_E2/I45   | -25 °C ... +60 °C                                                                        | -25 °C ... +75 °C | -25 °C ... +85 °C |
| ND9_E2/K05   | -40 °C ... +60 °C                                                                        | -40 °C ... +75 °C | -40 °C ... +85 °C |
| ND9_E2/IK06  | -40 °C ... +60 °C                                                                        | -40 °C ... +75 °C | -40 °C ... +85 °C |
| ND9_E2/B06   | -40 °C ... +60 °C                                                                        | -40 °C ... +75 °C | -40 °C ... +85 °C |

Table 16 Ambient temperatures, ND9\_Z Inmetro

| Variant type | Ex ia IIC T4/T5/T6 Ga<br>Ex ia IIC T4/T5/T6 Gb |                   |                   |
|--------------|------------------------------------------------|-------------------|-------------------|
|              | Ambient temperature ranges                     |                   |                   |
|              | T6                                             | T5                | T4                |
| ND91_Z       | -40 °C ... +50 °C                              | -40 °C ... +65 °C | -40 °C ... +80 °C |
| ND91_Z/I02   | -40 °C ... +50 °C                              | -40 °C ... +64 °C | -40 °C ... +80 °C |
| ND91_Z/I09   | -25 °C ... +50 °C                              | -25 °C ... +65 °C | -25 °C ... +80 °C |
| ND91_Z/I45   | -25 °C ... +50 °C                              | -25 °C ... +64 °C | -25 °C ... +80 °C |

Table 17 Ambient temperatures, ND9\_Z Inmetro

| Variant type | Ex nA IIC T4/T5/T6 Gc<br>Ex ic IIC T4/T5/T6 Gc |                   |                   |
|--------------|------------------------------------------------|-------------------|-------------------|
|              | Ambient temperature ranges                     |                   |                   |
|              | T6                                             | T5                | T4                |
| ND91_Z       | -40 °C ... +60 °C                              | -40 °C ... +75 °C | -40 °C ... +85 °C |
| ND91_Z/I02   | -40 °C ... +60 °C                              | -40 °C ... +75 °C | -40 °C ... +85 °C |
| ND91_Z/I09   | -25 °C ... +60 °C                              | -25 °C ... +75 °C | -25 °C ... +85 °C |
| ND91_Z/I45   | -25 °C ... +60 °C                              | -25 °C ... +75 °C | -25 °C ... +85 °C |

Table 18 Ambient temperatures, ND9\_Z Inmetro

| Variant type                                                   | Ex d IIC T4/T5/T6 Gb<br>Ex tb IIIC T100 °C Db IP66 |                   |                   |
|----------------------------------------------------------------|----------------------------------------------------|-------------------|-------------------|
|                                                                | Ambient temperature ranges                         |                   |                   |
|                                                                | T6                                                 | T5                | T4                |
| ND9_E1<br>ND9_E1/I02<br>ND9_E1/K05<br>ND9_E1/K06<br>ND9_E1/B06 | -40 °C ... +60 °C                                  | -40 °C ... +75 °C | -40 °C ... +85 °C |
| ND9_E1/D33<br>ND9_E1/D44                                       | -40 °C ... +60 °C                                  | -40 °C ... +75 °C | -40 °C ... +82 °C |
| ND9_E1/I09<br>ND9_E1/I45                                       | -25 °C ... +60 °C                                  | -25 °C ... +75 °C | -25 °C ... +85 °C |
| ND9_E1/I56                                                     | -25 °C ... +60 °C                                  | -25 °C ... +75 °C | -25 °C ... +80 °C |
| ND9_E1/I32                                                     | -25 °C ... +60 °C                                  | -25 °C ... +70 °C | -25 °C ... +70 °C |

## 9.2 Installation on a valve controller

The limit switch may be installed on an existing valve controller.

### ND9100

- ❑ If the valve controller is already mounted on an actuator/valve assembly, operate the actuator into the closed or open position.
- ❑ Remove the cover (100), the pointer (109), the LUI (223), the prestige cover (43) and electronics cover (39).
- ❑ Turn the shaft (311) onto the shaft (11). Fasten the screw (312) using a locking agent such as Loctite. Unfasten the screws (314) in the cam discs (313).
- ❑ Mount the electronics cover (39) and the housing (300) on the valve controller.
- ❑ **ND9100/K00:** Turn the cam discs (313) to avoid contact with the micro switches, if required.
- ❑ Mount the LUI (223) on the bed (306).
- ❑ Mount the pointer (109) on the shaft (311). Adjust the limit switch according to 9.4.

### ND9200, ND9300

- ❑ If the valve controller is already mounted on an actuator/valve assembly, operate the actuator into the closed or open position.
- ❑ Remove the cover (100), the pointer (109), the LUI (223) and electronics cover (39).
- ❑ Turn the shaft (311) onto the shaft (11). Fasten the screw (312) using a locking agent such as Loctite.
- ❑ Mount the electronics cover (39) and the limit switch housing (300) on the valve controller. Lock the housing in place with screw (326). Install the base plate (324) with the limit switches and connector block into the limit switch housing. Fasten the base plate with screws (325), 3 pcs.



- ❑ Install the cam discs (313) and bushings (346) to the shaft.
- ❑ Mount the LUI (223) on the holder (306).
- ❑ Replace the plastic plugs with metal ones in conduit entries which will not be used.
- ❑ Mount the pointer (109) on the shaft (311). Adjust the limit switch according to 9.4.

### 9.3 Electrical connections

Before connecting the power, make sure that the electrical specifications and the wiring meet the installation conditions. See the diagrams in 12.11. Refer to the information on the identification plate.

**ND9000/D\_\_ and ND9000/I\_\_:** Observe the functioning of the proximity switch; activated when the active face is either covered or free.

### 9.4 Adjustment

The pointer (109) need not be removed for adjustment.

When the limit switch is ordered together with the valve and the actuator, the valve controller switches are factory-adjusted. The limits may be adjusted by altering the position of the cam discs (313) on the shaft.

The lower switch is activated at the closed limit and the upper switch at the open limit.

- ❑ With the actuator in the open or closed position, locate the switching point by turning the cam disc so that the switch state changes approx. 5°–6° before the limit.

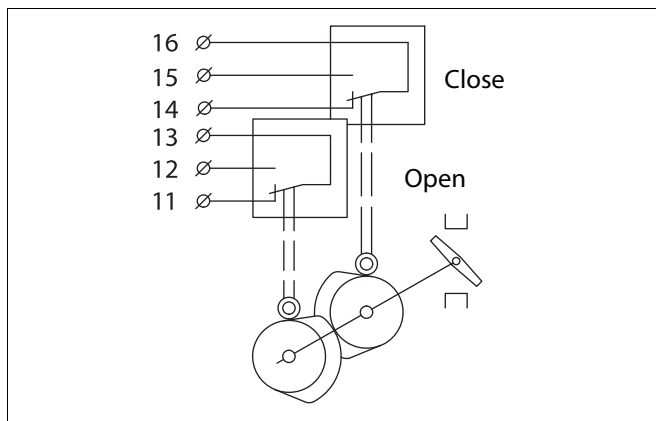


Fig. 49 Limit switch adjustment, 2 switches

- ❑ **ND9000/D\_\_ and ND9000/I\_\_:** Use the LED indicator or a separate measuring instrument as an aid.
- ❑ After re-installation of the actuator, first adjust its mechanical limits according to the valve, then the valve controller, and finally the limit switch.
- ❑ When adjustment is completed, turn the pointer (109) so that the yellow line is parallel with the valve closure member.

### 9.5 Removal of the limit switches for accessing the valve controller

#### ND9100

- ❑ Remove the cover (100) and the pointer (109).
- ❑ Detach the cam discs (313).
- ❑ Remove the LUI cabling from the circuit board.
- ❑ Loosen the screws (303) and remove the housing (300).
- ❑ Remove the electronics cover (39).
- ❑ Proceed with the valve controller as applicable.
- ❑ Re-install the limit switch according to 9.2 and check the adjustment according to 9.4.

#### ND9200, ND9300

- ❑ Remove the cover (100) and the pointer (109).
- ❑ Loosen the screws (314) in the cam discs (313) and remove the cam disks and spacers (346) from the shaft.
- ❑ Remove the LUI cabling from the circuit board. Disconnect and remove all cabling which enters the limit switch housing (300).
- ❑ Remove screws (325), 3 pcs. and lift out the limit switch base plate (324) complete with switches, LUI and connector block.
- ❑ Open screw (326) and turn the limit switch housing (300) from the positioner housing.
- ❑ Remove the electronics cover (39).
- ❑ Proceed with the valve controller as applicable.
- ❑ Re-install the limit switch according to 9.2 and check the adjustment according to 9.4.

#### Ex WARNING:

**The locking screw of the limit switch housing (Part 326) is essential to explosion protection.**

The limit switch housing has to be locked in place for Ex d protection. The screw grounds the limit switch housing to the housing of the valve controller.

### 9.6 Circuit diagrams

The internal circuitry of the limit switch is shown in the connection diagrams in 12.11 and inside the cover (not ND9100H/I\_\_).

### 9.7 Maintenance

Regular maintenance of the limit switch is not necessary.

## 10 TOOLS

Following tools are needed for the product installation and service:

- ❑ Flat screwdriver  
0.4 x 2.5 x 80 mm  
1.2 x 6.5 x 150 mm
- ❑ Torx screwdriver  
T10  
T15  
T20
- ❑ Phillips screwdriver  
PH1 x 60 mm
- ❑ Allen key  
2 mm  
4 mm  
5 mm

Other tools are depended on actuator where ND installed.

## 11 ORDERING SPARE PARTS


Spare parts are delivered as modules. The modules available are indicated in 12.1 and 12.3.

When ordering spare parts, always include the following information:

- ❑ Valve controller type designation and serial number from the ID plate
- ❑ The code of this manual, the part number, the part name and quantity required

## 12 DRAWINGS AND PARTS LISTS

### 12.1 Exploded view ND9100, ND9400, ND7100

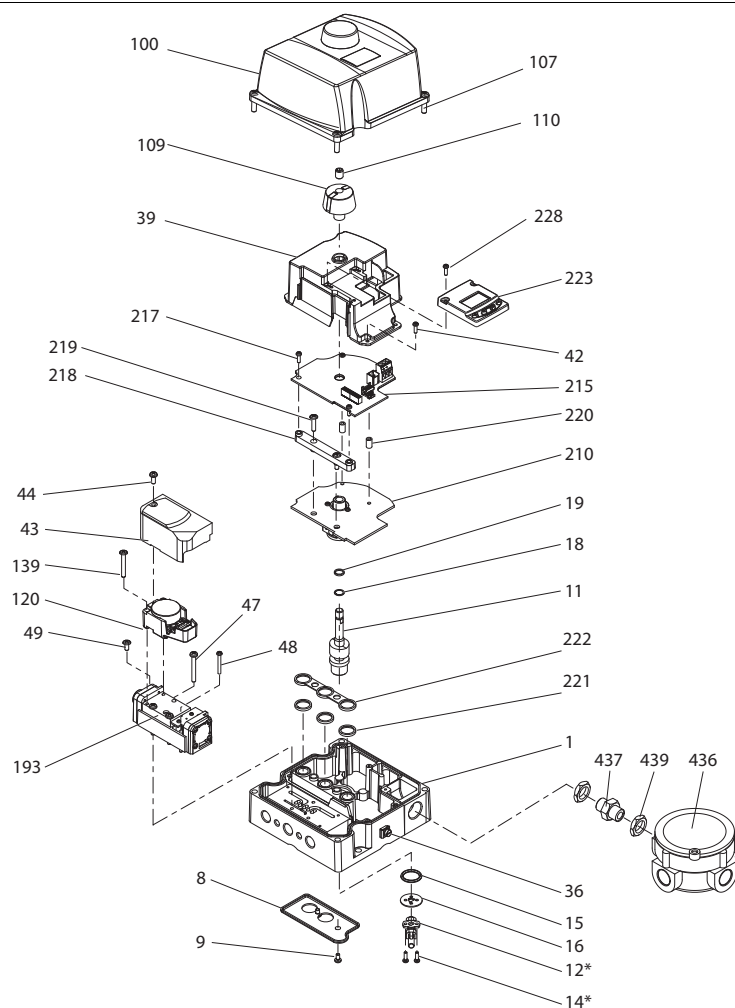


| Item             | Qty | Description                      | Spare part modules                                                                  |
|------------------|-----|----------------------------------|-------------------------------------------------------------------------------------|
| 1                | 1   | Housing                          |                                                                                     |
| 8                | 1   | Exhaust cover                    |                                                                                     |
| 9                | 2   | Screw                            |                                                                                     |
| 11               | 1   | Shaft                            |                                                                                     |
| 15               | 1   | O-ring                           |                                                                                     |
| 16               | 1   | Washer                           |                                                                                     |
| 18               | 1   | Wave spring                      |                                                                                     |
| 19               | 1   | Bushing                          |                                                                                     |
| 36               | 1   | Grounding screw                  |                                                                                     |
| 39               | 1   | Electronics cover                |                                                                                     |
| 42               | 4   | Screw                            |                                                                                     |
| 43               | 1   | Prestage cover                   |                                                                                     |
| 44               | 1   | Screw                            |                                                                                     |
| 47               | 3   | Screw                            |                                                                                     |
| 48               | 2   | Screw                            |                                                                                     |
| 49               | 1   | Screw                            |                                                                                     |
| 100              | 1   | Cover .....                      | ND91_ = H035118, ND71_ = H099717, includes item 107                                 |
| 107              | 4   | Screw                            |                                                                                     |
| 109              | 1   | Pointer                          |                                                                                     |
| 110              | 1   | Grub screw                       |                                                                                     |
| 120              | 1   | Prestage unit .....              | H039292, includes item 139                                                          |
| 139              | 2   | Screw                            |                                                                                     |
| 193 <sup>x</sup> | 1   | Spool valve assembly .....       | ND9102 = H060178, ND9103 = H039293, ND9106 = H039294, kits include items 47, 48, 49 |
| 210              | 1   | Valve Controller board           |                                                                                     |
| 215**            | 1   | Communication board .....        | ND9_H = H039296, ND9_HT = H041368, ND9_F = H033594, ND9_P = H033595                 |
| 217              | 4   | Screw                            |                                                                                     |
| 218              | 1   | Support                          |                                                                                     |
| 219              | 2   | Screw                            |                                                                                     |
| 220              | 2   | Threaded spacer                  |                                                                                     |
| 221              | 3   | O-ring                           |                                                                                     |
| 222              | 1   | Isolation part                   |                                                                                     |
| 223              | 1   | Local user interface (LUI) ..... | H039295, includes item 228                                                          |
| 228              | 2   | Screw                            |                                                                                     |
| 436              | 1   | Connection box                   | Not available with ND7000                                                           |
| 437              | 1   | Nipple                           |                                                                                     |
| 439              | 2   | Nut                              |                                                                                     |

\*) Mounting parts: coupling (12), screws (14)

\*\*) PH number from the ID plate is required

x) Spool valve assembly includes the spool valve with the fastener. Separate ID code for fastener is H077294. This contains also all gaskets and diaphragms.

## 12.2 Exploded view ND9100\_/D\_, ND9100\_/I\_, ND9100\_/K0\_ and ND9100\_/B06

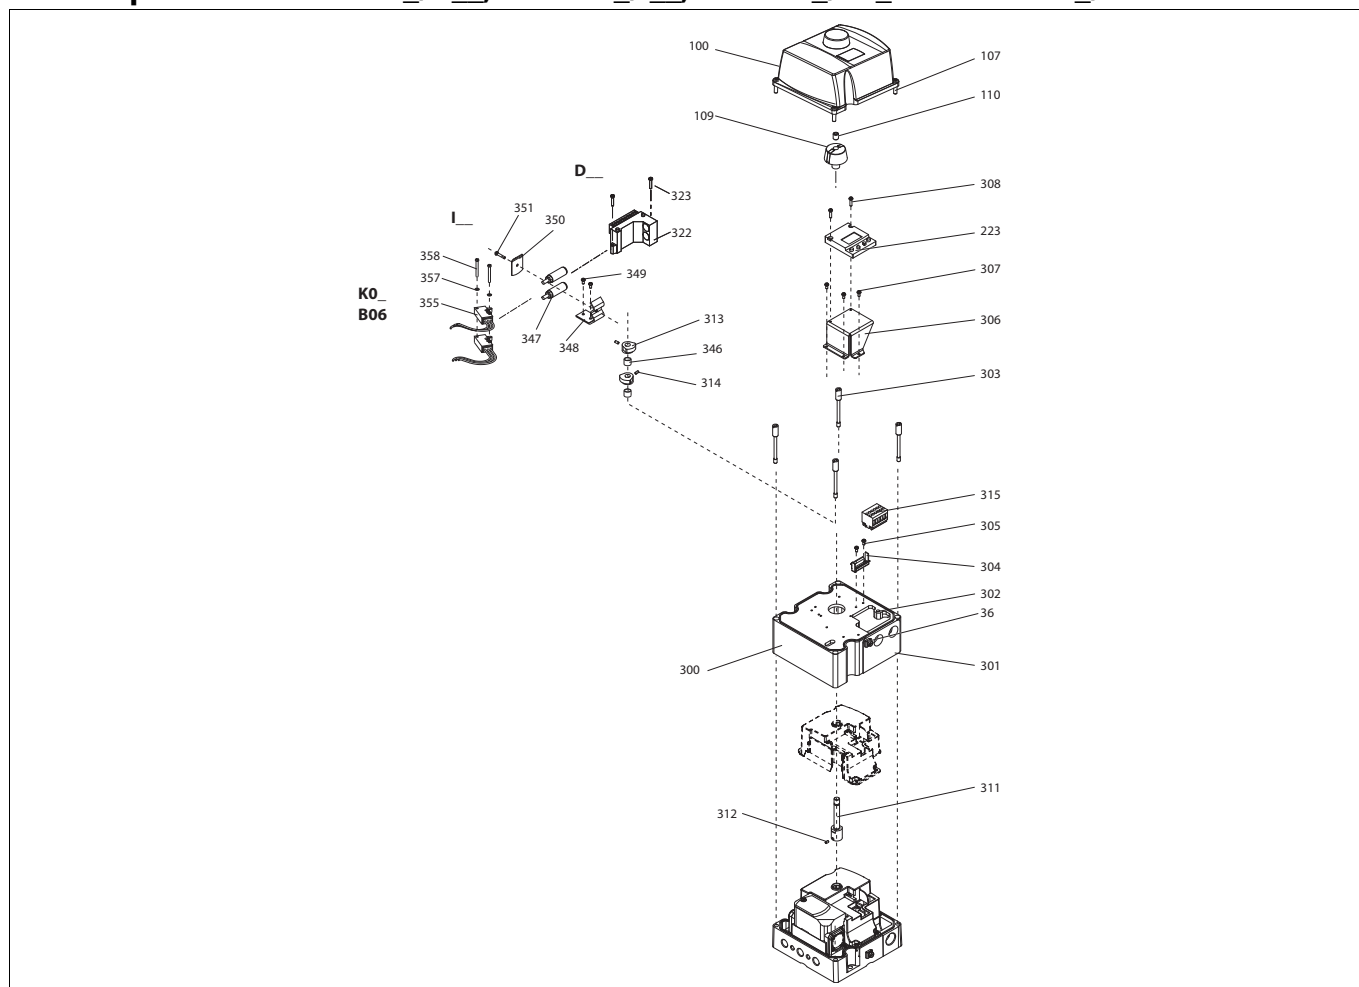

| Item | Qty    | Description                       |
|------|--------|-----------------------------------|
| 36   | 1      | Grounding screw                   |
| 100  | 1      | Cover                             |
| 107  | 4      | Screw                             |
| 109  | 1      | Pointer                           |
| 110  | 1      | Screw                             |
| 223  | 1      | Local user interface (LUI)        |
| 300  | 1      | Housing                           |
| 301  | 1      | Gasket                            |
| 302  | 1      | Screw                             |
| 303  | 4      | Screw                             |
| 304  | 1      | Bracket                           |
| 305  | 2      | Screw                             |
| 306  | 1      | Bed of Local User Interface (LUI) |
| 307  | 3      | Screw                             |
| 308  | 2      | Screw                             |
| 311  | 1      | Shaft                             |
| 312  | 2      | Screw                             |
| 313  | 2      | Cam disc                          |
| 314  | 2      | Screw                             |
| 315  | 6      | Terminal block                    |
| 322  | 1      | Proximity switch (D_)             |
| 323  | 2      | Screw                             |
| 346  | 1 or 2 | Bushing (I_)                      |
| 347  | 2      | Inductive proximity sensor (I_)   |
| 348  | 1      | Fastening plate                   |
| 349  | 2      | Screw                             |
| 350  | 1      | Washer                            |
| 351  | 1      | Screw                             |
| 355  | 2      | Microswitch (K0_, B06)            |
| 357  | 2      | Spring washer (K0_, B06)          |
| 358  | 2      | Screw (K0_, B06)                  |

ND9300, ND9200\_E2

100

107

110

109

228

223

42

39

217

218

219

215

220

210

19

18

104

139

182

183

120

140

173

167

166

164

162\*\*

163

ND9200  
ND7200

174

193

63

61

47

15

16

12\*

14\*

36

2

222

221

111

437

439

436

57

ND9300

437

439

436

57

450

449

448

458

451

176

181

196

200

184

170

169\*\*

177

199

197

171

173


| Item   | Qty | Description                      | Spare part modules                                                                                                                                                                           |
|--------|-----|----------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 2      | 1   | Housing                          |                                                                                                                                                                                              |
| 15     | 1   | O-ring                           |                                                                                                                                                                                              |
| 16     | 1   | Washer                           |                                                                                                                                                                                              |
| 18     | 1   | Wave spring                      |                                                                                                                                                                                              |
| 19     | 1   | Bushing                          |                                                                                                                                                                                              |
| 36     | 1   | Grounding screw                  |                                                                                                                                                                                              |
| 39     | 1   | Inner cover                      |                                                                                                                                                                                              |
| 42     | 3   | Screw                            |                                                                                                                                                                                              |
| 47     | 3   | Screw                            |                                                                                                                                                                                              |
| 57     | 1   | Conduit entry adapter            |                                                                                                                                                                                              |
| 61     | 1   | Spool valve cover                |                                                                                                                                                                                              |
| 63     | 1   | Gasket                           |                                                                                                                                                                                              |
| 100    | 1   | Cover .....                      | ND92_E1 = H087634, ND92_E2 = H087617, ND9300 = H087628<br>ND72_E1 = H087634, ND72_E2 = H087617                                                                                               |
| 104    | 1   | O-ring                           |                                                                                                                                                                                              |
| 107    | 1   | Screw                            |                                                                                                                                                                                              |
| 109    | 1   | Pointer                          |                                                                                                                                                                                              |
| 110    | 1   | Stop screw                       |                                                                                                                                                                                              |
| 111    | 1   | Spring                           |                                                                                                                                                                                              |
| 120    | 1   | Prestage unit .....              | H039292, also includes items 139 and 140                                                                                                                                                     |
| 139    | 2   | Screw                            |                                                                                                                                                                                              |
| 140    | 1   | O-ring                           |                                                                                                                                                                                              |
| 162**  | 1   | Supply pressure diaphragm .....  | ND92 = H048584, ND93 = H078592, ND72 = H048584                                                                                                                                               |
| 163    | 1   | Diaphragm plate                  |                                                                                                                                                                                              |
| 164**  | 1   | Spring guide                     |                                                                                                                                                                                              |
| 165**  | 1   | O-ring                           |                                                                                                                                                                                              |
| 166    | 1   | Spring                           |                                                                                                                                                                                              |
| 167    | 1   | Diaphragm cover                  |                                                                                                                                                                                              |
| 169**  | 1   | Pilot pressure diaphragm         |                                                                                                                                                                                              |
| 170    | 1   | Diaphragm plate                  |                                                                                                                                                                                              |
| 171    | 1   | Diaphragm cover                  |                                                                                                                                                                                              |
| 173    | 8   | Screw                            |                                                                                                                                                                                              |
| 174    | 1   | Gasket                           |                                                                                                                                                                                              |
| 176    | 1   | Bushing                          |                                                                                                                                                                                              |
| 177**  | 1   | O-ring                           |                                                                                                                                                                                              |
| 181    | 1   | Sleeve                           |                                                                                                                                                                                              |
| 182    | 1   | Spool sensor board               |                                                                                                                                                                                              |
| 183    | 1   | Screw                            |                                                                                                                                                                                              |
| 184    | 1   | Plunger                          |                                                                                                                                                                                              |
| 193    | 1   | Spool valve .....                | ND9202 = H060179, ND9203 = H048586, ND9206 = H048587, ND9302 = H076999,<br>ND9303 = H077000, ND9306 = H077001<br>ND7202 = H060179, ND7203 = H048586, ND7206 = H048587, also includes item 63 |
| 196    | 1   | Bushing                          |                                                                                                                                                                                              |
| 197    | 1   | Restriction assembly             |                                                                                                                                                                                              |
| 199    | 1   | O-ring                           |                                                                                                                                                                                              |
| 200    | 1   | Flame arrester .....             | H080913                                                                                                                                                                                      |
| 210    | 1   | Valve controller board           |                                                                                                                                                                                              |
| 215*** | 1   | Communication board .....        | ND9_H = H039296, ND9_HT = H041368, ND9_F = H033594, ND9_P = H033595                                                                                                                          |
| 217    | 4   | Screw                            |                                                                                                                                                                                              |
| 218    | 1   | Support                          |                                                                                                                                                                                              |
| 219    | 2   | Screw                            |                                                                                                                                                                                              |
| 220    | 2   | Threaded spacer                  |                                                                                                                                                                                              |
| 221    | 3   | O-ring                           |                                                                                                                                                                                              |
| 222    | 1   | Isolation part                   |                                                                                                                                                                                              |
| 223    | 1   | Local user interface (LUI) ..... | H039295, includes item 228                                                                                                                                                                   |
| 228    | 2   | Screw                            |                                                                                                                                                                                              |
| 436    | 1   | Connection box                   | Not available with ND7000                                                                                                                                                                    |
| 437    | 1   | Nipple                           |                                                                                                                                                                                              |
| 439    | 2   | Nut                              |                                                                                                                                                                                              |
| 448    | 1   | Bracket                          |                                                                                                                                                                                              |
| 449    | 2   | Screw                            |                                                                                                                                                                                              |
| 450    | 1   | Screw                            |                                                                                                                                                                                              |
| 451    | 1   | Hexagon nut                      |                                                                                                                                                                                              |
| 458    | 1   | Washer                           |                                                                                                                                                                                              |

\*) Mounting parts: coupling (12), screws (14)

\*\*) Diaphragm set includes additional \*\* marked parts

\*\*\*) PH number from the ID plate is required

## 12.4 Exploded view ND9200\_/D\_, ND9200\_/I\_, ND9200\_/K0\_, ND9200\_/B06, ND9300\_/D\_, ND9300\_/I\_, ND9300\_/K0\_, ND9300\_/B06\_

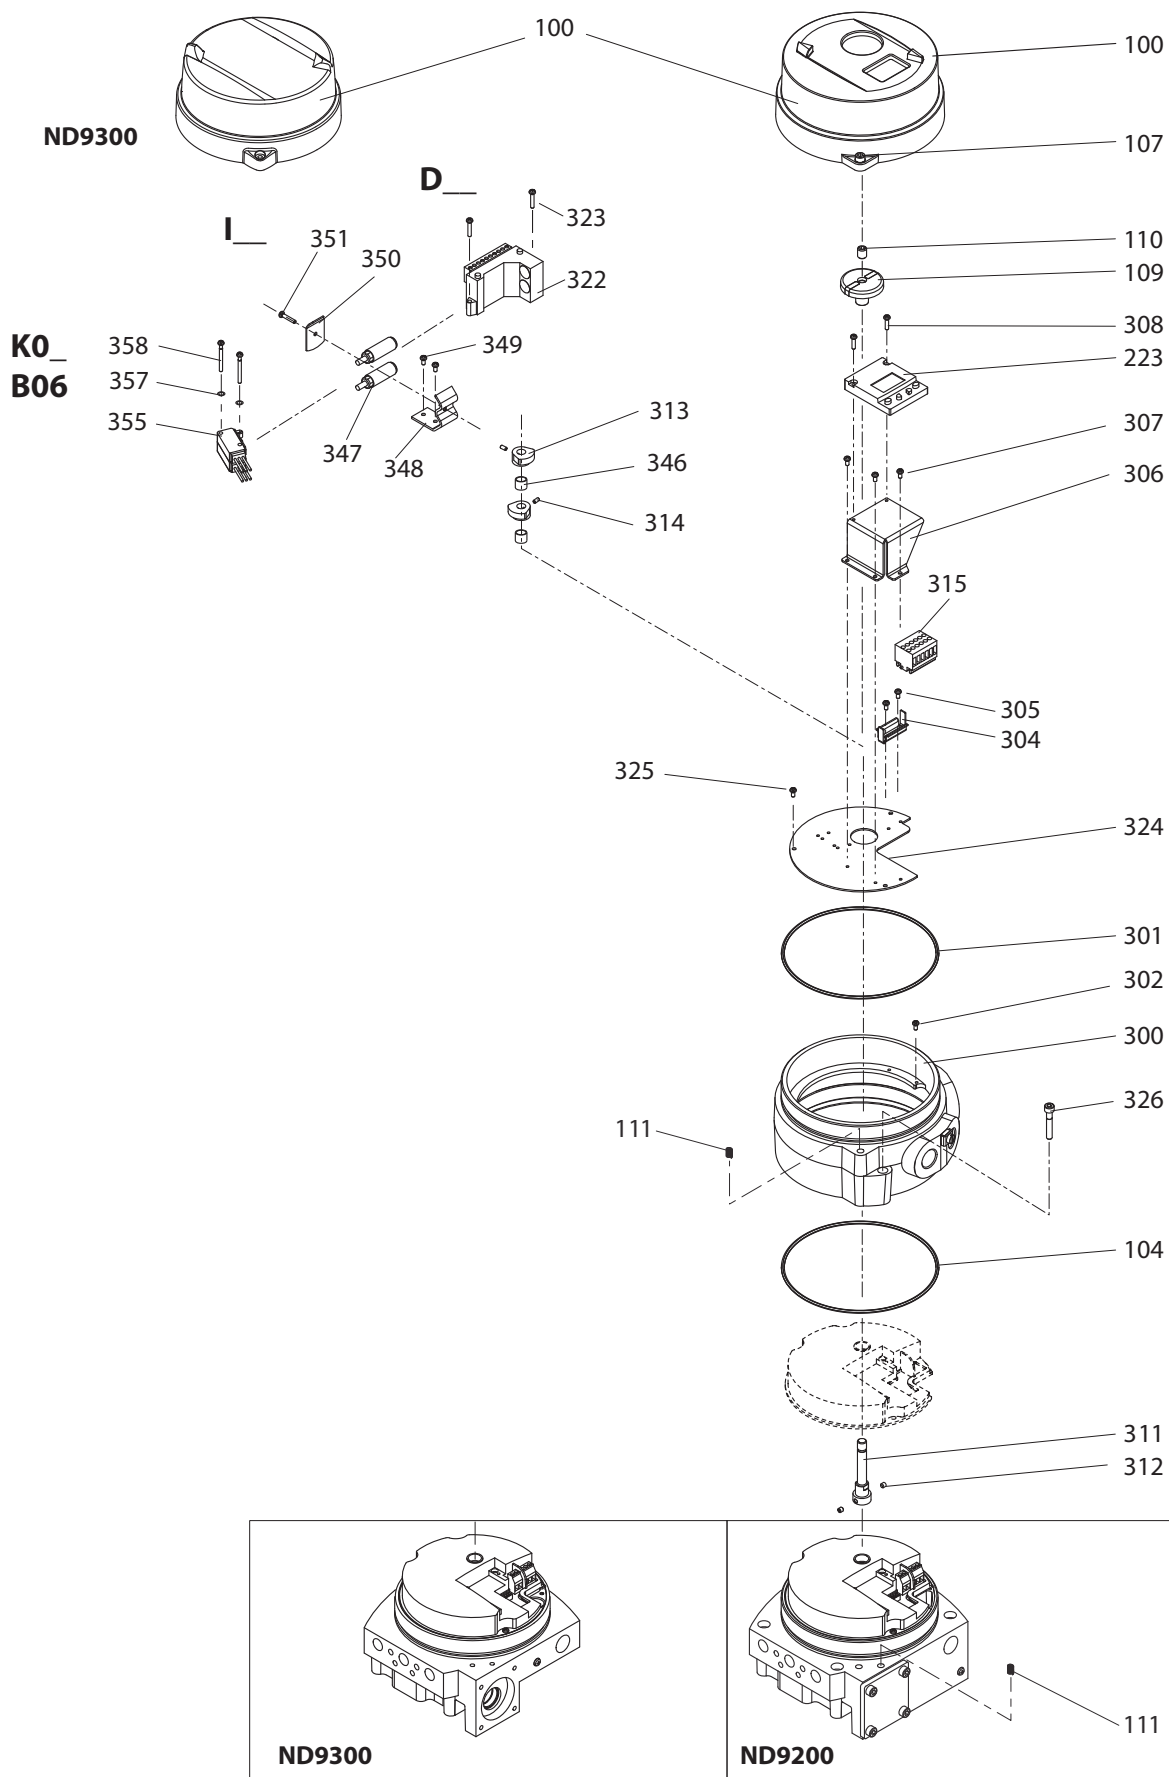


---

| Item | Qty    | Description                |
|------|--------|----------------------------|
| 100  | 1      | Cover                      |
| 104  | 1      | O-ring                     |
| 107  | 1      | Screw                      |
| 109  | 1      | Pointer                    |
| 110  | 1      | Stop screw                 |
| 111  | 2      | Spring (ND9200)            |
| 223  | 1      | Local user interface (LUI) |
| 300  | 1      | Housing                    |
| 301  | 1      | O-ring                     |
| 302  | 1      | Screw                      |
| 304  | 1      | Bracket                    |
| 305  | 2      | Screw                      |
| 306  | 1      | Bracket                    |
| 307  | 3      | Screw                      |
| 308  | 2      | Screw                      |
| 311  | 1      | Extension shaft            |
| 312  | 2      | Screw                      |
| 313  | 2 or 4 | Cam disc                   |
| 314  | 2 or 4 | Screw                      |
| 315  | 1      | Terminal block             |
| 322  | 1      | Proximity switch           |
| 323  | 2      | Screw                      |
| 324  | 1      | Base plate                 |
| 325  | 2      | Screw                      |
| 326  | 1      | Screw                      |
| 346  | 1 or 2 | Bushing                    |
| 347  | 2      | Proximity switch           |
| 348  | 1      | Fixing plate               |
| 349  | 2      | Screw                      |
| 350  | 1      | Washer                     |
| 351  | 1      | Screw                      |
| 355  | 2 or 4 | Microswitch                |
| 357  | 2      | Spring washer              |
| 358  | 2      | Screw                      |

12.5 Mounting parts for EC05-14/EJ05-14 actuators, rising signal opens valve  
ND9100, ND7100

**E\_05 - 14**

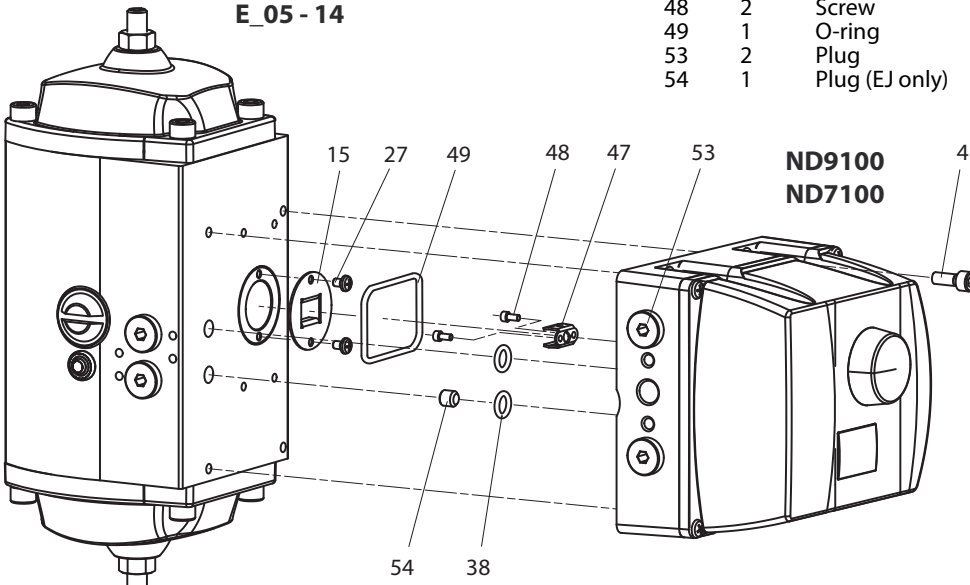


| Item | Qty | Description    |
|------|-----|----------------|
| 4    | 3   | Screw          |
| 15   | 1   | Coupling       |
| 27   | 2   | Screw          |
| 38   | 2   | O-ring         |
| 47   | 1   | Coupler socket |
| 48   | 2   | Screw          |
| 49   | 1   | O-ring         |
| 53   | 2   | Plug           |
| 54   | 1   | Plug (EJ only) |

**ND9100  
ND7100**

ND9200, ND7200

**E\_05 - 14**

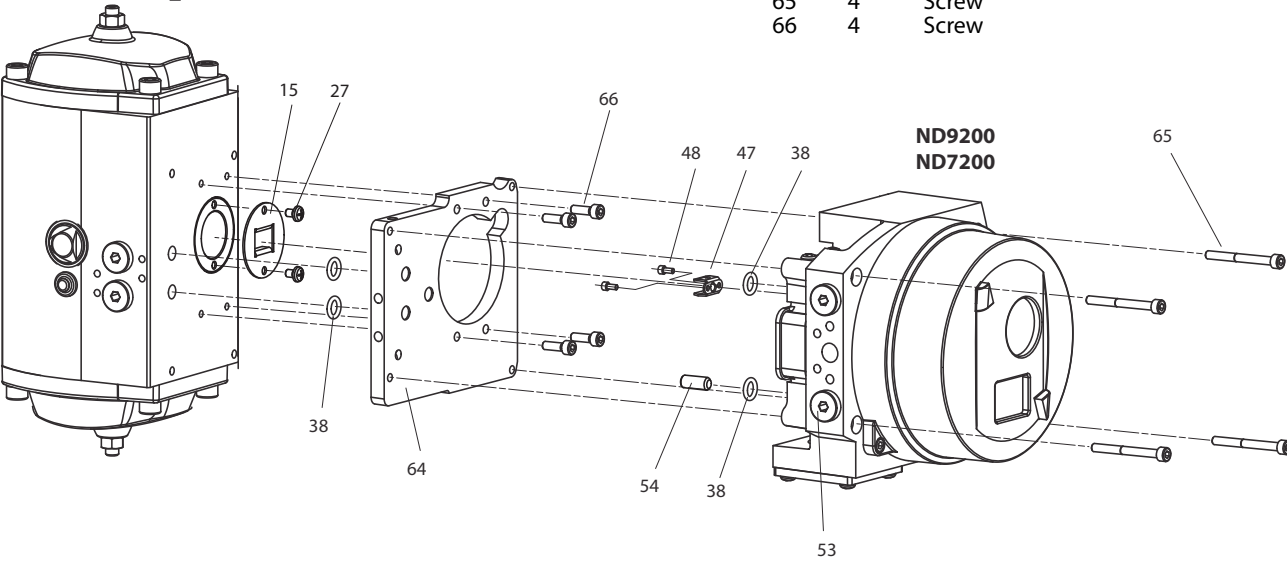

| Item | Qty | Description    |
|------|-----|----------------|
| 15   | 1   | Coupling       |
| 27   | 2   | Screw          |
| 38   | 4   | O-ring         |
| 47   | 1   | Coupler socket |
| 48   | 2   | Screw          |
| 53   | 2   | Plug           |
| 54   | 1   | Plug (EJ only) |
| 64   | 1   | Mounting plate |
| 65   | 4   | Screw          |
| 66   | 4   | Screw          |

**ND9200  
ND7200**



12.6 Mounting parts for B1C/B1J 6-20 actuators  
ND9100, ND7100

**VDI/VDE 3845 attachment face**

| Item | Qty | Description              |
|------|-----|--------------------------|
| 1    | 1   | Mounting bracket         |
| 2    | 1   | Ear                      |
| 3    | 4   | Washer                   |
| 4    | 4   | Screw                    |
| 28   | 4   | Screw                    |
| 29   | 1   | Screw                    |
| 36   | 1   | Couplings jacket         |
| 47   | 1   | Coupler socket           |
| 48   | 2   | Screw                    |
| 53   | 1   | Plug (BJ actuators only) |
| 54   | 2   | Plug                     |

**Neles attachment face**

| Item | Qty | Description              |
|------|-----|--------------------------|
| 1    | 1   | Mounting bracket         |
| 2    | 1   | Draught piece            |
| 3    | 4   | Washer                   |
| 4    | 4   | Screw                    |
| 13   | 2   | Screw                    |
| 14   | 2   | Hexagon nut              |
| 28   | 4   | Screw                    |
| 29   | 1   | Screw                    |
| 47   | 1   | Coupler socket           |
| 48   | 2   | Screw                    |
| 53   | 1   | Plug (BJ actuators only) |
| 54   | 2   | Plug                     |

ND9200, ND9300, ND7200

**VDI/VDE 3845 attachment face**

| Item | Qty | Description              |
|------|-----|--------------------------|
| 1    | 1   | Mounting bracket         |
| 2    | 1   | Ear                      |
| 3    | 4   | Washer                   |
| 4    | 4   | Screw                    |
| 28   | 4   | Screw                    |
| 29   | 1   | Screw                    |
| 36   | 1   | Couplings jacket         |
| 47   | 1   | Coupler socket           |
| 48   | 2   | Screw                    |
| 53   | 1   | Plug (BJ actuators only) |

**Neles attachment face**

| Item | Qty | Description              |
|------|-----|--------------------------|
| 1    | 1   | Mounting bracket         |
| 2    | 1   | Draught piece            |
| 3    | 4   | Washer                   |
| 4    | 4   | Screw                    |
| 13   | 2   | Screw                    |
| 14   | 2   | Hexagon nut              |
| 28   | 4   | Screw                    |
| 29   | 1   | Screw                    |
| 47   | 1   | Coupler socket           |
| 48   | 2   | Screw                    |
| 53   | 1   | Plug (BJ actuators only) |

**Note:** See 12.7 for old series B actuators

12.7 Mounting parts for B1C/B1J 25-50, B1C 502 and B1J322 actuators  
ND9100, ND7100

BC 25 - 50  
BJ 25 - 322

BC 502

ND9100  
ND7100

| Item | Qty | Description              |
|------|-----|--------------------------|
| 1    | 1   | Mounting bracket         |
| 2    | 1   | Draught piece            |
| 3    | 4   | Washer                   |
| 4    | 4   | Screw                    |
| 27   | 4   | Washer                   |
| 28   | 4   | Screw                    |
| 47   | 1   | Coupler socket           |
| 48   | 2   | Screw                    |
| 53   | 1   | Plug (BJ actuators only) |
| 54   | 2   | Plug                     |

ND9200, ND9300, ND7200

BC 25 - 50  
BJ 25 - 322

BC 502

ND9200  
ND9300  
ND7200

Note: Old series B actuators

new hole drilled  
ø5.5 through

90°

45°


21

Arrow

| Item | Qty | Description              |
|------|-----|--------------------------|
| 1    | 1   | Mounting bracket         |
| 2    | 1   | Draught piece            |
| 3    | 4   | Washer                   |
| 4    | 4   | Screw                    |
| 27   | 4   | Washer                   |
| 28   | 4   | Screw                    |
| 47   | 1   | Coupler socket           |
| 48   | 2   | Screw                    |
| 53   | 1   | Plug (BJ actuators only) |

## 12.8 Mounting parts for Quadra-Powr<sup>®</sup> actuators


### ND9100, ND7100

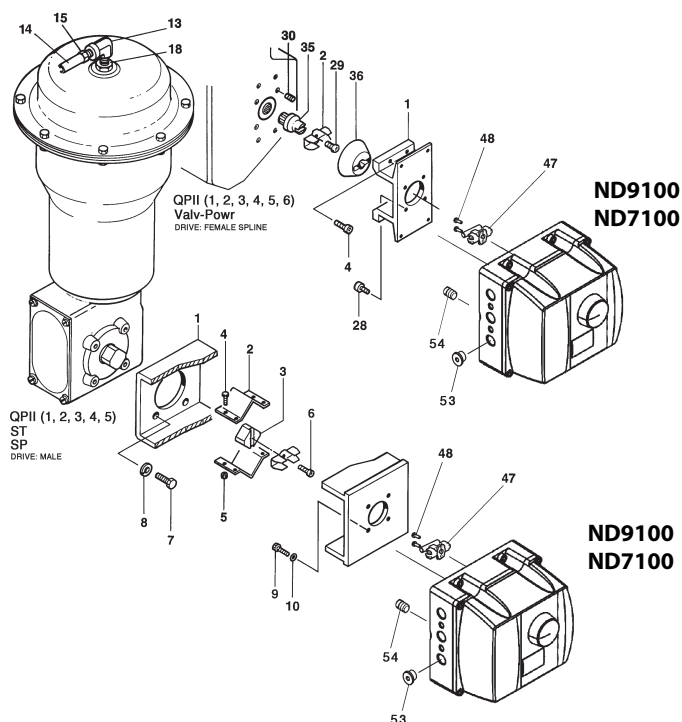

| Item | Qty | Description                             |
|------|-----|-----------------------------------------|
| 1    | 1   | Mounting bracket                        |
| 2    | 1   | Ear                                     |
| 4    | 4   | Screw                                   |
| 28   | 4   | Screw                                   |
| 29   | 1   | Screw                                   |
| 30   | 4   | Screw                                   |
| 35   | 1   | Adapter plug<br>(QP II 1/S- 6/S only)   |
| 35   | 1   | Adapter plate<br>(QP II 2B/K thr. 6_/K) |
| 36   | 1   | Couplings jacket                        |
| 47   | 1   | Coupler socket                          |
| 48   | 2   | Screw                                   |
| 53   | 1   | Plug                                    |
| 54   | 2   | Plug                                    |

| Item | Qty | Description      |
|------|-----|------------------|
| 1    | 1   | Mounting bracket |
| 2    | 2   | Coupling half    |
| 3    | 1   | Adapter          |
| 4    | 4   | Screw            |
| 5    | 4   | Hex nut          |
| 6    | 1   | Screw            |
| 7    | 4   | Screw            |
| 8    | 4   | Washer           |
| 9    | 4   | Screw            |
| 10   | 4   | Washer           |
| 47   | 1   | Coupler socket   |
| 48   | 2   | Screw            |
| 53   | 1   | Plug             |
| 54   | 2   | Plug             |


### ND9200, ND9300, ND7200

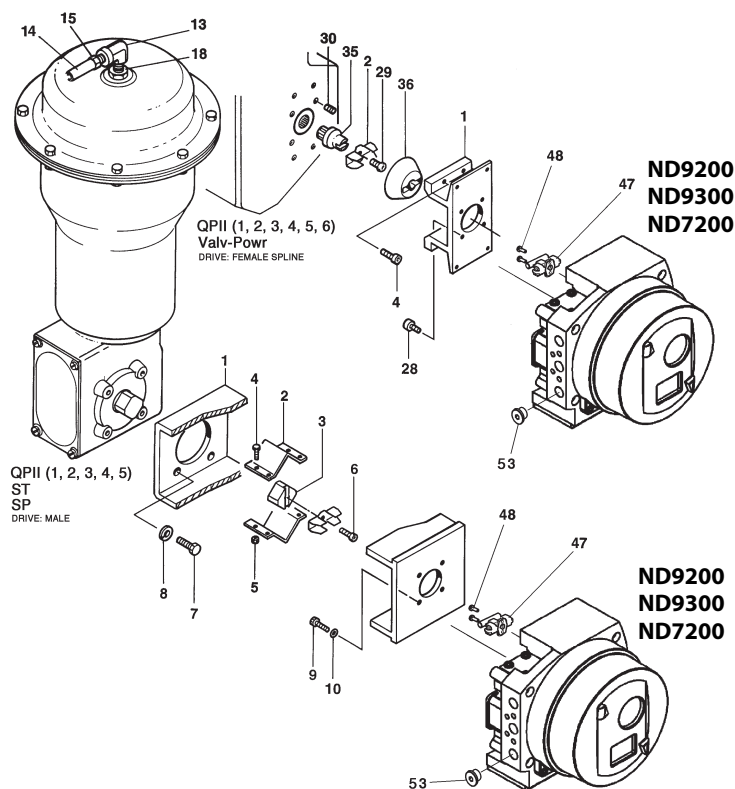

| Item | Qty | Description                             |
|------|-----|-----------------------------------------|
| 1    | 1   | Mounting bracket                        |
| 2    | 1   | Ear                                     |
| 4    | 4   | Screw                                   |
| 28   | 4   | Screw                                   |
| 29   | 1   | Screw                                   |
| 30   | 4   | Screw                                   |
| 35   | 1   | Adapter plug<br>(QP II 1/S- 6/S only)   |
| 35   | 1   | Adapter plate<br>(QP II 2B/K thr. 6_/K) |
| 36   | 1   | Couplings jacket                        |
| 47   | 1   | Coupler socket                          |
| 48   | 2   | Screw                                   |
| 53   | 1   | Plug                                    |

| Item | Qty | Description      |
|------|-----|------------------|
| 1    | 1   | Mounting bracket |
| 2    | 2   | Coupling half    |
| 3    | 1   | Adapter          |
| 4    | 4   | Screw            |
| 5    | 4   | Hex nut          |
| 6    | 1   | Screw            |
| 7    | 4   | Screw            |
| 8    | 4   | Washer           |
| 9    | 4   | Screw            |
| 10   | 4   | Washer           |
| 47   | 1   | Coupler socket   |
| 48   | 2   | Screw            |
| 53   | 1   | Plug             |


12.9 Mounting parts for linear actuators of nelesCV Globe  
ND9100, ND7100

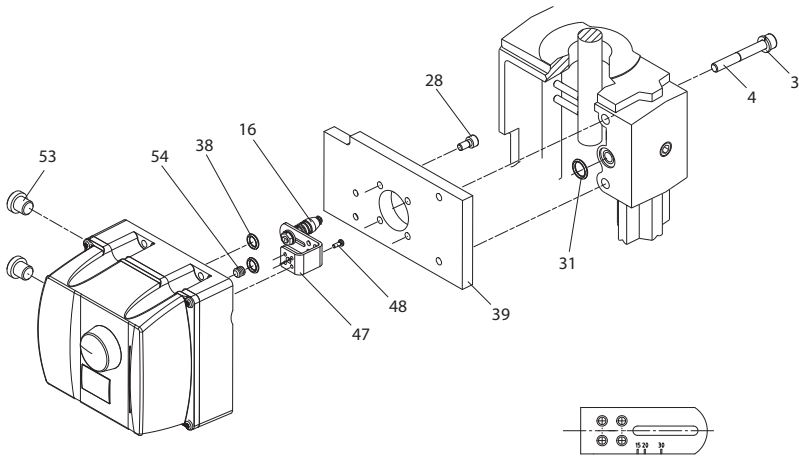

Set conical plug to the scale according to the stroke

| Item | Qty | Description    |
|------|-----|----------------|
| 3    | 2   | Washer         |
| 4    | 2   | Screw          |
| 16   | 1   | Conical plug   |
| 28   | 4   | Screw          |
| 31   | 1   | O-ring         |
| 38   | 2   | O-ring         |
| 39   | 1   | Mounting plate |
| 47   | 1   | Feedback lever |
| 48   | 4   | Screw          |
| 53   | 2   | Plug           |
| 54   | 1   | Plug           |


ND9200, ND7200

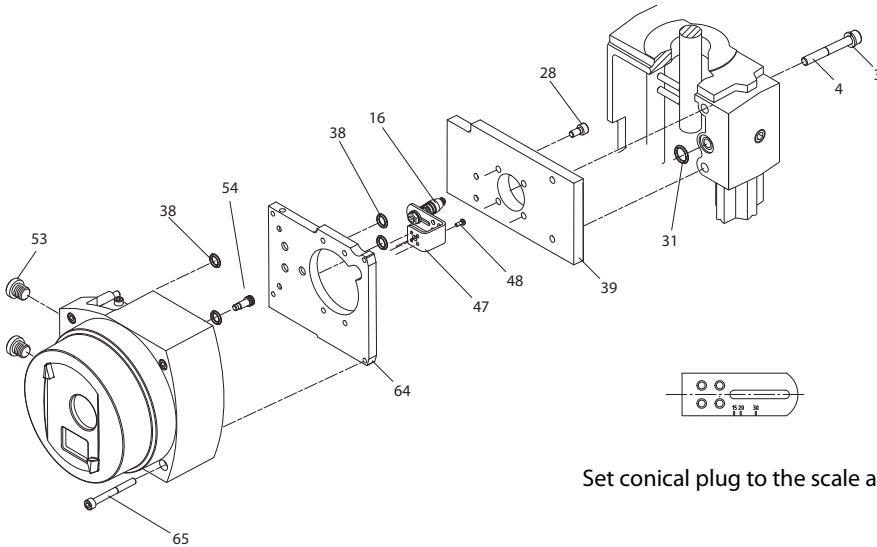

Set conical plug to the scale according to the stroke


| Item | Qty | Description    |
|------|-----|----------------|
| 3    | 2   | Washer         |
| 4    | 2   | Screw          |
| 16   | 1   | Conical plug   |
| 28   | 4   | Screw          |
| 31   | 1   | O-ring         |
| 38   | 2   | O-ring         |
| 39   | 1   | Mounting plate |
| 47   | 1   | Feedback lever |
| 48   | 4   | Screw          |
| 53   | 2   | Plug           |
| 54   | 1   | Plug           |
| 64   | 1   | Mounting plate |
| 65   | 4   | Screw          |

## 12.10 Mounting parts for linear actuators, IEC 60534 ND9100, ND7100

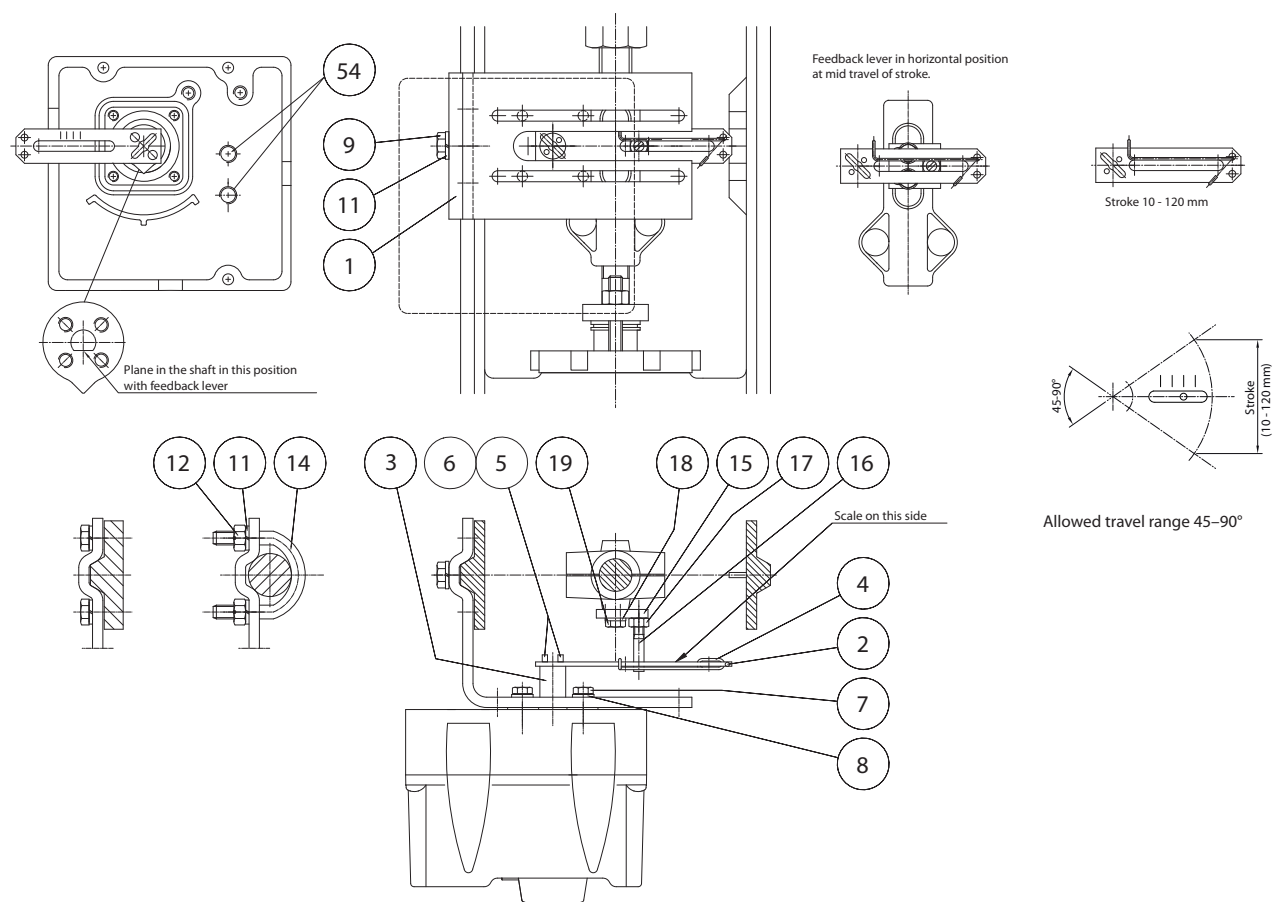

| Item | Qty | Description             |
|------|-----|-------------------------|
| 1    | 1   | Bracket                 |
| 2    | 1   | Feedback lever          |
| 3    | 1   | Filling piece           |
| 4    | 1   | Clearance remove spring |
| 5    | 4   | Cross rec head screw    |
| 6    | 4   | Washer                  |
| 7    | 4   | Hexagon screw           |
| 8    | 4   | Washer                  |
| 9    | 4   | Hexagon screw           |
| 11   | 4   | Spring washer           |
| 12   | 2   | Hexagon nut             |
| 14   | 2   | Clamp                   |
| 15   | 1   | Fixing plate            |
| 16   | 1   | Special screw           |
| 17   | 1   | Hexagon nut             |
| 18   | 2   | Washer                  |
| 19   | 2   | Hexagon screw           |
| 54   | 2   | Plug                    |

# ND9200, ND9300, ND7200

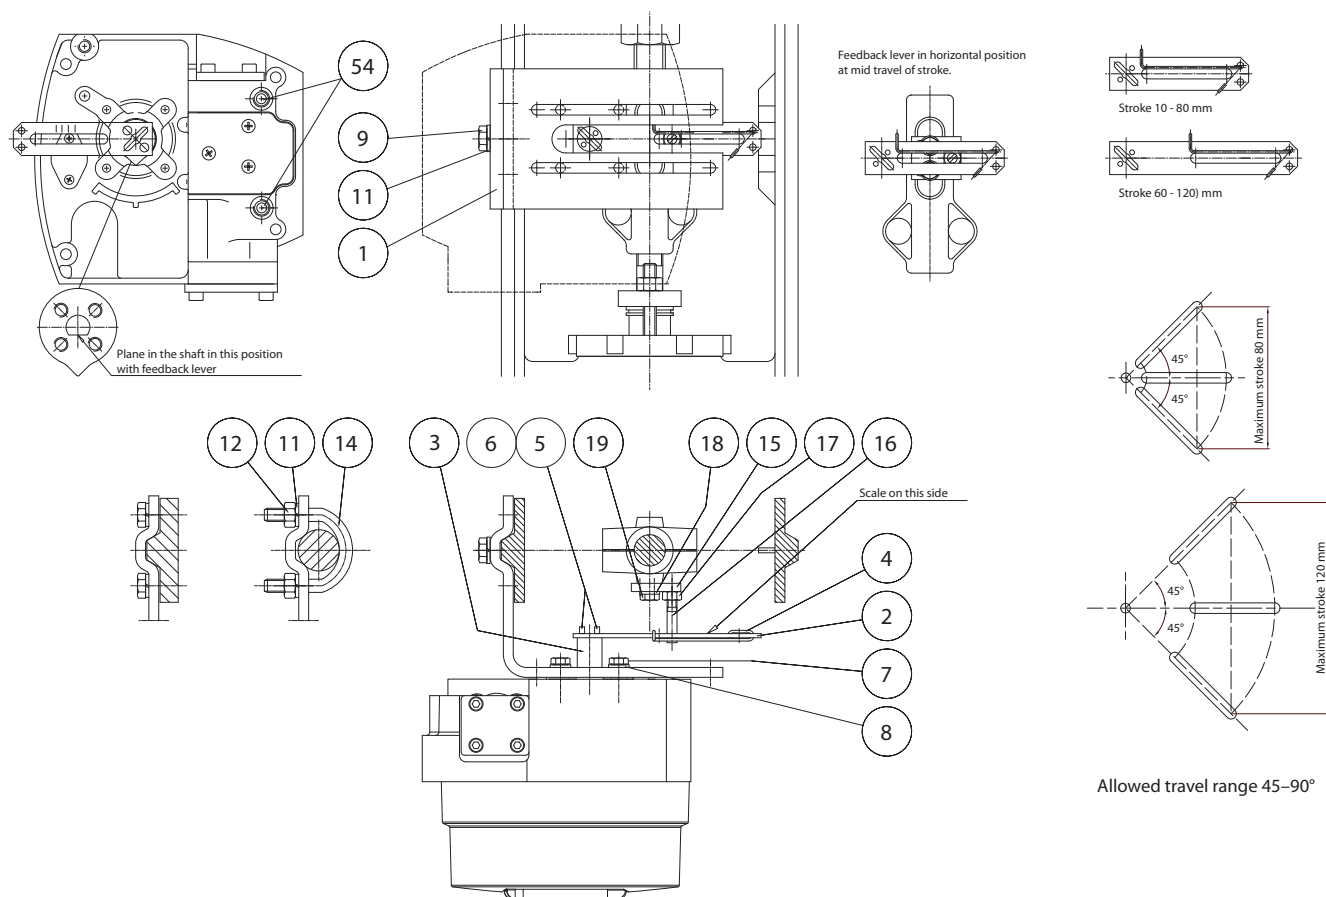


| Item | Qty | Description             |
|------|-----|-------------------------|
| 1    | 1   | Bracket                 |
| 2    | 1   | Feedback lever          |
| 3    | 1   | Filling piece           |
| 4    | 1   | Clearance remove spring |
| 5    | 4   | Cross rec head screw    |
| 6    | 4   | Washer                  |
| 7    | 4   | Hexagon screw           |
| 8    | 4   | Washer                  |
| 9    | 4   | Hexagon screw           |
| 11   | 4   | Spring washer           |
| 12   | 2   | Hexagon nut             |
| 14   | 2   | Clamp                   |
| 15   | 1   | Fixing plate            |
| 16   | 1   | Special screw           |
| 17   | 1   | Hexagon nut             |
| 18   | 2   | Washer                  |
| 19   | 2   | Hexagon screw           |
| 54   | 2   | Plug                    |

## 12.11 Connection diagrams

See Section 9.1.3 for additional limit switch data.

### ND9000/D33

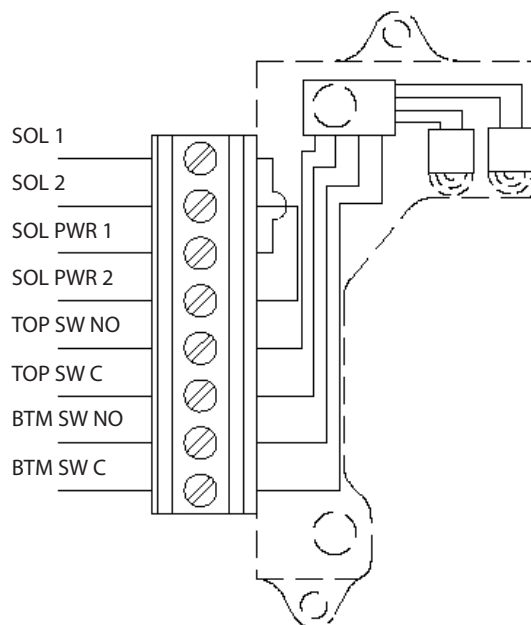

Connections SOL1, SOL2, SOL PWR1 and SOL PWR2 are not used.

TOP SW NO: Positive connection for top switch


TOP SW C: Negative connection for top switch

BTM SW NO: Positive connection for bottom switch

BTM SW C: Negative connection for bottom switch

See Section 9.1.3.1 for electrical ratings.

### ND9000/D44

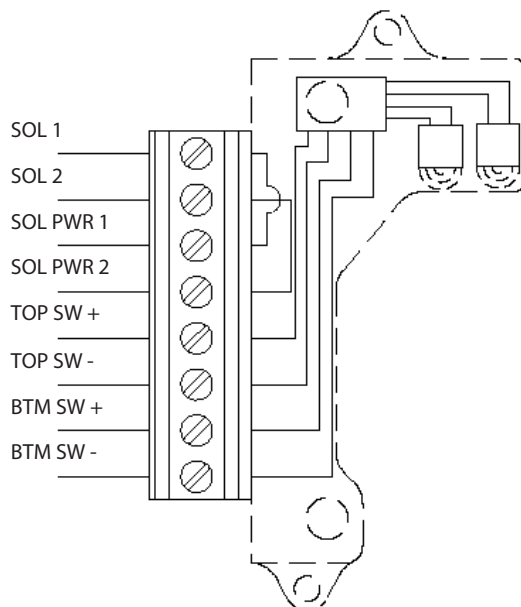

Connections SOL1, SOL2, SOL PWR1 and SOLP WR2 are not used.


TOP SW +: Positive connection for top switch

TOP SW -: Negative connection for top switch

BTM SW +: Positive connection for bottom switch

BTM SW -: Negative connection for bottom switch


See Section 9.1.3.1 for electrical ratings.

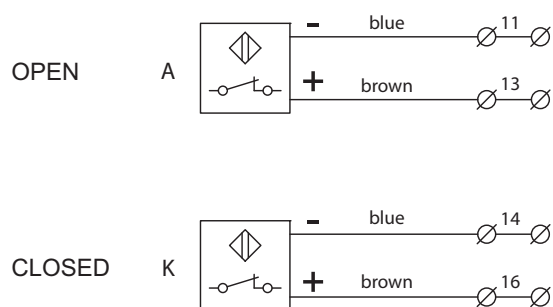**ND9000/I02, I09****Factory adjustment**

Active faces of proximity switches are covered when actuator is in intermediate position.

Active face A (upper switch) becomes free at open limit of travel and face K (lower switch) at closed limit.

Function can be inverted on site by re-adjusting the cam discs.

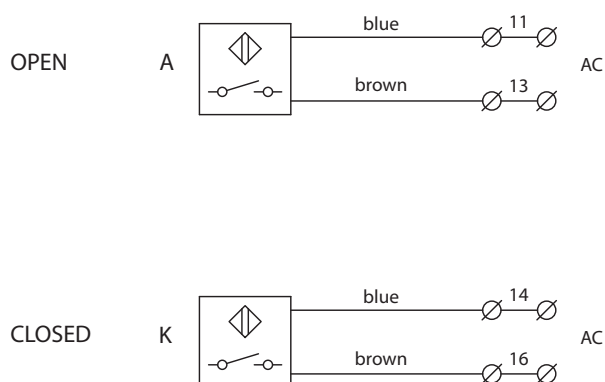
**ND9000/I32****Factory adjustment**

Active faces of proximity switches are free when actuator is in intermediate position.

Active face A (upper switch) becomes covered at open limit of travel and face K (lower switch) at closed limit.

Function can be inverted on site by re-adjusting the cam discs.

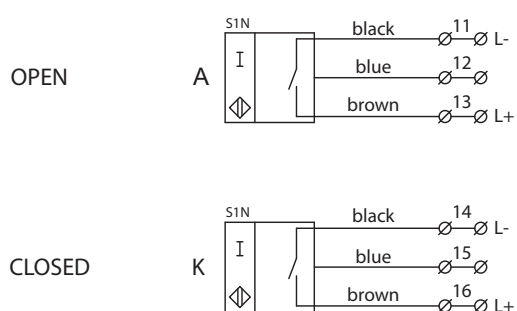


**ND9000/I45****Factory adjustment**

Active faces of proximity switches are covered when actuator is in intermediate position.

Active face A (upper switch) becomes free at open limit of travel and face K (lower switch) at closed limit.

Function can be inverted on site by re-adjusting the cam discs.

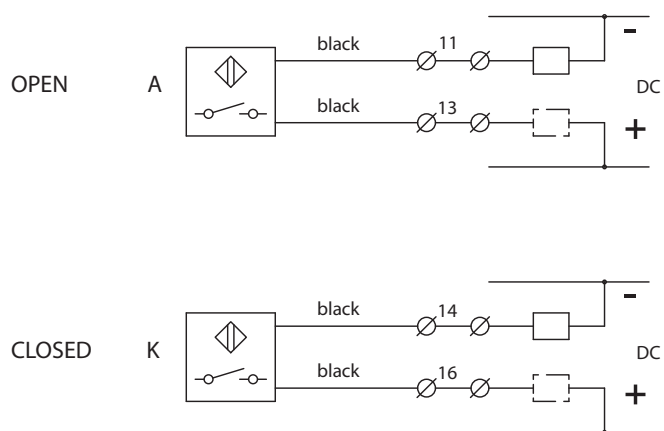
**ND9000/I56****Factory adjustment**

Active faces of proximity switches are free when actuator is in intermediate position.


Active face A (upper switch) becomes covered at open limit of travel and face K (lower switch) at closed limit.

Function can be inverted on site by re-adjusting the cam discs.

Connections: Load can be connected to + or -.

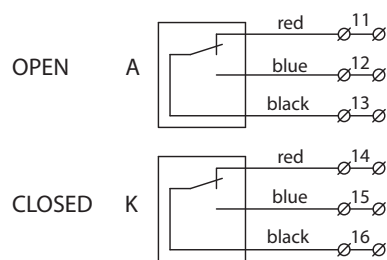**ND9000/K\_**

Connection diagram shows limit switch when actuator is in intermediate position.  
 Switch A (upper) is activated at the open limit of the travel and switch K (lower) at the closed limit.

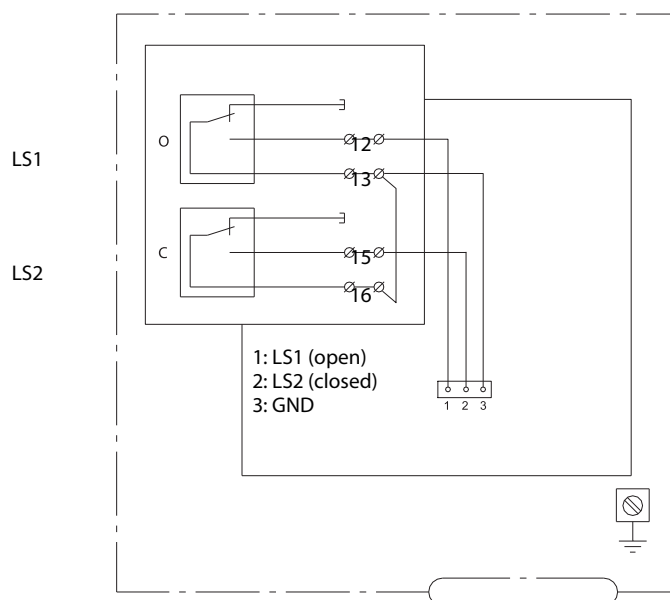**ND9000F/B06, ND9000P/B06**

Bus powered switches, no external connections.

**Microswitch**


OMRON D2VW-01

Gold plated contacts


Bus Powered, no external power needed.

Temperature range: -40° to +85 °C / -40° to +185 °F.

ND9000H\_J

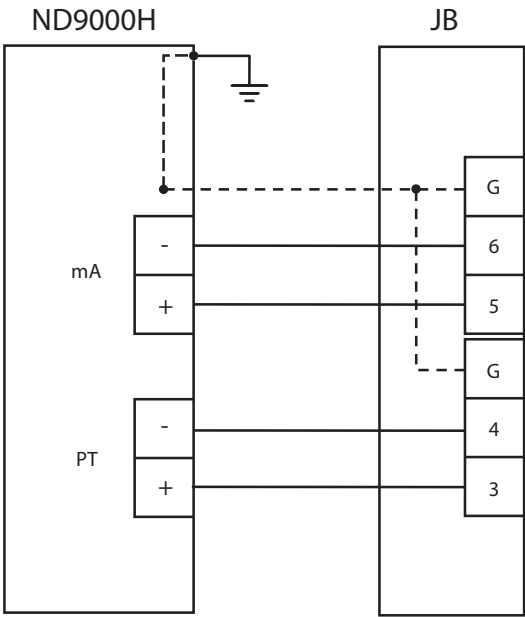

ND9000F\_J, ND9000P\_J

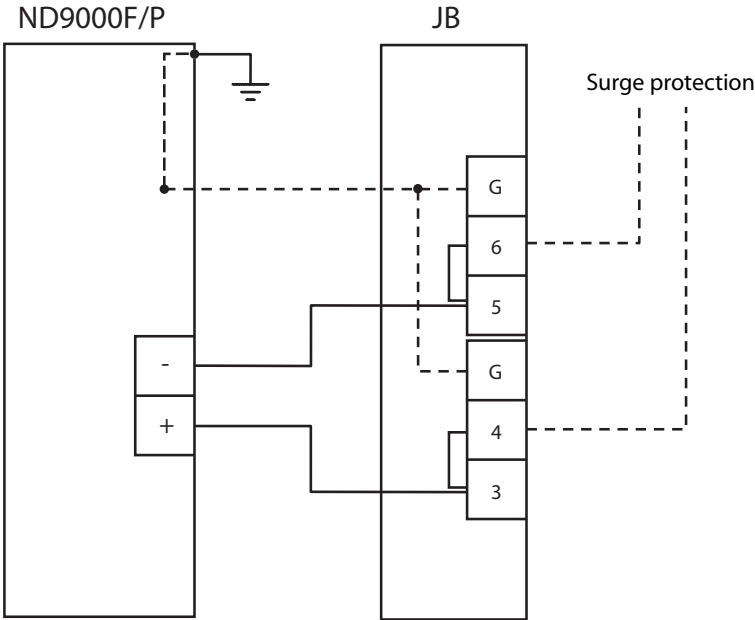




## ND9300

**ND9300/D, ND9300/I, ND9300/K and ND9300/B**

## ND9300

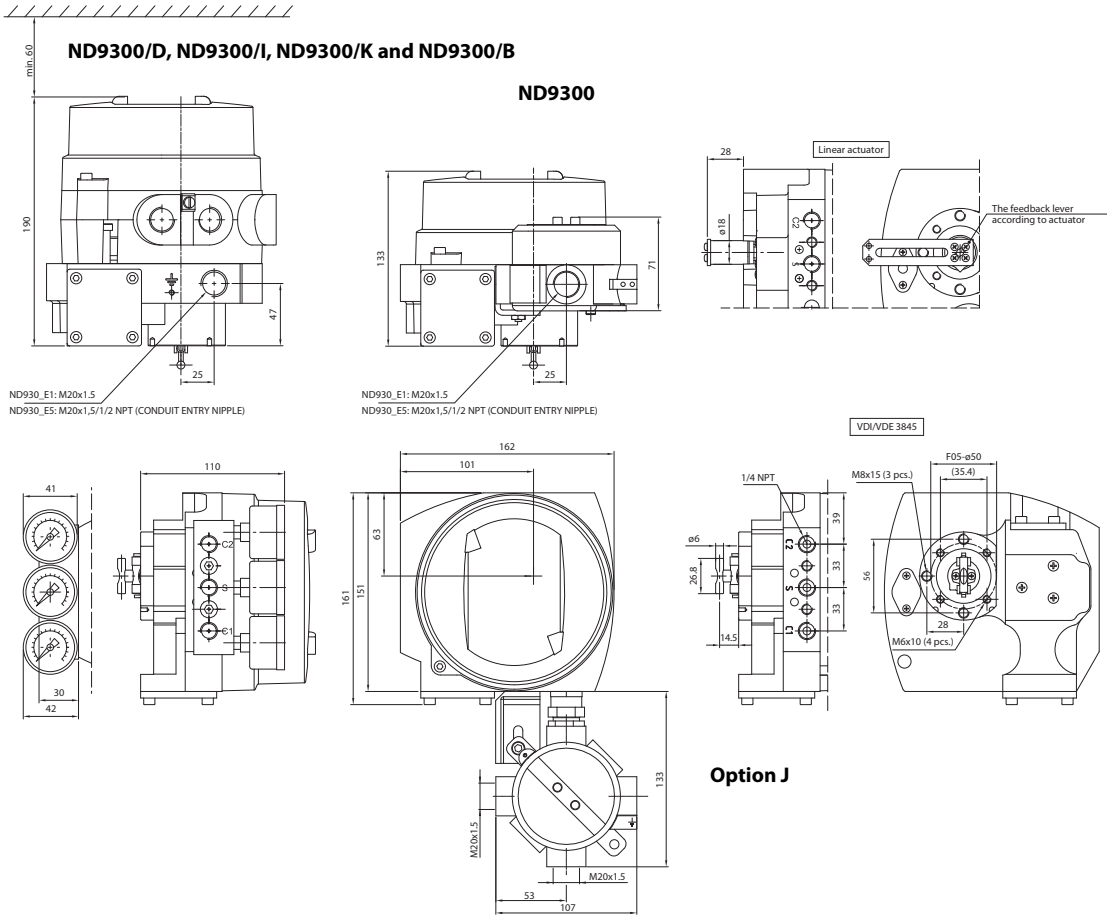

## 14 EC DECLARATION OF CONFORMITY



### EC DECLARATION OF CONFORMITY

Manufacturer:  
Metso Automation Oy  
01301 Vantaa  
Finland

Product: **Intelligent Valve Controller Neles ND 9000- and ND 7000-series**

Approvals:

| Type                                                                                                                 | Approval                                                                                                                                                                                                                                                                                                                                                                                                                                                                       | EC Type examination Certificate                                                                                                                                                                              |
|----------------------------------------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| ND9...PA(Profibus PA)<br>ND9...F (Foundation Fieldbus)                                                               | EMC 2014/30/EU<br>EN 61000-6-4 (2007) + A1(2011)<br>EN 61000-6-2 (2005)                                                                                                                                                                                                                                                                                                                                                                                                        | SGS Fimko 278969-1                                                                                                                                                                                           |
| ND9...HNT (Hart)<br>ND7...HNT (Hart)                                                                                 | EMC 2014/30/EU<br>EN 61000-6-4 (2007) + A1(2011)<br>EN 61000-6-2 (2005)                                                                                                                                                                                                                                                                                                                                                                                                        | SGS Fimko 276525-2                                                                                                                                                                                           |
| ND910.HX<br>ND910.FX<br>ND910.PX<br>ND920.HX<br>ND920.FX<br>ND920.PX<br>ND930.HX<br>ND930.FX<br>ND930.PX<br>ND710.HX | ATEX II 1 G Ex ia IIC T6...T4 Ga<br>ATEX II 1 D Ex ta IIIC T90 °C Da<br>ATEX II 1 D Ex ia IIIC T90...T120 °C Da<br>ATEX II 2 G Ex ib IIC T6...T4 Gb<br>ATEX II 2 D Ex tb IIIC T90 °C Db<br>ATEX II 2 D Ex ib IIIC T90...T120 °C Db<br>ATEX II 3 G Ex nA IIC T6...T4 Gc<br>ATEX II 3 D Ex tc IIIC T90 °C Dc<br>ATEX II 3 D Ex ic IIIC T90 °C...T120 °C Dc<br>ATEX II 3 G Ex ic IIC T6...T4 Gb<br>ATEX II 3 D Ex tc IIIC T90 °C Dc<br>ATEX II 3 D Ex ic IIIC T90 °C...T120 °C Dc | VTT 09ATEX 033X<br>EN 60079-0: 2012,<br>EN 60079-11: 2012,<br>EN 60079-26: 2007,<br>EN 60079-31:2009<br>VTT 09ATEX 034X<br>EN 60079-0: 2012,<br>EN 60079-11: 2012,<br>EN 60079-15: 2010,<br>EN 60079-31:2009 |
| ND920...E1, ND930...E1<br>ND720...E1<br>ND920...E7, ND930...E7<br>ND720...E7                                         | ATEX II 2 G Ex d IIC T6...T4 Gb<br>ATEX II 2 D Ex tb IIIC T80 °C...T105 °C Db IP66                                                                                                                                                                                                                                                                                                                                                                                             | SIRA 11 ATEX 1006X<br>EN 60079-0:2012, EN 60079-1:2007<br>EN 60079-31:2009                                                                                                                                   |

As the products within our sole responsibility of design and manufacture may be used as parts or components in machinery and are not alone performing functions as described in Article 6(2) in the Machinery Directive (2006/42/EC), we declare that our product(s) to which this Declaration of Conformity relates must NOT be put into service until the relevant machinery into which it is to be incorporated has been declared in conformity with the provisions of the Machinery Directive.

The product above is manufactured in compliance with the applicable European directives and technical specifications/standards.

Protection from e.g. static electricity caused by the process or connected equipment must be considered by the user (EN 60079-14§6).

The product do not possess any residual risk according to hazard analyses made under the applicable directives providing that the procedures stated by the Installation, Operation and Maintenance manual are followed and the product is used under conditions mentioned in the technical specifications.

#### Applicable directives:

EMC 2014/30/EU

ATEX 94/9/EC (until 19 April 2016)

ATEX 2014/34/EU (from 20 April 2016)

Electrical

Approved and Ex marked types

#### ATEX Notified Bodies for EC Type Examination Certificate:

**SIRA** (Notified body number 0518)

SIRA Certification Service

CSA Group

Unit 6, Hawarden Industrial Park

Hawarden, Deeside, CHs 3US

United Kingdom

**VTT** (Notified body number 0537)

VTT, Expert Services

Otakaari 7B, Espoo

P.O.Box 1000, FI-02044 VTT

Finland

#### ATEX Notified Body for Quality Assurance:

ISO 9001:2008

ATEX 94/9/EC Annex IV

Certificate No: 73538-2010-AQ-FIN-FINAS

Certificate No: DNV-2006-OSL-ATEX-0260Q

**Det Norske Veritas AS** (Notified body number 0575)

Veritasveien 1

1322 Høvik, Oslo

Norway

Vantaa 23rd May 2017

Ralf Liljestrand, Quality Manager

Authorized person of the manufacturer within the European Community

**ATEX / IECEx:** II 1 G Ex ia, II 1 D Ex ta  
II 2 G Ex ib, II 2 D Ex tb  
II 3 G Ex nA, II 3 D Ex tc  
II 3 G Ex ic, II 3 D Ex tc

|                                                                                                                                                                                                                                                                                                                                                                                                                                                                                  |                                                                                                                                                                                                                                                                                                                                                                                                                                                                             |
|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <p><b>metso</b> TYPE NDP0103RX REV 2.4 IP65<br/> SUPPLY VOLTAGE: 1-4-8 kV 20-115 ps<br/> VTI 09 AT0X 03X / ICEA VTI 10.0004X<br/> • I1 I16 E ICE T16 -14°C; I1 I16 E ICE T190 C Dc<br/> • I1 I16 E ICE T16 -14°C; I1 I16 E ICE T190 C Dc<br/> Tamb: -40°C ~ +50°C; Tamb: +45°C C Dc; Tamb: +80°C<br/> • I1 I16 E ICE T16 -14°C; I1 I16 E ICE T190 C Dc<br/> U: 28 V Dc; I1: 120 mA; P1: 1 W; C1: 22 nF; L1: 53 µH<br/> R: 990 Ohm; I1: 120 mA; P1: 1 W; C1: 22 nF; L1: 53 µH</p> | <p><b>METSO AUTOMATION OY</b><br/> VANNA POHJOINTIE 203, 01300 VANTAA, FINLAND<br/> VTI 09 AT0X 03X / ICEA VTI 10.0005X<br/> • I1 I16 E ICE T16 -14°C; I1 I16 E ICE T190 C Dc<br/> • I1 I16 E ICE T16 -14°C; I1 I16 E ICE T190 C Dc<br/> Tamb: -40°C ~ +50°C; Tamb: +45°C C Dc; Tamb: +80°C<br/> • I1 I16 E ICE T16 -14°C; I1 I16 E ICE T190 C Dc<br/> U: 28 V Dc; I1: 120 mA; P1: 1 W; C1: 22 nF; L1: 53 µH<br/> R: 990 Ohm; I1: 120 mA; P1: 1 W; C1: 22 nF; L1: 53 µH</p> |
|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|

**metso** TYPE: NDT030X REV 2.4 IP65  
SUPPLY PRESSURE: 1-4.3 bar / 20-115 psi

VTT 0 ATX4 033X / ICEXX VTT 10 0006X

- 11 0 Ex ta ICE ta; 7.4 Gas; 11 0 Ex ta ICE 190 °C Da
- 11 0 Ex ta ICE 190 °C Da; 11 0 Ex ta ICE 190 °C Da
- 16: Tamb. -40 °C ~ -59 °C; 15: Tamb. -16 °C; 7.4 Tamb. -80 °C
- 2 - 20 mA INPUT: (0.7 V DC / 20 mA / 485 Ohm)
- 20 V DC; In: 120 mA; P: 1 W; Cl: 22 nF; Li: 53 µH

MEISO AUTOMATION OY  
WAKKA FORNICATION 2007 01300 VANTAA, FINLAND  
NO 0 ATX4 033X / ICEXX VTT 10 0006X

- 11 0 Ex ta ICE 190 °C; 7.4 Gas; 11 0 Ex ta ICE 190 °C Da
- 11 0 Ex ta ICE 190 °C Da; 11 0 Ex ta ICE 190 °C Da
- 16: Tamb. -40 °C ~ -59 °C; 15: Tamb. -16 °C; 7.4 Tamb. -85 °C
- 2 - 20 mA INPUT: (0.7 V DC / 20 mA / 485 Ohm)
- 30 V DC; In: 152 mA; Cl: 22 nF; Li: 53 µH

Cl: 50 nF; 2200000300  
NO: PH2123005

  0575

**metso** TYPE D9023HE1 REV 2.4

4 - 20 mA INPUT: (9.7 V DC / 20 mA / 485 Ohm) UI: 30 V DC  
 Tamb: T6: -40...+60 °C, T5: -40...+75 °C, T4: -40...+85 °C  
 SUPPLY PRESSURE: 1.4 - 8 bar / 20 - 115 psi

**METSO AUTOMATION OY**  
 VANHA PORVOONTIE 229, 01380 VANTAA, FINLAND

NO: H123250001  
 ID: S034512300S

**WARNING: DO NOT OPEN WHILE ENERGIZED!**  
 ELECTROSTATIC HAZARD. CLEAN ONLY WITH DAMP CLOTH.  
 CONDUIT ENTRY M20X1.5  
 0576

II 2 G Ex d IIC T6...T4 Gb  
 II 2 G Ex II Hc IIB0...C...T105 C Db IP66  
 SIR 1 ATEX 1006X / IECEx SIR 1.1.0001X

 **metso** TYPE ND9203HE2 REV 2.4

CLASS I, DIV 1, GPS B, C, D; CLASS II, DIV 1, GPS E, F, G;  
CLASS III; T4...T6, ENCLOSURE TYPE 4X;  
Ex d IIC T4 T6, AEx d IIC T4...T6;  
Ex tb IIIC T100 °C IP66, AEx tb IIIC T100 °C IP66  
CSA 08.1980091



Tamb. T6: -40...+60 °C, T5: -40...+75 °C, T4: -40...+85 °C

4-20 mA INPUT: (9.5 V DC/20 mA/475 Ohm) Ui: 30 V DC  
SUPPLY PRESSURE: 1.4-8 bar / 20-115 psi  
SEAL AT CONDUIT ENTRY  
WARNING: DO NOT OPEN WHEN ENERGIZED  
ID: C00012345^INO: PH12240004

METSO AUTOMATION OY  
VANHA PORVOONTIE 229, 01380 VANTAA, FINLAND

**metso** NELES VALVE CONTROLLER TYPE IN9203HE4 REV 2.4 WARNING: DO NOT OPEN WHILE ENERGIZED!

Ex d IIC T6 METSO AUTOMATION OY  
 VANHA POROONTIE 229  
 01380 VANTAA, FINLAND

INPUT: 4 - 20 mA (9.7 V DC / 20 mA / 485 Ohm), UI = 30 V DC  
 AMBIENT TEMPERATURE: MAX 60 °C  
 SUPPLY PRESSURE: 1,4 - 6 bar / 20 - 115 psi

NO: PH11200001  
 ID: S0648123008POS

|                                                                                                                                                                                   |                                                                                                                                                                    |
|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|  <b>TYPE</b> N9D934R REV 24 IP66 / HEMA 4X<br><b>SUPPLY FREQUENCY</b> 1, 4 - 3 bar / 2 - 115 psi | <b>METSO AUTOMATION OY, VANHA PORVOONTIE 229<br/>         01300 VANTAA, FINLAND</b>                                                                                |
| <b>CLASS I</b> DIV 1, GP5 A, B, C, T4/T6T78, II CLASS I, ZONE 0 AND 1<br><b>EX</b> EX-IB IIC T4/T6T78                                                                             | <b>II CLASS I, DIV 2, GP5 A, B, C, T4/T6T78, II CLASS I<br/>         EX</b> EX-IB IIC T4/T6T78                                                                     |
| <b>TEMPERATURE</b> -40 ~ +50 °C, T5: -45 °C, T4: +80 °C<br><b>2-20 mA INPUT:</b> (0.7 V DC / 20 mA / 485 Ohm) UI: 28 V DC, II: 120 mA<br><b>4-20 mA UI:</b> 22 V DC, II: 53 µA    | <b>TEMPERATURE</b> -40 ~ +50 °C, T5: -45 °C, T4: +80 °C<br><b>2-20 mA INPUT:</b> (0.7 V DC / 20 mA / 485 Ohm) UI: 30 V DC<br><b>4-20 mA UI:</b> 22 V DC, II: 53 µA |
| <b>INSTALL PER DRAWING</b> N9D900, <b>INTRINSICALLY SAFE</b>                                                                                                                      | <b>LR 64210, EX-NO. 1625297<br/>         INSTALL SUITABLE PLAN N9D600, SECURITE INTRIN SEQUE</b>                                                                   |
|                                                                                                 |                                                                                 |
| <b>ID:</b> SO3568890V01                                                                                                                                                           | <b>NO.</b> PH13370001                                                                                                                                              |


**TYPE:** N9D1354X    **REV 24**    **IP68 / NEMA 4X**  
**SUPPLY:** 150VAC/50-60 Hz    1.4 - 3.0 (1.1 - 1.15) hp  
**CLASS 1 DIV 1, GPSS A, B, C, T4/T6/T8, IN CLASS 1, ZONE 0 AND -**  
**II, E, Ia, II, T4/T6/T8**  
**Temp:** 70 - 140 °C    T5: -45 °C    T4: -40 °C  
**4 - 20 mA INPUT:** (9.7 V DC / 20 mA / 485 Ohm) U<sub>i</sub>: 28 V DC    I<sub>sc</sub>: 120 mA  
**Pt 1:** U<sub>i</sub>: 22 mV    I<sub>sc</sub>: 53 µA

**METSO AUTOMATION OY, VANHA PORVOOTEEN 229**  
**01380 VANTAA, FINLAND**  
**II CLASS 1 DIV 2, GPSS A, B, C, T4/T6/T8, IN CLASS 1**  
**ZONE 0 AND - II, E, Ia, II, T4/T6/T8**  
**Temp:** 70 - 140 °C    T5: -45 °C    T4: -40 °C  
**4 - 20 mA INPUT:** (9.7 V DC / 20 mA / 485 Ohm) U<sub>i</sub>: 30 V DC  
**Pt 1:** U<sub>i</sub>: 22 mV    I<sub>sc</sub>: 53 µA

**LR 6240-EN, UC: 1552979**  
**INSTALL SUITABLE PLANT N9D900, SECURITE INTRINSEQUE**

**INSTALL PER DRAWING N9D900, INTRINSICALLY SAFE**

**ID: SC035688901V0H**    **PL: H0371/0003**

## 16 TYPE CODING

# INTELLIGENT VALVE CONTROLLER ND9000 / LIMIT SWITCH (ND9000/D \_\_, ND9000/I \_\_, ND9000/K0\_ or ND9000/B06)

|    |    |    |    |    |    |    |    |     |
|----|----|----|----|----|----|----|----|-----|
| 1. | 2. | 3. | 4. | 5. | 6. | 7. | 8. | 9.  |
| ND | 9  | 2  | 03 | H  | E1 | T  | /  | K05 |

|    |                               |
|----|-------------------------------|
| 1. | <b>PRODUCT GROUP</b>          |
| ND | Intelligent Valve Controller. |

|    |                                                                                                                                                                                                                                             |
|----|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 2. | <b>SERIES CODE</b>                                                                                                                                                                                                                          |
| 9  | Series 9000 valve controller with universal shaft and attachment face according to standard VDI/VDE 3845. Relevant shaft adapter included in mounting kits. When valve controllers are separate deliveries, shaft adapter kit is supplied.. |

|    |                                                  |
|----|--------------------------------------------------|
| 3. | <b>ENCLOSURE</b>                                 |
|    | All models are IP66 / NEMA 4X enclosure          |
| 1  | Standard enclosure.                              |
| 2  | Flameproof (Ex d) enclosure.                     |
| 3  | Stainless steel flameproof (Ex d) enclosure.     |
| 4  | Stainless steel housing, polymer composite cover |

|    |                                                                  |                                                           |
|----|------------------------------------------------------------------|-----------------------------------------------------------|
| 4. | <b>SPOOL VALVE</b>                                               | <b>PNEUMATIC CONNECTIONS (S, C1, C2)</b>                  |
| 02 | Low capacity. Stroke volume of actuator < 1 dm <sup>3</sup> .    | G 1/4 (ND91 series), 1/4 NPT (ND92,ND93 and ND94 series). |
| 03 | Medium capacity. Stroke volume of actuator 1–3 dm <sup>3</sup> . | G 1/4 (ND91 series), 1/4 NPT (ND92,ND93 and ND94 series). |
| 06 | High capacity. Stroke volume of actuator > 3 dm <sup>3</sup> .   | G 1/4 (ND91 series), 1/4 NPT (ND92,ND93 and ND94 series). |

|    |                                                                                                                                                     |
|----|-----------------------------------------------------------------------------------------------------------------------------------------------------|
| 5. | <b>COMMUNICATION / INPUT SIGNAL RANGE</b>                                                                                                           |
| H  | 4–20 mA, HART (6 and 7) communication. Supply voltage 30 V DC. Load voltage: up to 9.7 V DC at 20 mA corresponding to 485 Ω (maximum voltage drop). |
| F  | FOUNDATION fieldbus, physical layer according to IEC 61158-2.                                                                                       |
| P  | Profibus PA, physical layer according to IEC 61158-2.                                                                                               |

|    |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                           |
|----|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 6. | <b>APPROVALS FOR HAZARDOUS AREAS</b>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                      |
| N  | No approvals for hazardous areas. M20 x 1.5 conduit entry. Temperature range -40° to +85 °C. Not applicable to 3. sign "2".                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                               |
| N7 | <b>No approvals for hazardous areas.</b> Like N, but this is with Russian language machine plate. Check details of marking from N                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                         |
| X  | <p><b>ATEX and IECEx certifications:</b><br/>           II 1 G Ex ia IIC T6...T4 Ga      II 2 G Ex ib IIC T6...T4 Gb<br/>           II 1 D Ex ta IIIC T90 °C Da      II 2 D Ex tb IIIC T90 °C Db<br/>           II 1 D Ex ia IIIC T90 °C...T120 °C Da<br/>           II 2 D Ex ib IIIC T90 °C...T120 °C Db<br/>           Temperature range: T4: -40° to +80 °C; T5: &lt; +65 °C; T6: &lt; +50 °C.</p> <p>II 3 G Ex nA IIC T6...T4 Gc      II 3 D Ex tc IIIC T90 °C Dc<br/>           Temperature range: T4: -40° to +85 °C; T5: &lt; +75 °C; T6: &lt; +60 °C.</p> <p>II 3 G Ex ic IIC T6...T4 Gc      II 3 D Ex tc IIIC T90 °C Dc<br/>           Ex ic IIC T6...T4      II 3 D Ex ic IIIC T90 °C...T120 °C Dc<br/>           Temperature range: T4: -40° to +85 °C; T5: &lt; +75 °C; T6: &lt; +60 °C.</p> <p>Available without limit switches or with ATEX or IECEx certified inductive limit switches. M20 x 1.5 conduit entry. With limit switch temperature range is updated according to switch type.</p> <p>NOTE. Dust approval:<br/>           II 1 D Ex ta IIIC T90 °C Da<br/>           II 2 D Ex tb IIIC T90 °C Db<br/>           II 3 D Ex tc IIIC T90 °C Dc<br/>           not applicable to 3. sign "4".</p> |
| X7 | <b>ATEX and IECEx certifications:</b> Like X, but this is with Russian language machine plate. Check details of marking from X                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                            |

|    |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                 |
|----|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 6. | <b>APPROVALS FOR HAZARDOUS AREAS</b>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                            |
| U  | <p>cCSAus certifications:<br/>           IS Class I, Division 1, Groups A, B, C, D, T4...T6<br/>           IS Class I, Zone 0, AEx ia, IIC T4...T6<br/>           Temperature range: T4: -40° to +80 °C; T5: &lt; +65 °C; T6: &lt; +50 °C.</p> <p>NI Class I, Division 2, Groups A, B, C, D, T4...T6.<br/>           NI Class I, Zone 2, Ex nA IIC T4...T6.<br/>           Temperature range: T4: -40° to +80 °C; T5: &lt; +65 °C; T6: &lt; +50 °C.<br/>           No Zener Barrier needed.<br/>           Not applicable to 3. sign "2" or "4".<br/>           1/2 NPT conduit entry.<br/>           With limit switch temperature range is updated according to switch type.</p>                                                                                              |
| Z  | <p><b>INMETRO certifications:</b><br/>           Ex ia IIC T4/T5/T6 Ga      Ex ia IIC T4/T5/T6<br/>           Ex ia IIC T4/T5/T6 Gb<br/>           Temperature range: T4: -40° to +80 °C; T5: &lt; +65 °C; T6: &lt; +50 °C.</p> <p>Ex nA IIC T4/T5/T6 Gc<br/>           Temperature range: T4: -40° to +85 °C; T5: &lt; +75 °C; T6: &lt; +60 °C.</p> <p>Ex ic IIC T4/T5/T6 Gc      Ex ic IIC T4/T5/T6<br/>           Temperature range: T4: -40° to +85 °C; T5: &lt; +75 °C; T6: &lt; +60 °C.</p> <p>Not applicable to 3. sign "2" or "4"<br/>           Available without limit switches or with IECEx certified inductive limit switches.<br/>           M20 x 1.5 conduit entry.<br/>           With limit switch temperature range is updated according to switch type.</p> |
| E1 | <p><b>ATEX and IECEx certifications:</b><br/>           II 2 G Ex d IIC T6...T4 Gb<br/>           II 2 D Ex tb IIIC T80 °C...T105 °C Db IP66<br/>           Temperature range: T4: -40° to +85 °C; T5: &lt; +75 °C; T6: &lt; +60 °C.<br/>           Not applicable to 3. sign "1" or "4".<br/>           M20 x 1.5 conduit entry</p>                                                                                                                                                                                                                                                                                                                                                                                                                                            |
| E2 | <p><b>cCSAus certification:</b><br/>           Class I, Div 1, Groups B, C, D; Class II, Div 1, Groups E, F, G; Class III; T4...T6, Enclosure type 4X<br/>           Ex d IIC T4...T6<br/>           AEx d IIC T4...T6<br/>           Ex tb IIIC T100 °C IP66<br/>           AEx tb IIIC T100 °C IP66<br/>           Temperature range: T4: -40° to +85 °C; T5: &lt; +75 °C; T6: &lt; +60 °C.<br/>           Not applicable to 3. sign "1" or "4"<br/>           1/2 NPT conduit entry.</p>                                                                                                                                                                                                                                                                                     |
| E4 | <p><b>TIIS (JIS) certifications:</b><br/>           Ex d II C T6<br/>           Temperature range: T6; -20° to +60 °C.<br/>           Applicable only to 3. sign "2".<br/>           Applicable only to 5. sign "H".<br/>           Not available with any limit switches (8. sign "I" or "K").<br/>           G 1/2 or 1/2 NPT conduit entry.<br/>           Delivered always with TIIS (JIS) approved cable gland and conduit entry nipple (accessory CG42 or CG41), see type code from Accessories for Positioners item 10:<br/> <b>CG42:</b> G 1/2 Conduit entry and Cable entry adapter.<br/> <b>CG41:</b> 1/2 NPT Conduit entry and Cable entry adapter.</p>                                                                                                              |
| E5 | <p><b>INMETRO certification:</b><br/>           Ex d IIC T4/T5/T6 Gb<br/>           Ex tb IIIC T100 °C Db IP66<br/>           Temperature range: T4: -40° to +85 °C; T5: &lt; +75 °C; T6: &lt; +60 °C.<br/>           Not applicable to 3. sign "1" or "4".<br/>           M20 x 1.5 conduit entry.</p>                                                                                                                                                                                                                                                                                                                                                                                                                                                                         |
| E7 | <p><b>ATEX and IECEx certifications:</b><br/>           Like E1, but this is with Russian language machine plate. Check details of marking from E1</p>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                          |



| 7. | OPTIONS OF VALVE CONTROLLER                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                            |
|----|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| T  | <p>Internal 2-wire (passive) position transmitter. Analog position feedback signal, output 4–20 mA, supply voltage 12–30 V DC, external load resistance 0–780 Ω.</p> <p><b>ND91_HXT, ND91_HZT, ND92_HXT, ND93_HXT, , ND93_HZT, ND94_HXT:</b><br/>           II 1 G Ex ia IIC T6...T4 Ga<br/>           II 1 D Ex ta IIIC T90 °C Da<br/>           II 2 G Ex ib IIC T6...T4 Gb<br/>           II 2 D Ex tb IIIC T90 °C Db<br/>           Ui ≤ 28 V, Ii ≤ 120 mA, Pi ≤ 1 W, Ci ≤ 22 nF, Li ≤ 53 µH, external load resistance 0–690 Ω.</p> <p><b>ND91_HXT, ND91_HZT, ND92_HXT, ND93_HXT, ND93_HZ, T, ND94_HXT:</b><br/>           II 3 G Ex nA IIC T6...T4 Gc<br/>           II 3 D Ex tc IIIC T90 °C Dc<br/>           Ui ≤ 30 V, Ii ≤ 152 mA</p> <p>II 3 G Ex ic IIC T6...T4 Gc<br/>           II 3 D Ex tc IIIC T90 °C Dc<br/>           Ui ≤ 30 V, Ii ≤ 152 mA, Pmax = device limits itself, Ci ≤ 22 nF, Li ≤ 53 µH, external load resistance 0–780 Ω.</p> <p><b>ND91_HU1T and ND93_HU1T:</b><br/>           Ui ≤ 28 V, Ii ≤ 120 mA, Pi ≤ 1 W, Ci ≤ 22 nF, Li ≤ 53 µH, external load resistance 0–690 Ω.</p> <p><b>ND91_HU2T and ND93_HU2T:</b><br/>           Ui ≤ 30 V, Pmax = device limits itself, Ci ≤ 22 nF, Li ≤ 53 µH, external load resistance 0–780 Ω.</p> <p><b>ND92_HE1T, ND92_HE2T, ND92_HE4T, ND92_HE5T, ND92_HE7T, ND93_HE1T, ND93_HE5T, ND93_HE7T:</b><br/>           Ui ≤ 30 V, Pmax = device limits itself, external load resistance 0–780 Ω.</p> <p>Applicable to 5. sign "H".</p> |
|    | <p>Remote mounting<br/>           Applicable only to 3. sign "1"<br/>           Applicable only to 6. sign "N"<br/>           Requires always external position measurement. For rotary actuator see accessories type code.</p> <p>NOTE. Dust approval:<br/>           II 1 D Ex ta IIIC T90 °C Da<br/>           II 2 D Ex tb IIIC T90 °C Db<br/>           II 3 D Ex tc IIIC T90 °C Dc<br/>           Not applicable to 6. sign "X"</p>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                              |
|    | <p><b>G</b> Exhaust adapter. ND9100: 1x 1/2 NPT thread, ND9200 and ND9300: 2 x 1/2 NPT thread.</p>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                     |
|    | <p><b>C</b> Arctic temperature option.<br/>           Temperature range -53 – +85 °C / -64 – +185 °F<br/>           Applicable to 3. sign "2 and 3"<br/>           Applicable to 6. sign "X", "E1", "E2", "E7" (pending)<br/>           Not applicable to 7. sign J (External junction box)<br/>           Note, Limit switch may limit the temperature range</p>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                      |
| J  | <p><b>ND91_H, ND92_H and ND93_H:</b><br/>           External junction box for all 4–20 mA wirings, including position transmitter, if applicable. Junction box is connected to the enclosure, 2 pcs. M20 x 1.5 conduit entry.</p> <p><b>ND91_F, ND92_F, ND03_F, ND91_P, ND92_P and ND93_P:</b><br/>           External junction box for wirings, including option for parallel connection of external surge protector.<br/>           Junction box is connected to the enclosure, 2 pcs. M20 x 1.5 conduit entry.</p> <p>Applicable to 6. sign "N", "X", "Z", "E1" or "E7".</p>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                        |
|    | <p><b>Y</b> Special construction.</p>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                  |

| 8.         | LIMIT SWITCH TYPE                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                         |
|------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|            | <p><b>Inductive proximity switches</b>, 2 pcs.<br/>           IP66 / NEMA 4X enclosure. M20 x 1.5 conduit entry (2 pcs.).<br/>           Option E2: 1/2 NPT conduit entry (2 pcs.).<br/>           Limit switches applicable only with ND9100, ND9200 and ND9300</p>                                                                                                                                                                                                                                                      |
| <b>D33</b> | <p>Metso; SST Sensor Dual Module, NO, 8–125 V DC / 24–125 V AC<br/>           Temperature range -40° to +82 °C / -40° to +179 °F.<br/>           Applicable to 6. sign "N", "E1", "E2", "E5" or "E7".</p>                                                                                                                                                                                                                                                                                                                 |
| <b>D44</b> | <p>Metso; Namur Sensor Dual Module, 6–29 V DC, &gt; 3 mA; &lt; 1 mA.<br/>           Temperature range -40° to +82 °C / -40° to +179 °F.<br/>           Applicable to 6. sign "N", "U", "E1", "E2", "E5" or "E7".</p>                                                                                                                                                                                                                                                                                                      |
| <b>I02</b> | <p>P+F; NJ2-12GK-SN, 2-wire type, DC; &gt; 3 mA; &lt; 1 mA, NAMUR NC.<br/>           Temperature range: -40° to +85 °C / -40° to +185 °F.<br/>           Not applicable to 6. sign "E4".</p>                                                                                                                                                                                                                                                                                                                              |
| <b>I09</b> | <p>P+F; NCB2-12GM35-N0, 2-wire type, DC; &gt; 3 mA; &lt; 1 mA, NAMUR NC<br/>           Temperature range: -25° to +85 °C / -13° to +185 °F.<br/>           Not applicable to 6. sign "E4"<br/>           Usable up to SIL2 acc. to IEC61508.</p>                                                                                                                                                                                                                                                                          |
| <b>I32</b> | <p>Omron E2E-X2Y1, 2-wire type; AC; &lt;100 mA; 24–240 V AC.<br/>           Temperature range: -40° to +85 °C / -40° to +185 °F.<br/>           Applicable to 6. sign "N".</p> <p>Temperature range: -25° to +75 °C / -13° to +167 °F.<br/>           Applicable to 6. sign "E1", "E2", "E5" or "E7".</p>                                                                                                                                                                                                                 |
| <b>I41</b> | <p>P+F; NJ4-12GK-SN, 2-wire, DC; &gt; 3 mA; &lt; 1 mA, NAMUR NC<br/>           Temperature range -50 ... +85 °C / -58 ... 185 °F)<br/>           Applicable to 6. sign "N", "X", "E1" or "E7".<br/>           Note that device may limit temperature range.</p>                                                                                                                                                                                                                                                           |
| <b>I45</b> | <p>P+F; NJ3-18GK-S1N, 3-wire type, DC; &gt; 3 mA; &lt; 1 mA, NAMUR NO.<br/>           Temperature range: -25° to +85 °C / -13° to +185 °F.<br/>           Not applicable to 6. sign "E4".<br/>           Usable up to SIL3 acc. to IEC61508</p>                                                                                                                                                                                                                                                                           |
| <b>I56</b> | <p>ifm; IFC2002-ARKG/UP, 2-wire type, DC; 150 mA, 10–36 V DC, leakage current &lt; 0.6 mA.<br/>           Temperature range: -20° to +85 °C / -4° to +185 °F.<br/>           Not applicable to 6. sign "X", "Z", "U", "E2" and "E4".</p> <p><b>Mechanical micro switches</b>, 2 pcs.<br/>           IP66 / NEMA 4X enclosure.<br/>           M20 x 1.5 conduit entry (2 pcs.).<br/>           Option E2: 1/2 NPT conduit entry (2 pcs.).<br/>           Limit switches applicable only with ND9100, ND9200 and ND9300</p> |
| <b>K05</b> | <p>Omron D2VW-5, 3 A - 250 V AC, 0.4 A - 125 V DC, 5 A - 30 V DC.<br/>           Temperature range: -40° to +85 °C / -40° to +185 °F.<br/>           Not applicable to 6. sign "X", "Z", "U" and "E4".</p>                                                                                                                                                                                                                                                                                                                |
| <b>K06</b> | <p>Omron D2VW-01, gold plated contacts, 100 mA - 30 V DC / 125 V AC.<br/>           Temperature range: -40° to +85 °C / -40° to +185 °F.<br/>           Not applicable to 6. sign "X", "Z", "U" and "E4".</p> <p><b>Bus powered mechanical micro switches</b>, 2 pcs.<br/>           Applicable to ND9000F and ND9000P only.<br/>           IP66 / NEMA 4X enclosure. M20 x 1.5 conduit entry (2 pcs.). Option E2: 1/2 NPT conduit entry (2 pcs.).</p>                                                                    |
| <b>B06</b> | <p>Omron D2VW-01, gold plated contacts; Bus Powered, no external power needed.<br/>           Temperature range: -40° to +85 °C / -40° to +185 °F.<br/>           Not applicable to 5. sign "H".<br/>           Not applicable to 6. sign "U" and "E4".</p>                                                                                                                                                                                                                                                               |

| 9.       | OPTIONS OF LIMIT SWITCH |
|----------|-------------------------|
| <b>Y</b> | Special construction.   |

## INTELLIGENT VALVE CONTROLLER ND7000

|    |    |    |    |    |    |    |    |     |
|----|----|----|----|----|----|----|----|-----|
| 1. | 2. | 3. | 4. | 5. | 6. | 7. | *) | 8.  |
| ND | 7  | 2  | 03 | H  | E1 | T  | /  | K05 |

|    |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                          |                                      |
|----|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|--------------------------------------|
| 1. | PRODUCT GROUP                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                            |                                      |
| ND | Digital Valve Controller                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                 |                                      |
| 2. | SERIES CODE                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                              |                                      |
| 7  | Series 7000 digital valve controller with universal shaft and attachment face according to standard VDI/VDE 3845. Relevant shaft adapter included in mounting kits. When valve positioners are separate deliveries, shaft adapter kit is supplied.                                                                                                                                                                                                                                                                                                                                                       |                                      |
| 3. | ENCLOSURE                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                |                                      |
| 1  | Standard IP66 / NEMA 4X enclosure                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                        |                                      |
| 2  | Flameproof (Ex d) IP66 / NEMA 4X enclosure.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                              |                                      |
| 4. | SPOOL VALVE                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                              | PNEUMATIC CONNECTIONS (S, C1, C2)    |
| 02 | Low capacity. Stroke volume of actuator < 1 dm³.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                         | G 1/4 (ND7100),<br>1/4 NPT (ND7200). |
| 03 | Medium capacity. Stroke volume of actuator 1–3 dm³.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                      | G 1/4 (ND7100),<br>1/4 NPT (ND7200). |
| 06 | High capacity. Stroke volume of actuator > 3 dm³.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                        | G 1/4 (ND7100),<br>1/4 NPT (ND7200). |
| 5. | COMMUNICATION / INPUT SIGNAL RANGE                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                       |                                      |
| H  | 4–20 mA, HART communication. Supply voltage 30 V DC. Load voltage: up to 9.7 V DC at 20 mA corresponding to 485 Ω (maximum voltage drop).                                                                                                                                                                                                                                                                                                                                                                                                                                                                |                                      |
| 6. | APPROVALS FOR HAZARDOUS AREAS                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                            |                                      |
| N  | No approvals for hazardous areas. M20 x1.5 conduit entry. Temperature range -40° to +85 °C.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                              |                                      |
| N7 | <b>No approvals for hazardous areas.</b><br>Like N, but this is with Russian language machine plate. Check details of marking from N                                                                                                                                                                                                                                                                                                                                                                                                                                                                     |                                      |
| X  | <b>ATEX and IECEx certifications:</b><br>II 1 G Ex ia IIC T6...T4 Ga<br>II 1 D Ex ta IIIC T90 °C Da<br>II 2 G Ex ib IIC T6...T4 Gb<br>II 2 D Ex tb IIIC T90 °C Db<br>II 1 D Ex ia IIIC T90 °C...T120 °C Da<br>II 2 D Ex ib IIIC T90 °C...T120 °C Db<br>Temperature range: T4: -40° to +80 °C; T5: < +65 °C; T6: < +50 °C.<br><br>II 3 G Ex nA IIC T6...T4 Gc<br>II 3 D Ex tc IIIC T90 °C Dc<br>II 3 G Ex ic IIC T6...T4 Gc<br>II 3 D Ex tc IIIC T90 °C Dc<br>II 3 D Ex ic IIIC T90 °C...T120 °C Dc<br>Temperature range: T4: -40° to +85 °C; T5: < +75 °C; T6: < +60 °C.<br><br>M20 x 1.5 conduit entry. |                                      |
| X7 | <b>ATEX and IECEx certifications:</b><br>Like X, but this is with Russian language machine plate. Check details of marking from X                                                                                                                                                                                                                                                                                                                                                                                                                                                                        |                                      |
| Z  | <b>INMETRO certifications:</b><br>Ex ia IIC T4/T5/T6 Ga<br>Ex ia IIC T4/T5/T6 Gb<br>Ex nA IIC T4/T5/T6 Gc<br>Ex ic IIC T4/T5/T6 Gc<br><br>M20 x 1.5 conduit entry.                                                                                                                                                                                                                                                                                                                                                                                                                                       |                                      |
| E1 | <b>ATEX and IECEx certifications:</b><br>II 2 G Ex d IIC T6...T4 Gb<br>II 2 D Ex tb IIIC T80 °C...T105 °C Db IP66<br>Temperature range: T4: -40° to +85 °C; T5: < +75 °C; T6: < +60 °C.<br>Not applicable to 3. sign "1".<br>M20 x 1.5 conduit entry.                                                                                                                                                                                                                                                                                                                                                    |                                      |
| E5 | <b>INMETRO certifications (pending):</b><br>Ex d IIC T4/T5/T6 Gb<br>Ex tb IIIC T100 °C Db IP66<br>Temperature range: T4: -40° to +85 °C; T5: < +75 °C; T6: < +60 °C.<br>Not applicable to 3. sign "1"<br>M20 x 1.5 conduit entry.                                                                                                                                                                                                                                                                                                                                                                        |                                      |
| E7 | <b>ATEX and IECEx certifications:</b><br>Like E1, but this is with Russian language machine plate. Check details of marking from E1                                                                                                                                                                                                                                                                                                                                                                                                                                                                      |                                      |

|            |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                        |
|------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>7.</b>  | <b>OPTIONS OF VALVE CONTROLLER</b>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                     |
| <b>T</b>   | Internal 2-wire (passive) position transmitter.<br>Analog position feedback signal, output 4–20 mA, supply voltage 12–30 V DC, external load resistance 0–780 Ω.<br><br>ND7_HXT, ND7_HZT:<br>II 1 G Ex ia IIC T6...T4 Ga<br>II 1 D Ex ta IIIC T90 °C Da<br>II 2 G Ex ib IIC T6...T4 Gb<br>II 2 D Ex tb IIIC T90 °C Db<br>Ui ≤ 28 V, Ii ≤ 120 mA, Pi ≤ 1 W, Ci ≤ 22 nF, Li ≤ 53 μH,<br>external load resistance 0–690 Ω.<br><br><b>ND7_HXT, ND7_HZT:</b><br>II 3 G Ex nA IIC T6...T4 Gc<br>II 3 D Ex tc IIIC T90 °C Dc<br>Ui ≤ 30 V, Ii ≤ 152 mA<br><br>II 3 G Ex ic IIC T6...T4 Gc<br>II 3 D Ex tc IIIC T90 °C Dc<br>Ui ≤ 30 V, Ii ≤ 152 mA, Pmax = device limits itself, Ci ≤ 22 nF,<br>Li ≤ 53 μH, external load resistance 0–780 Ω. |
| <b>R</b>   | Remote mounting<br>Applicable only to 3. sign "1"<br>Applicable only to 6. sign "N"<br>Requires always external position measurement. For rotary actuator see accessories type code.<br><br>NOTE. Dust approval:<br>II 1 D Ex ta IIIC T90 °C Da<br>II 2 D Ex tb IIIC T90 °C Db<br>II 3 D Ex tc IIIC T90 °C Dc<br>Not applicable to 6.sign "X"                                                                                                                                                                                                                                                                                                                                                                                          |
| <b>8.</b>  | <b>LIMIT SWITCHES TYPE</b>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                             |
|            | <b>Inductive proximity switches, 2 pcs.</b><br>IP66 / NEMA 4X enclosure. M20 x 1.5 conduit entry (2 pcs.).<br>Option E2: 1/2 NPT conduit entry (2 pcs.).                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                               |
| <b>I02</b> | P+F; P+F; NJ2-12GK-SN, 2-wire type, DC; > 3 mA; < 1 mA,<br>NAMUR NC.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                   |
|            | <b>Mechanical micro switches, 2 pcs.</b><br>IP66 / NEMA 4X enclosure.<br>M20 x 1.5 conduit entry (2 pcs.).<br>Option E2: 1/2 NPT conduit entry (2 pcs.).<br>Temperature range: -40° to +85 °C / -40° to +185 °F.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                       |
| <b>K05</b> | Omron D2VW-5, 3 A - 250 V AC, 0.4 A - 125 V DC, 5 A - 30 V DC.<br>Temperature range: -40° to +85 °C / -40° to +185 °F.<br>Not applicable to 6. sign "X" or "Z"                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                         |

## ADDITIONAL ACCESSORIES

| FILTER REGULATOR |                                                                                                                                                                                                                                                                                                                                                                                            |
|------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>K</b>         | Filter regulator for supply air.<br>Filter size 5 µm.<br>Pressure gauge, scale bar/psi/kPa, basic material brass, nickel plated, housing stainless steel, glycerine filled.<br>Temperature range -40 °C...+82 °C / -40 °F... +180 °F.<br>K option includes a thread nipple 1/4"NPT to 1/4"NPT which is suitable with ND9200 & ND9300 positioner options A3 and A5 (1/4NPT AIR CONNECTION)  |
| <b>K1</b>        | Filter regulator for supply air.<br>Filter size 5 µm.<br>Pressure gauge, scale bar/psi/kPa, basic material brass, nickel plated, housing stainless steel, glycerine filled.<br>Temperature range -40 °C...+82 °C / -40 °F... +180 °F.<br>K1 option includes a thread nipple 1/4"NPT to G1/4" which is suitable with ND9100 and ND9400 positioner and with option A1 (G1/4 AIR CONNECTION). |
| <b>K2</b>        | Stainless steel (AISI 316) filter regulator for supply air.<br>Filter size 5 µm.<br>Pressure gauge, scale bar/psi/kPa/kg/cm2, silicone oil, AISI 316, Temperature range -40 °C... +80 °C / -40 °F... +176 °F.                                                                                                                                                                              |

| CONDUIT ENTRY NIPPLES |                                                                                            |
|-----------------------|--------------------------------------------------------------------------------------------|
| <b>CE07</b>           | 1/2 NPT conduit entry nipples<br>M20x1,5 / 1/2 NPT (ND9100 and ND9400)                     |
| <b>CE08</b>           | R1/2 (PF1/2) conduit entry nipples<br>M20x1,5 / R1/2 (ND9100 and ND9400)                   |
| <b>CE09</b>           | 1/2 NPT conduit entry nipples<br>Brass M20x1,5 / 1/2 NPT, Exd approved (ND9200)            |
| <b>CE19</b>           | 1/2 NPT conduit entry nipples<br>Stainless Steel M20x1.5 / 1/2 NPT, Exd approved (ND 9300) |

| CABLE GLANDS |                                                                                    |
|--------------|------------------------------------------------------------------------------------|
|              | Not to be used together with conduit entry nipples (CE_) or connection plugs (P_). |
| <b>CG5</b>   | M20x1.5 grey/plastic, IP66                                                         |
| <b>CG6</b>   | M20x1.5 blue/plastic, IP66, Ex e                                                   |
| <b>CG42</b>  | G 1/2 Conduit entry and Cable entry adapter, JIS approved (ND9200H)                |
| <b>CG41</b>  | 1/2 NPT Conduit entry and Cable entry adapter, JIS approved (ND9200H)              |

| PRESSURE GAUGES AND CONNECTION BLOCKS |                                                                                                                                                                                                                                                                                                                     |
|---------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>A1</b>                             | Pressure gauges, scale bar/psi/kPa, basic material brass, nickel plated, housing stainless steel, glycerine filled. Temperature range -40 °C...+85 °C / -40 °C...+185 °F. Pneumatic connection block, material AISi1Mg, anodized grey. Connections G1/4 (S, C1, C2).                                                |
| <b>A3</b>                             | Pressure gauges, scale bar/psi/kPa, basic material brass, nickel plated, housing stainless steel, glycerine filled. Temperature range -40 °C...+85 °C / -40 °C...+185 °F. Pneumatic connection block, material AISi1Mg, anodized grey. Connections 1/4 NPT (S, C1, C2), converts also ND91_ connections to 1/4 NPT. |
| <b>A5</b>                             | Pneumatic connection block, converts ND91_ connections to 1/4 NPT. Material AISi1Mg, anodized grey. Connections 1/4 NPT (S, C1, C2). Only for ND9100.                                                                                                                                                               |
| <b>A6</b>                             | Pressure gauges with connections G1/4. Material AISI 316. Only for ND9100 and ND9400                                                                                                                                                                                                                                |
| <b>A7</b>                             | Pressure gauges with connections 1/4 NPT. Material AISI 316. Only for ND9100 and ND9400                                                                                                                                                                                                                             |
| <b>A10</b>                            | Pressure gauges with connections 1/4 NPT for ND9300 or ND9400 AISI 316, pressure gauges for severe off-shore use, safety glass window.                                                                                                                                                                              |

| CONNECTION PLUGS |                                                                                                                                                                                                       |
|------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|                  | Not to be used together with conduit entry nipples (CE_) or cableglands (CG_).                                                                                                                        |
| <b>P1H</b>       | ND9000H (HART):<br>Connection plug according to M20x1.5 / DIN 43650A (ISO 4400).<br><br>Not applicable with 5.sign "F" and "P".                                                                       |
| <b>P4H</b>       | Valve controller and limit switch with connection plugs (1 + 1 pc) ND9000 (HART): M20x1.5 / DIN 43650A (ISO 4400).<br>ND9000/K00 or 2 wire ND9100/I00.<br><br>Not applicable with 5.sign "F" and "P". |
| <b>P2F</b>       | ND9000F and ND9000F/B06 (FOUNDATION fieldbus):<br>Connection plug male eurofast, Turck FSV49, M20x1.5 / M12.<br><br>Not applicable with 5.sign "H" and "P".                                           |
| <b>P3F</b>       | ND9000F and ND9000F/B06 (FOUNDATION fieldbus):<br>Connection plug male minifast, Turck RSFV49, M20x1.5 / 7/8".<br><br>Not applicable with 5.sign "H" and "P".                                         |
| <b>P2P</b>       | ND9000P and ND9000P/B06 (Profibus PA): Connection plug male, Weidmuller 842593, M20x1.5 / M12.<br><br>Not applicable with 5.sign "H" and "F".                                                         |
| <b>P3P</b>       | ND9000P and ND9000P/B06 (Profibus PA):<br>Connection plug male minifast, Turck RSFV48, M20x1.5 / 7/8".<br><br>Not applicable with 5.sign "H" and "F".                                                 |

| DRIVER SETS |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                |
|-------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|             | Driver sets including the needed parts when assembling ND9000 on rotary actuators with VDI/VDE 3845 attachment face, Neles E series actuators or Neles standard mounting faces. Select the correct driver set according to the actuator and the pneumatic connections of valve controller or gauge block when applicable. Note! Earlier the DS04 was delivered with bareshaft positioners as default. This practice is no longer valid, the needed driver set must be ordered as an accessory. |
| <b>DS01</b> | Driver set for ND7100 / ND9100 / ND9400 on actuators with VDI/VDE3845 attachment face.<br>Set includes the G1/4 plug for single acting actuators. The driver set should also be applied with all ND7/9 with gauge blocks A1, A2 or A6.                                                                                                                                                                                                                                                         |
| <b>DS02</b> | Driver set for ND72/92/93 on actuators with VDI/VDE 3845 attachment face.<br>Set includes the 1/4NPT plug for single acting actuators. The driver set should also be applied with all ND with gauge blocks A3, A5, A7 or A10.                                                                                                                                                                                                                                                                  |
| <b>DS04</b> | General driver set for ND71/72/91/92/94/93 on actuators with VDI/VDE 3845, Neles E-series actuators and Neles standard attachment face (e.g. when replacing NE/NP7 or ND800 with S2 shaft). Earlier default driver set.<br><br>Includes 1/8NPT, 1/4NPT and G1/4 plugs when used with single acting actuators or flush mounted on E-series actuators.                                                                                                                                           |

| 3RD PARTY MOUNTING SETS |                                                                                                                                                                                                                                                        |
|-------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|                         | Mounting sets between the ND9000 generation valve controllers and linear actuators, including bracket and ball joint based feedback system.<br><b>Note!</b> Sets are including the 1/4" pneumatic plugs needed when used with single acting actuators. |
| <b>MS01</b>             | Mounting set for linear actuators, attachment face according to IEC 60534-6, stroke length 10-55 mm. (H116240)                                                                                                                                         |
| <b>MS02</b>             | Mounting set for linear actuators, attachment face according to IEC 60534-6, stroke length 55-120 mm. (H120404)                                                                                                                                        |
| <b>MS03</b>             | Mounting set for Masoneilan 87/88 actuators, sizes 6...23. Stroke length 12-64 mm. (H120809)                                                                                                                                                           |

| Remote mounting accessories |           |                                                                    |
|-----------------------------|-----------|--------------------------------------------------------------------|
|                             | ID code   | Description                                                        |
| <b>RR01</b>                 | MA0054129 | ND remote mount rotary sensor QN5OK05HDM-MET77                     |
| <b>RC01</b>                 | H126144   | Cable assembly remote mount sensor cable 1.2 m, straight connector |
| <b>RC02</b>                 | H126145   | Cable assembly remote mount sensor cable 3.0 m, angle connector    |
| <b>RC03</b>                 | H127093   | Cable assembly remote mount sensor cable 30 m, angle connector     |

---

**Metso Flow Control Inc.**

**Europe,** Vanha Porvoontie 229, P.O. Box 304, FI-01301 Vantaa, Finland. Tel. +358 20 483 150. Fax +358 20 483 151

**North America,** 44 Bowditch Drive, P.O. Box 8044, Shrewsbury, M A 01545, USA. Tel. +1 508 852 0200. Fax +1 508 852 8172

**South America, Av.** Independência, 2500-Iporanga, 18087-101, Sorocaba-São Paulo, Brazil. Tel. +55 15 2102 9700. Fax +55 15 2102 9748

**Asia Pacific,** 238B Thomson Road, #17-01 Novena Square Tower B, Singapore 307685. Tel. +65 6511 1011. Fax +65 6250 0830

**China,** 11/F, China Youth Plaza, No.19 North Rd of East 3rd Ring Rd, Chaoyang District, Beijing 100020, China. Tel. +86 10 6566 6600. Fax +86 10 6566 2583

**Middle East,** Roundabout 8, Unit AB-07, P.O. Box 17175, Jebel Ali Freezone, Dubai, United Arab Emirates. Tel. +971 4 883 6974. Fax +971 4 883 6836

[www.metso.com/valves](http://www.metso.com/valves)

